

Geneva 8 and 10 Light Chandelier

CC1378, CC16810 1.0

GENERATION LIGHTING CHANDELIER

GENERAL PRODUCT INFORMATION:


These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

This instruction shows a typical installation.


CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

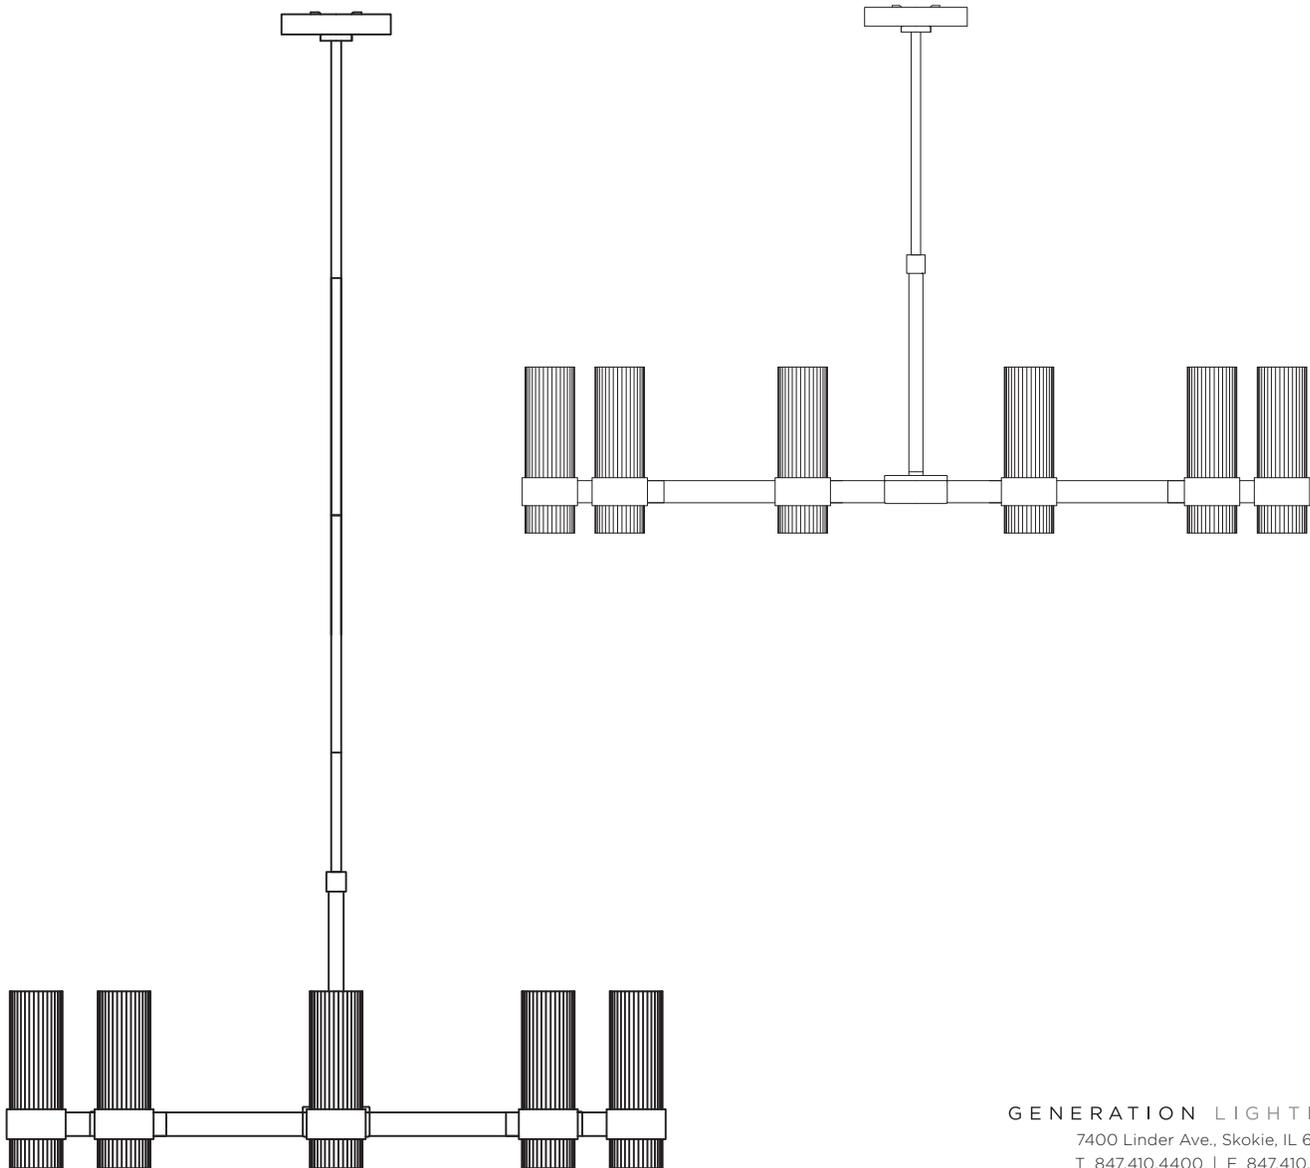

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

Install the Fixture

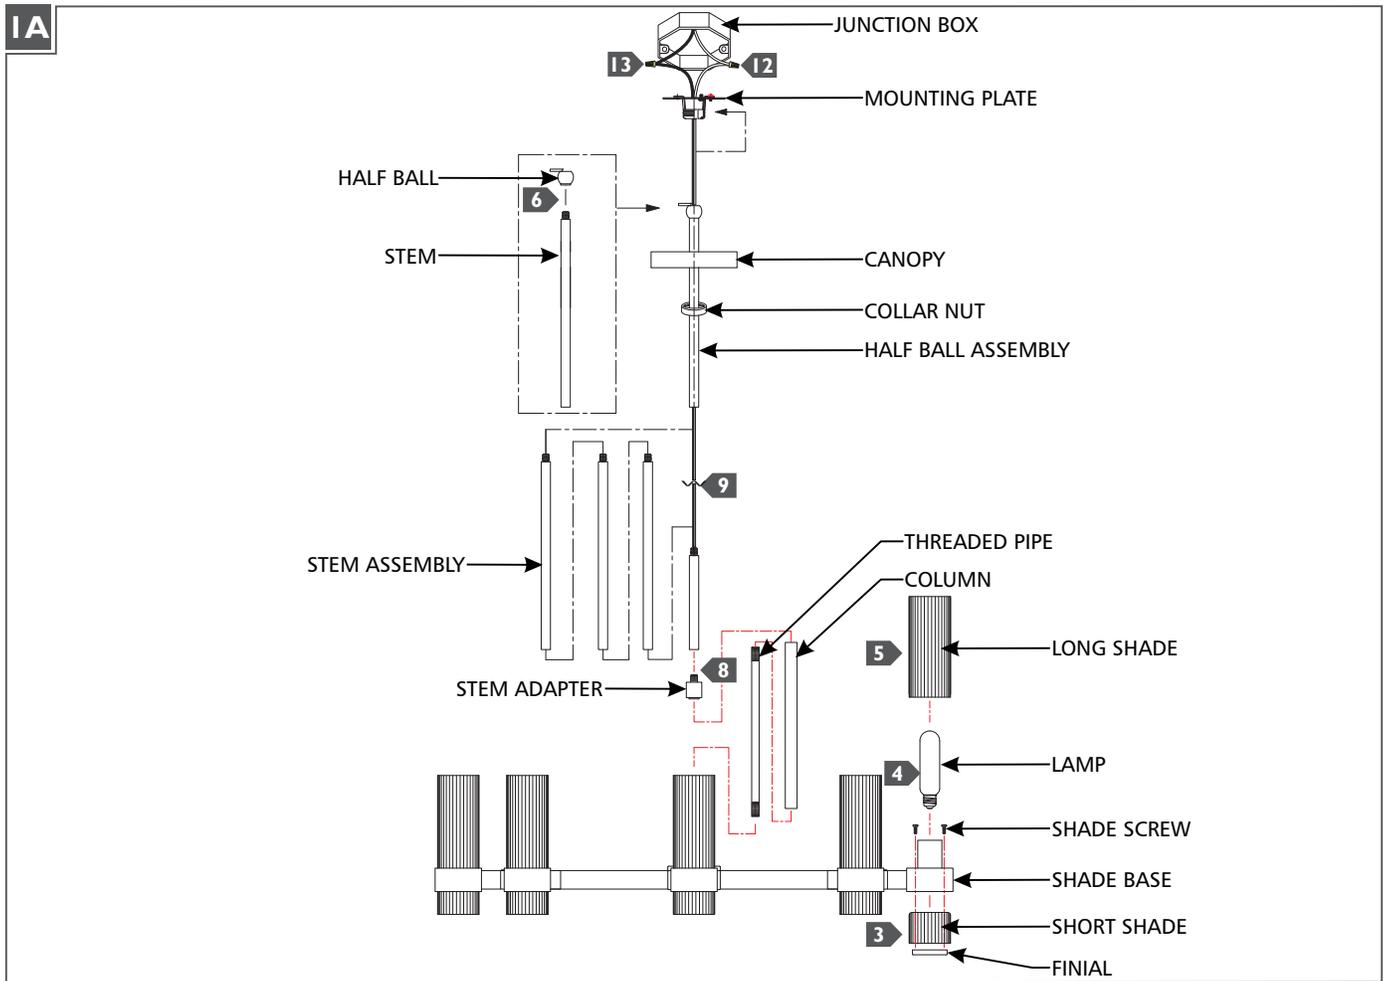

- 1** Feed the fixture wires through the threaded pipe, then screw it onto the fixture.
- 2** Feed the fixtures wire through the column and stem adapter, then slide the column onto the threaded pipe and screw the stem adapter onto the pipe to secure in place.
- 3** Install the short shade to the bottom of the shade base followed by the finial, then secure in place using the shade screws. Repeat for remaining short shades.
- 4** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 5** Install the long shade by placing it over the lamp and into the shade base. Repeat for remaining long shades.
- 6** Screw the half ball to the stem which will be on top.
- 7** Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together.
- 8** Feed the fixture wires through the stem assembly, then screw the stem assembly to the stem adapter.
- 9** Feed the fixture wires through the collar nut, canopy, and the half ball assembly, then screw it onto the stem assembly.
- 10** Align and secure the mounting plate to the junction box, then slide the half ball assembly onto the mounting plate.
- 11** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 12** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the mounting plate.