

Geneva Pendant

CP1161, CP1171 1.0

GENERATION LIGHTING PENDANT

GENERAL PRODUCT INFORMATION:


These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

This instruction shows a typical installation.

CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.


SAVE THESE INSTRUCTIONS!

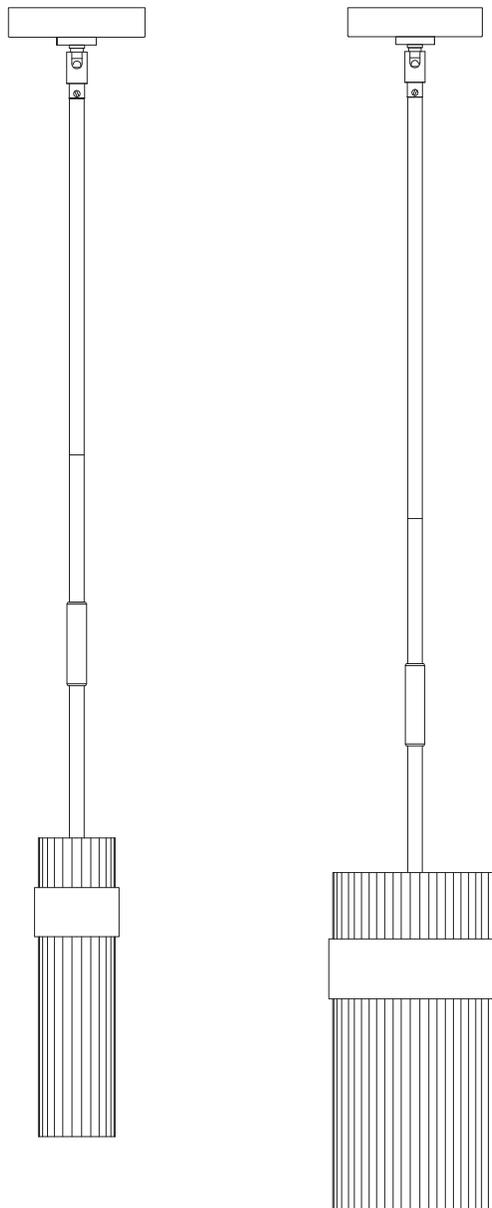

GENERATION LIGHTING
7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.generationlighting.com

Install the Fixture

IA

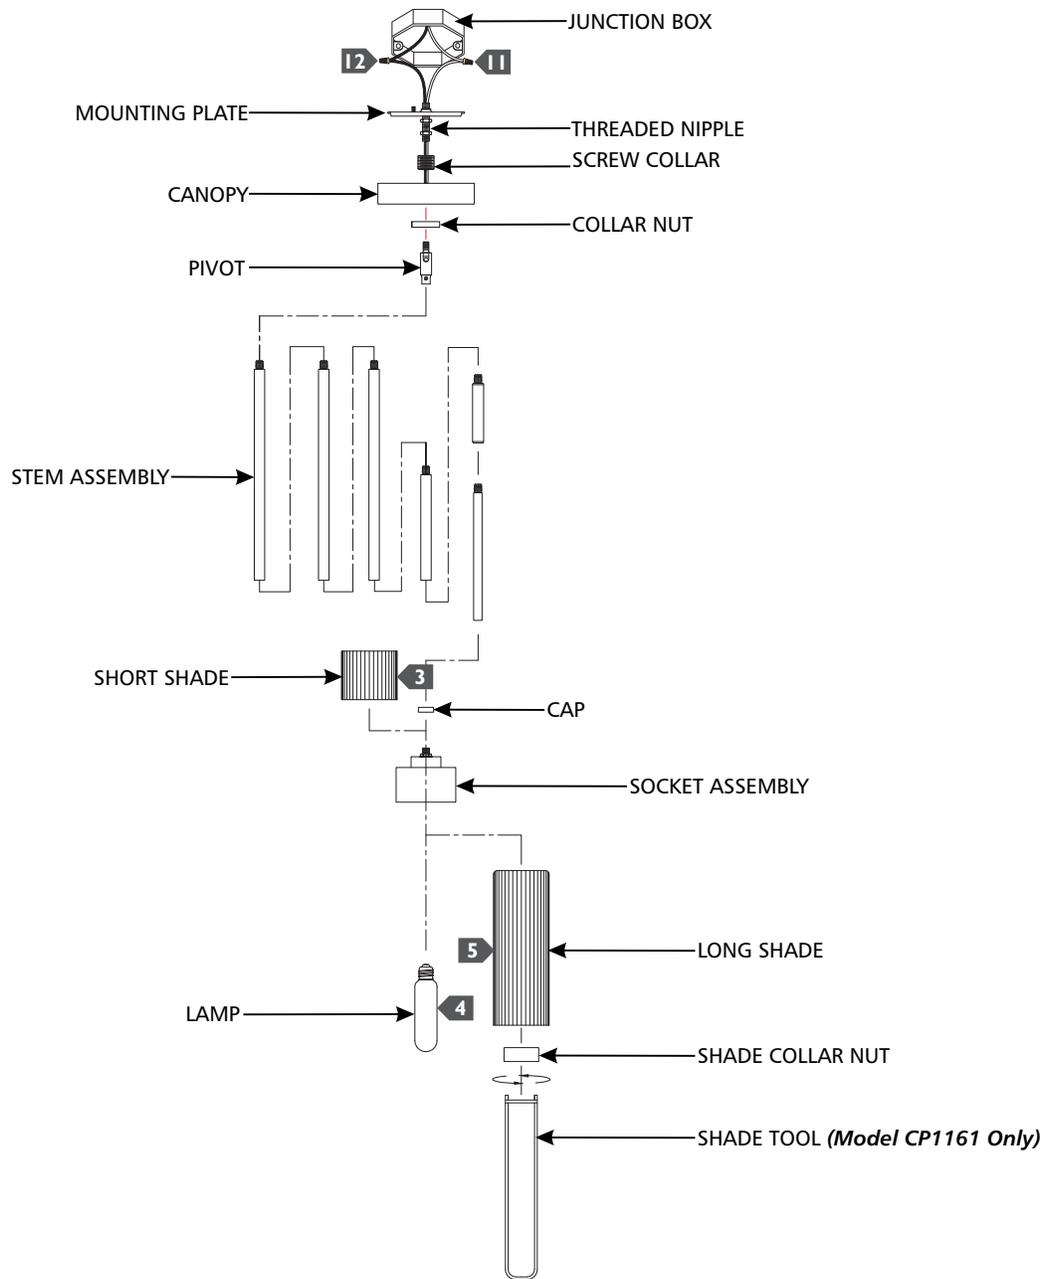

- 1 If necessary, screw the short end of the threaded nipple tightly onto the mounting plate.
- 2 Determine the wanted height or look of the fixture with the provided stems and swivel, then assemble them by screwing them together.
- 3 Feed the fixture wires through the short shade, cap, and stem assembly, then secure in place by screwing the stem assembly onto the socket assembly.
- 4 Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- 5 Place the long shade onto the socket and secure in place by screwing the shade collar nut onto the socket. **NOTE: For model CP1161 only, use provided shade tool to install collar nut onto socket.**
- 6 Unscrew the collar nut off the screw collar and place it onto the stem followed by the canopy.
- 7 Screw the screw collar onto the threaded nipple.
- 8 Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem assembly.
- 9 Align and secure the mounting plate to the junction box.
- 10 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 11 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 12 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 13 Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.