


MOE'S




Assembly Instructions

Joan Queen Storage Bed Light Taupe
RN-1150-39-0

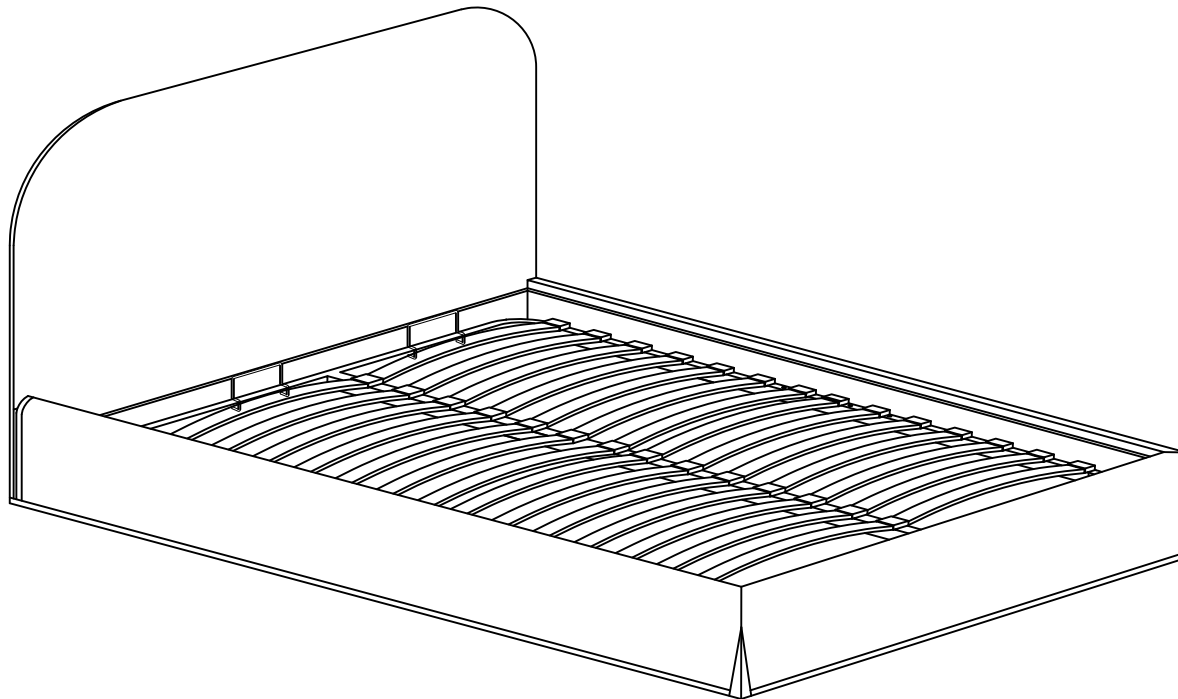

THANK YOU FOR YOUR PURCHASE!

Parts and Hardware

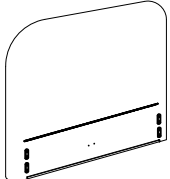
	
① Headboard=1pc	② Right Side Rail=1pc
	
③ Left Side Rail=1pc	④ Footboard=1pc
	
⑤ Feet=4pcs	⑥ Screws(m4*25mm)=4pcs
	
⑦ Bolts (M8*25mm)=12pcs	⑧ Allen Key=1pc (m5)
	
⑨ Brackets=6pcs	⑩ Stick Felts=6pcs

Notes

Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.


CAUTION: The item is heavy, assembly should be performed by two people.

Step 1



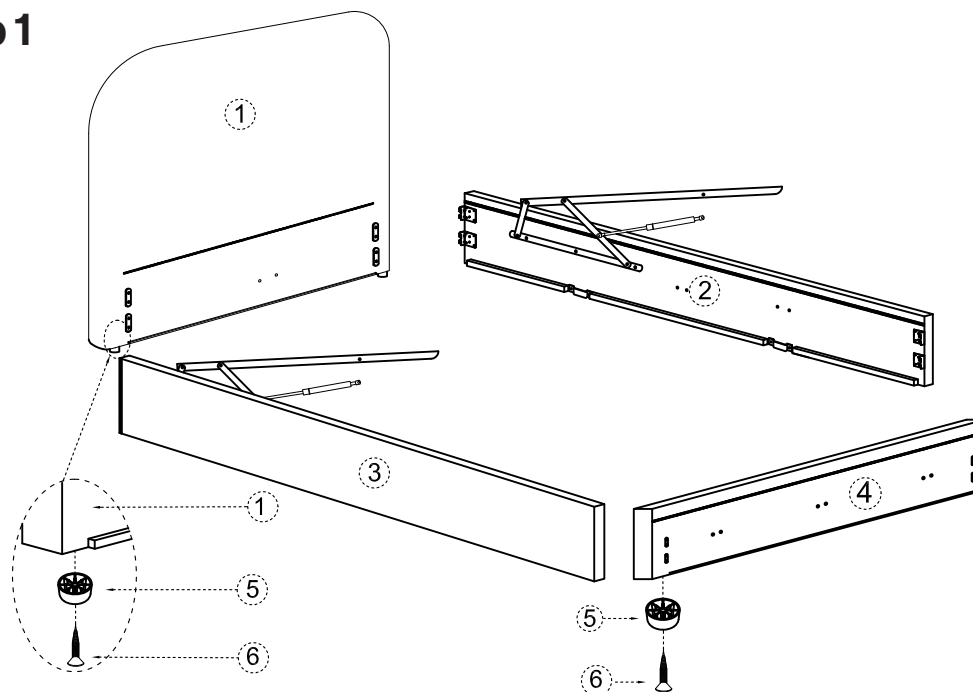


Step 2

All the brackets must be this way "UP", do not install upside down.

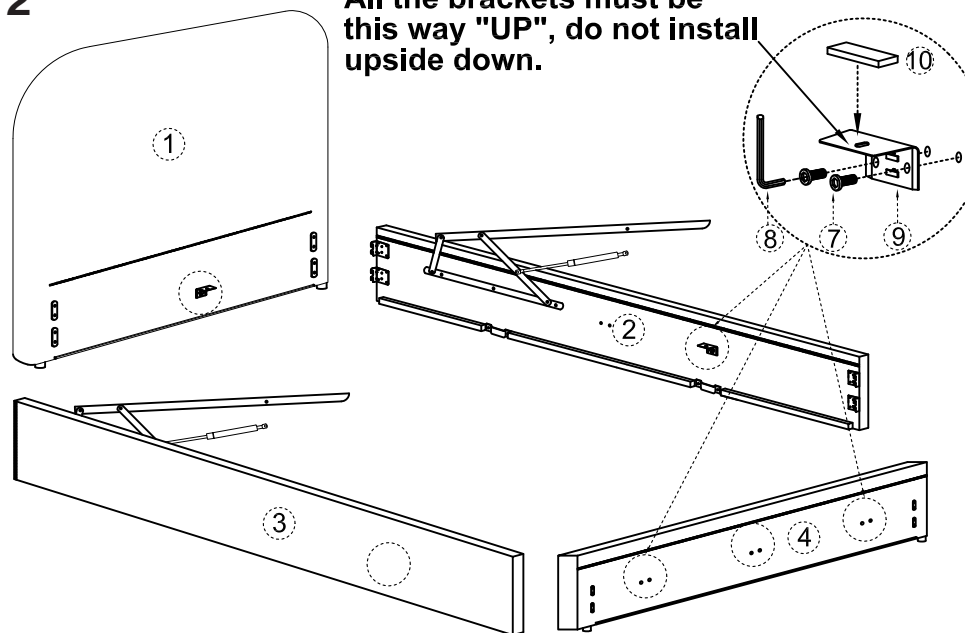

Parts and Hardware

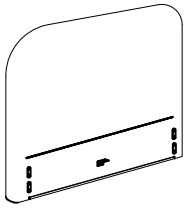
	
① Headboard=1pc	② Right Side Rail=1pc
	
③ Left Side Rail=1pc	④ Footboard=1pc
 (m5) ⑧ Allen Key=1pc	 ⑪ Gold Bolts (M8*18mm) =16pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 3

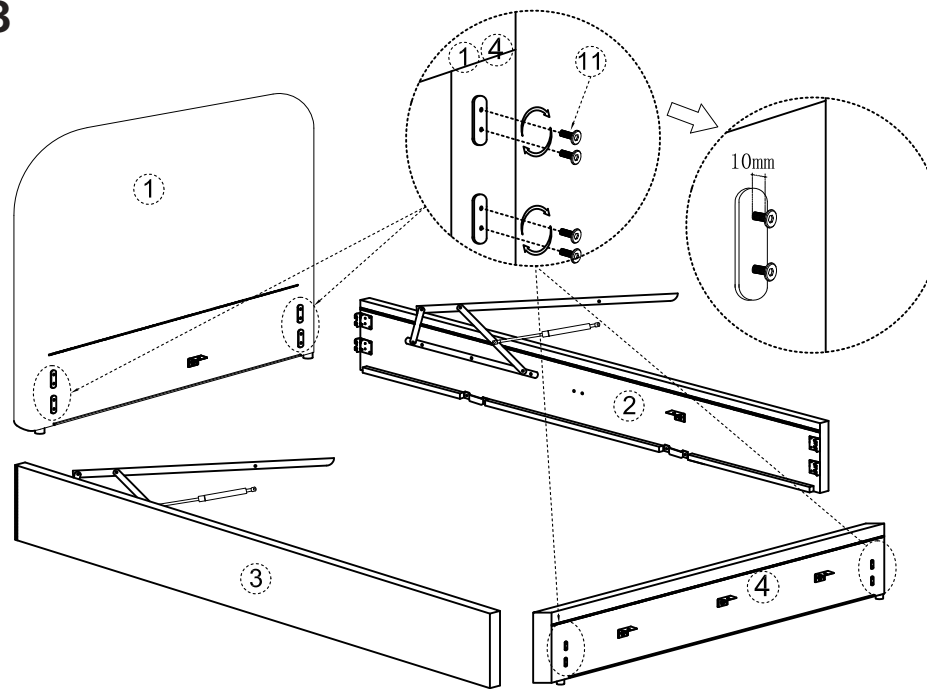

Step 4

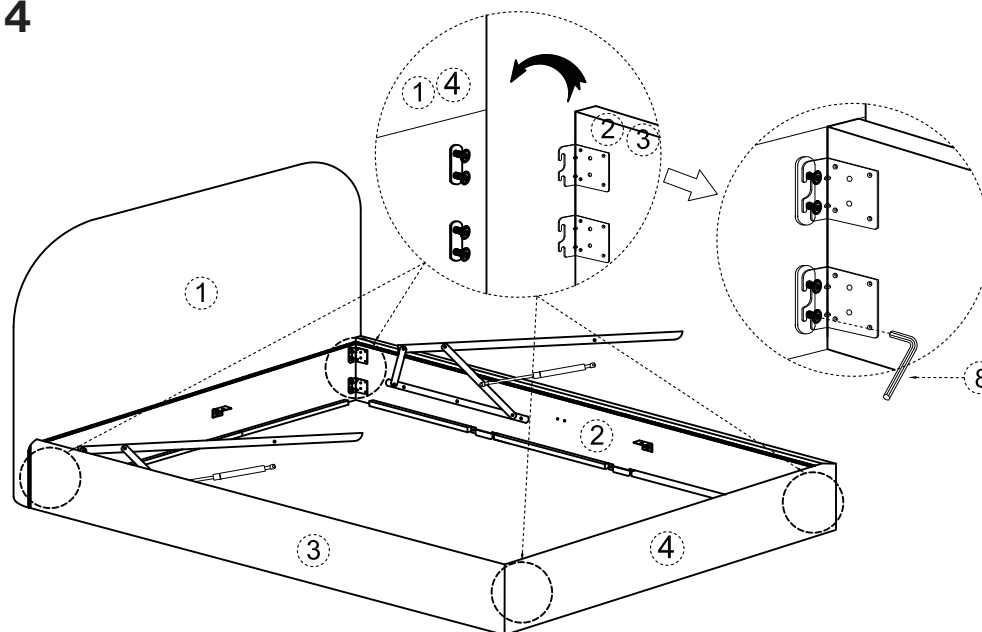

Parts and Hardware


 ⑤ Feet=2pcs	 ⑥ Screws(m4*25mm) =2pcs
 ⑫ Centre Supporter Rails =2pcs	 ⑬ Baseboards =4pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.




Step 5

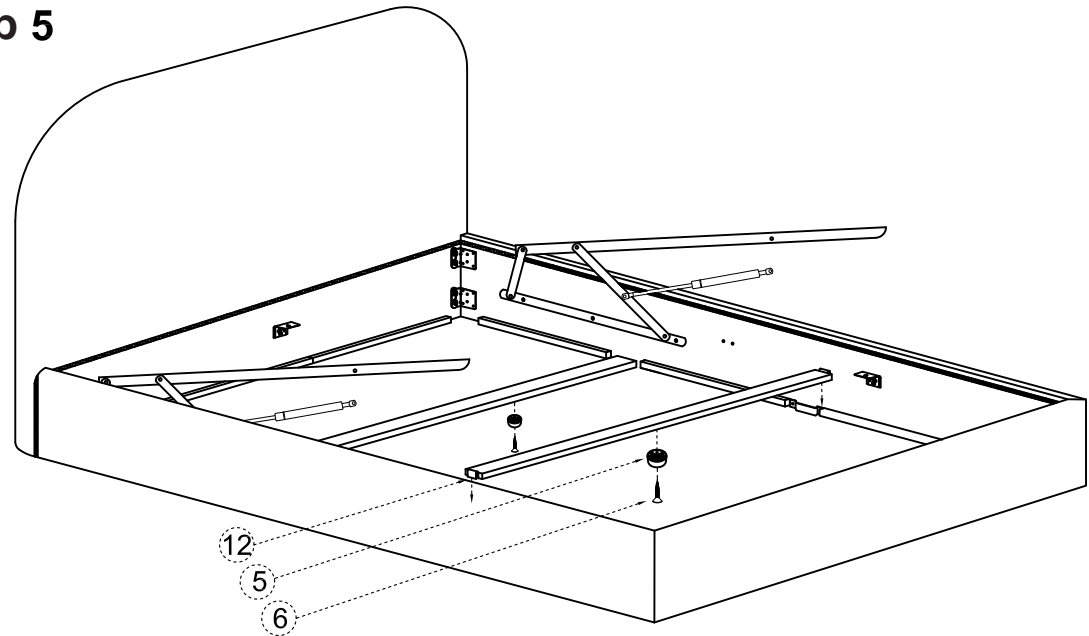

Step 6

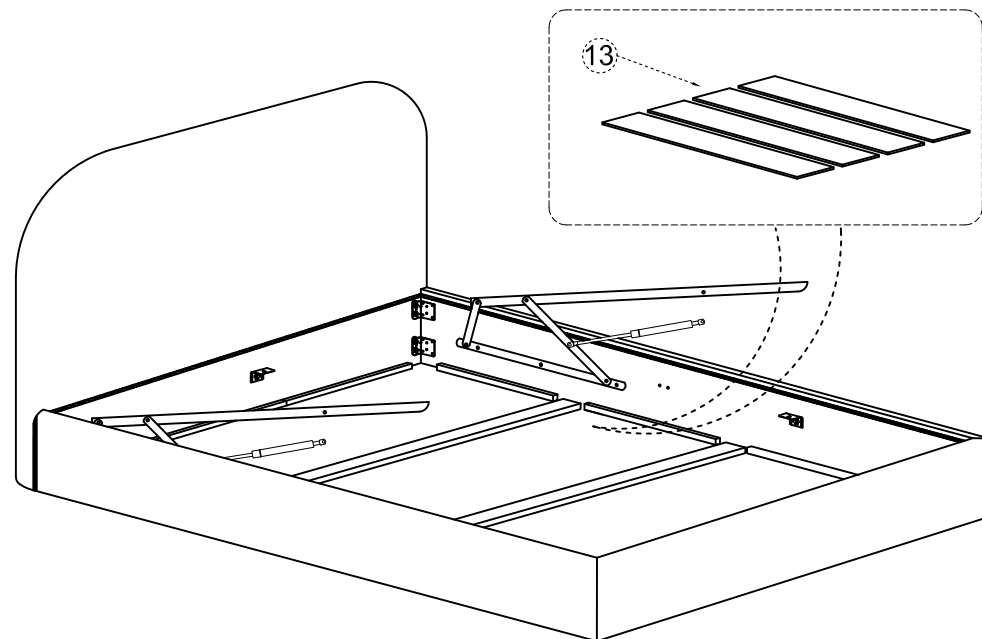

Parts and Hardware

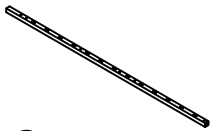
 ⑭ Tube slat frame =2pcs	 ⑮ Tube slat frame =2pcs
 ⑯ Connect for slat frame =4pcs	 ⑰ Metal cross rail =1pc
 ⑱ Screws(m5*40mm) =4pcs	 ⑩ Stick Felts =2pcs

Notes


Thank you for purchasing this quality product!
Be sure to check all packing material carefully
for small part that may have come loose inside
the carton during shipping.

CAUTION: The item is heavy, assembly
should be performed by two people.

Step 7

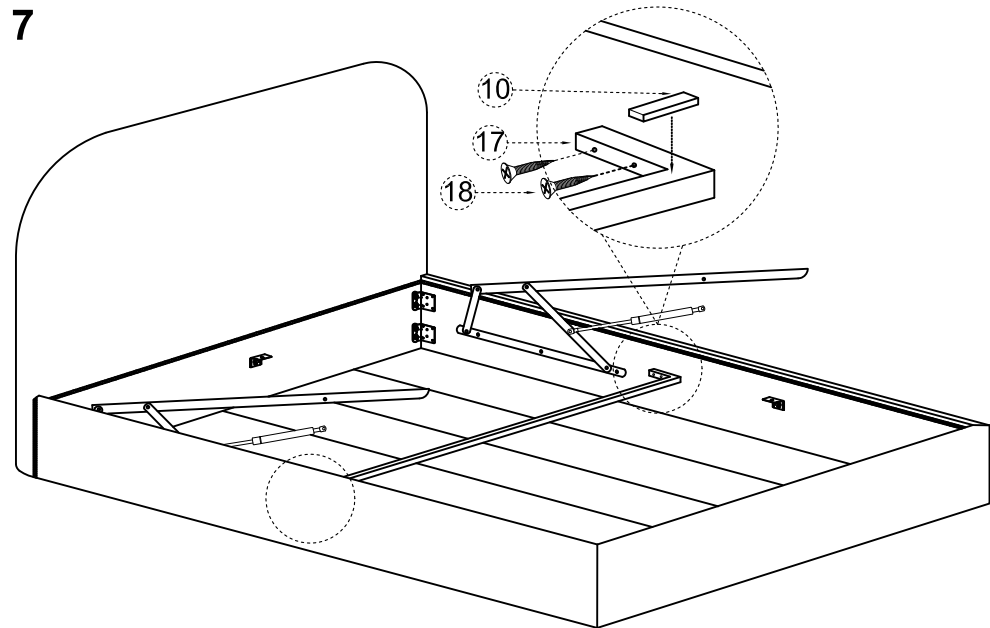

Step 8

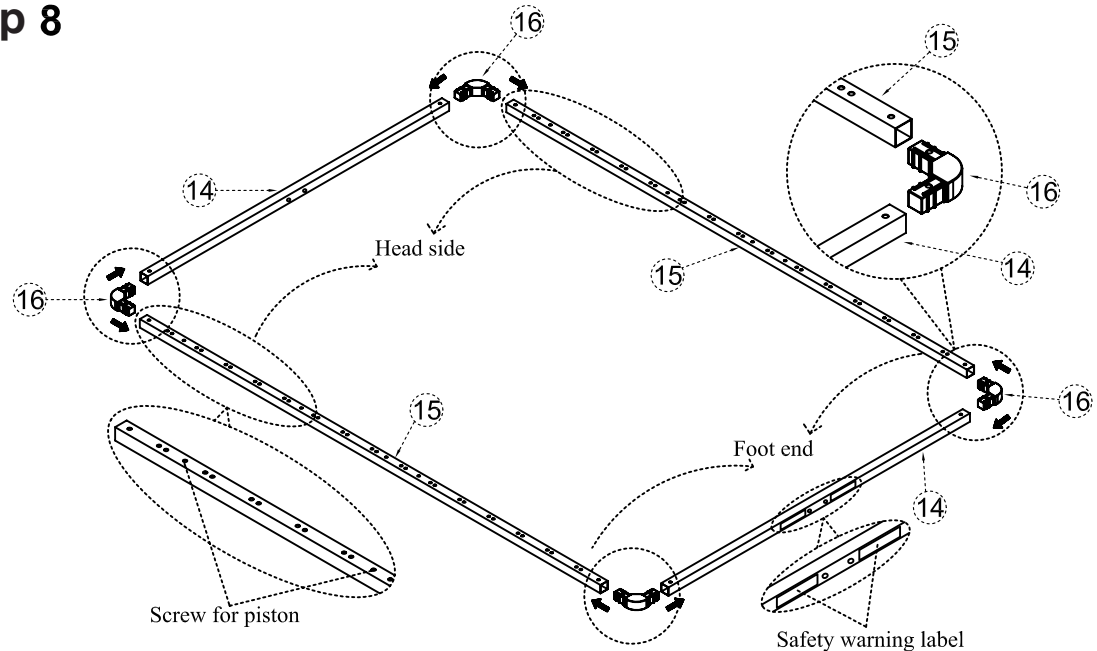

Note: The tube ⑭ with safety warning label should be assembled footend.

