

MOE'S

h o m e c o l l e c t i o n

ASSEMBLY INSTRUCTIONS.





MONET QUEEN BED BLACK

PZ-1001-02



THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

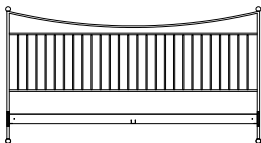
1. HEADBOARD x 1 	2. FOOTBOARD x 1 	
3. SIDE RAILS x 2 	4. CENTER RAIL x 1 	
5. METAL CLIP x 4 	6. ALLEN KEY M5 x 1 	7. ALLEN KEY M4 x 1 
8. ALLEN BOLT M6-12 x 20 	9. ALLEN BOLT M6-25 x 8 	10. BOLT M5-50 x 1 
11. ALLEN BOLT M6-12 x 20 	12. WRENCH 12 x 1 	13. WOODEN SLATS 
14. IRON BAR x 2 		

NOTES.


Thank you for purchasing this quality product!
Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

CAUTION: The item is heavy, assembly should be performed by two people.


STEP 1.

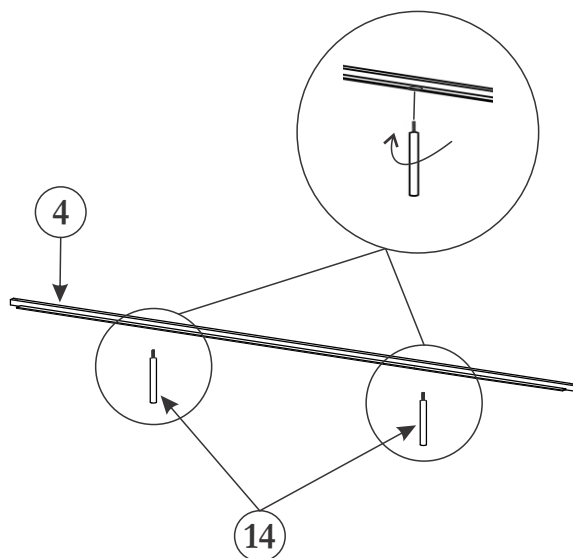


STEP 2.

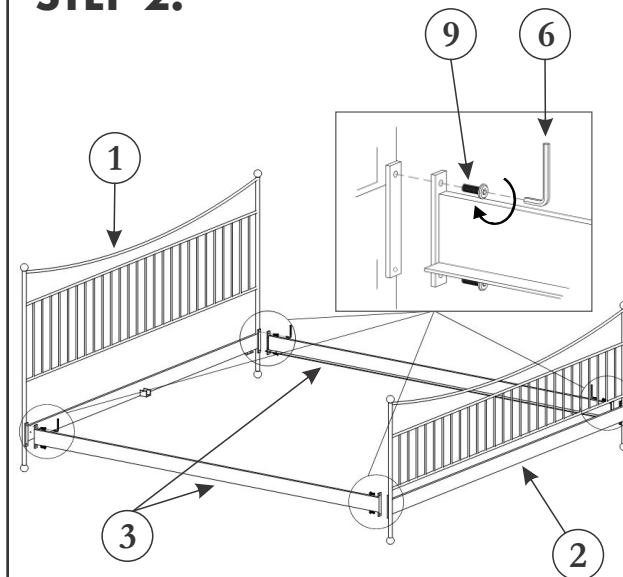


STEP 3.

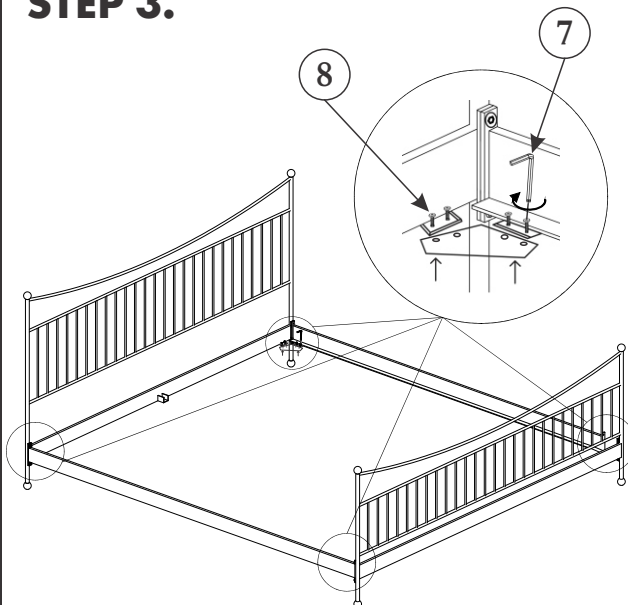


STEP 4.

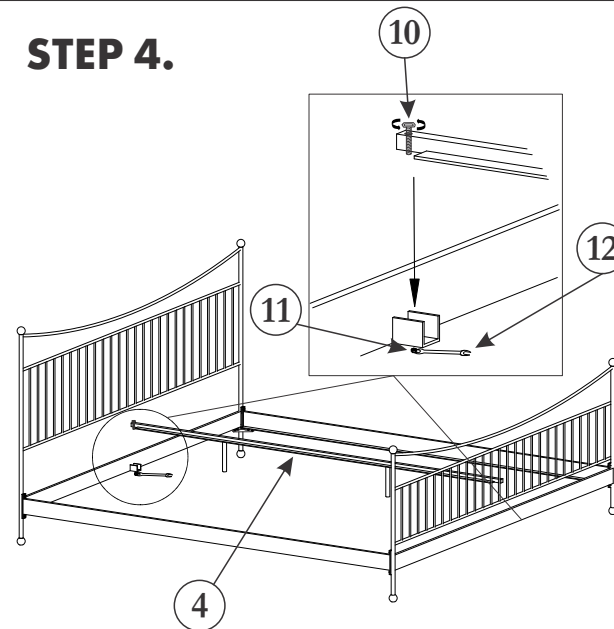

STEP 5.

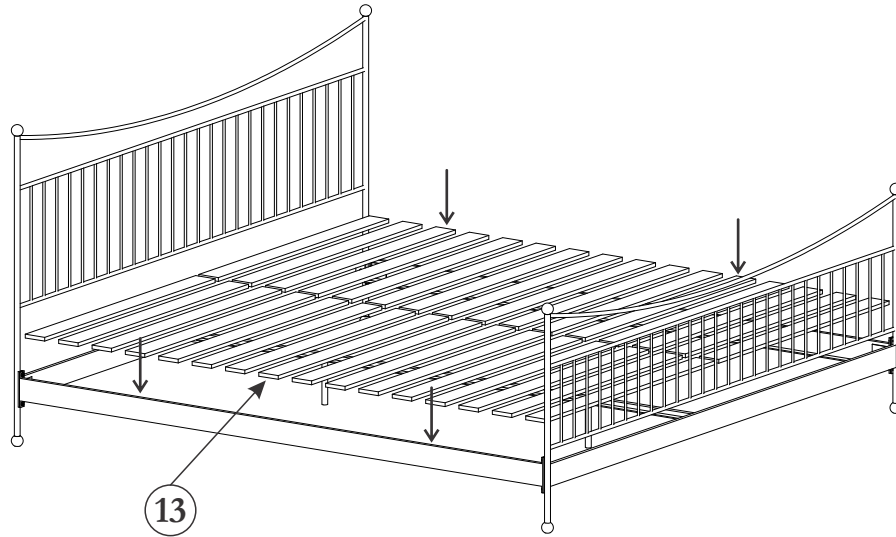

STEP 6.

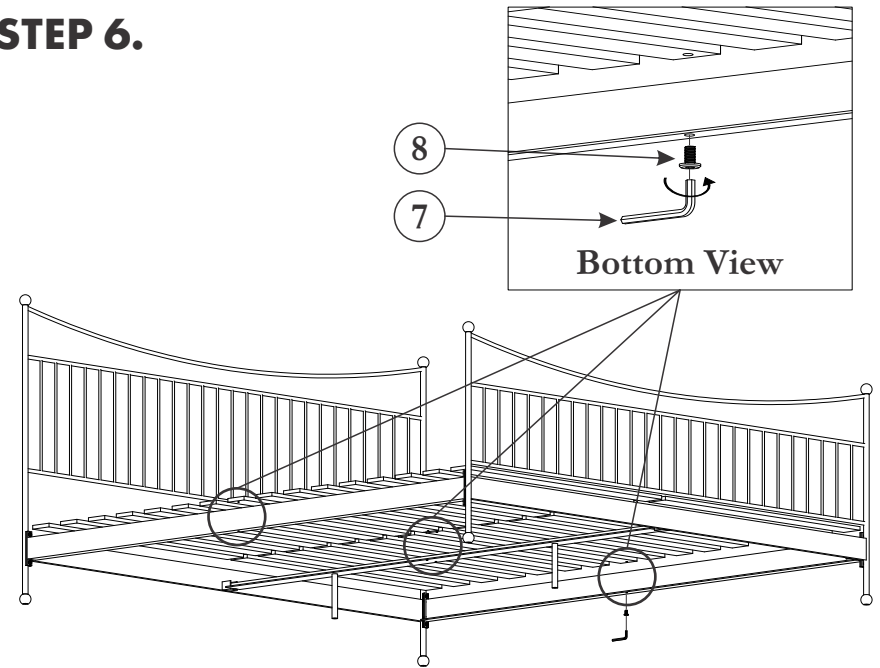

Assembled View

