






## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION

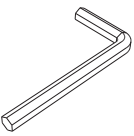

### HARDWARE & TOOL ENCLOSED

|                                                                                   |                                                                                   |                                                                                   |                                                                                   |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
|  |  |  |  |
| JCBC SCREW<br>M6x30mm<br>(8pcs)                                                   | WASHER<br>M6x18mm<br>(8pcs)                                                       | METAL CONNECTOR<br>(2pcs)                                                         | ALLEN KEY                                                                         |

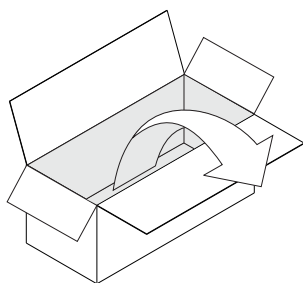


### IN YOUR PACKAGE :

ASSEMBLY INSTRUCTIONS  
HARDWARE (AS LISTED ABOVE)

### PARTS TO BE INSTALLED


1. WOODEN FRAME (1 pc)
2. LEGS (4 pcs)
3. METAL FRAME (2 pcs)
4. BACKREST CUSHION (1 pc)  
(PACKAGED SEPARATELY)
5. SEATING CUSHION (1 pc)  
(PACKAGED SEPARATELY)

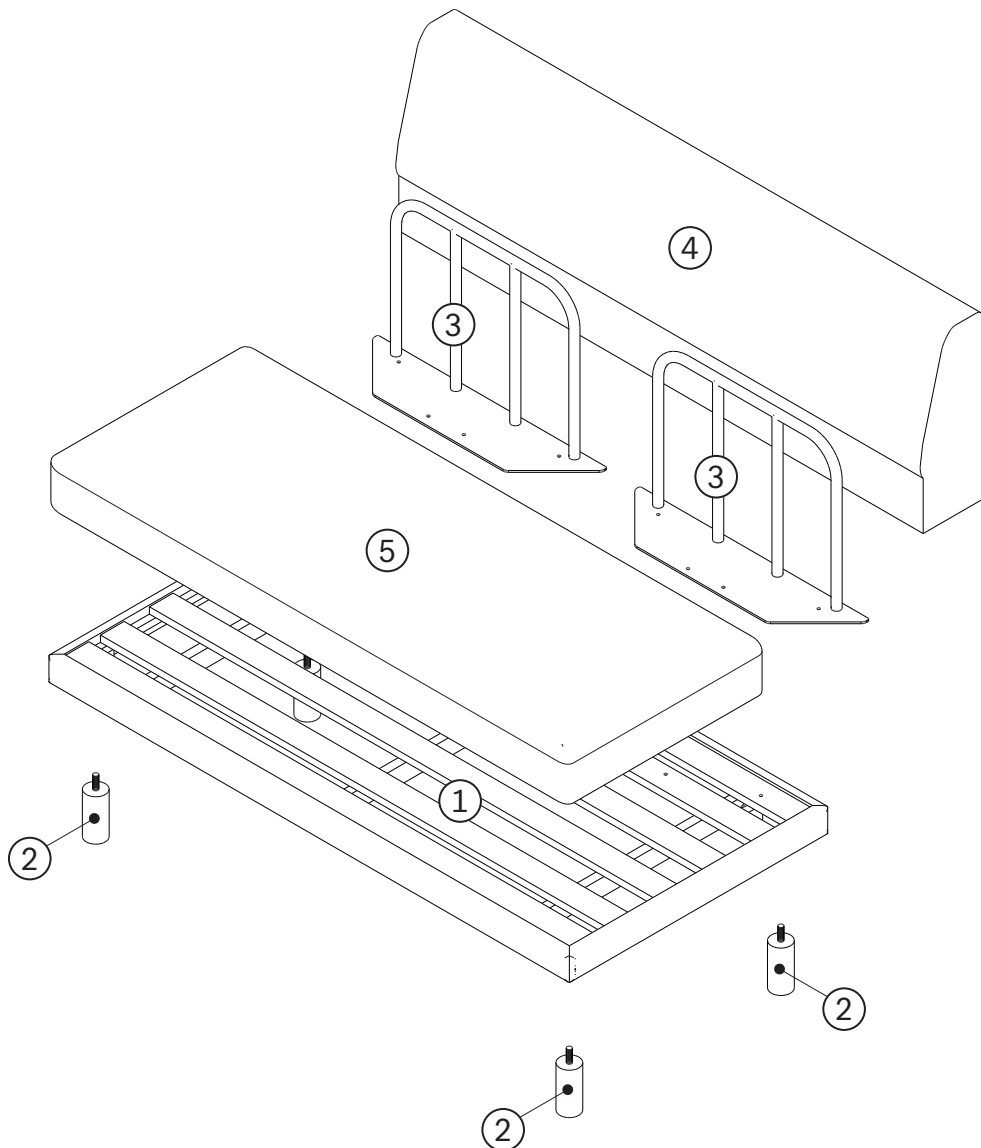

### SYMBOLS




DIRECTION



NUMBER OF  
PERSONS NEEDED




USE HAND

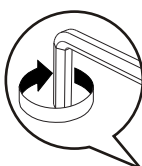

USE ALLEN KEY  
TO TIGHTEN



### NOTICE

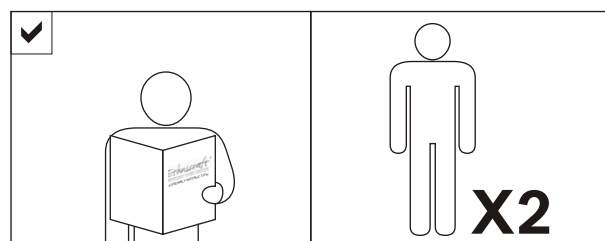

## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION





### A ATTACHING LEGS TO WOODEN FRAME

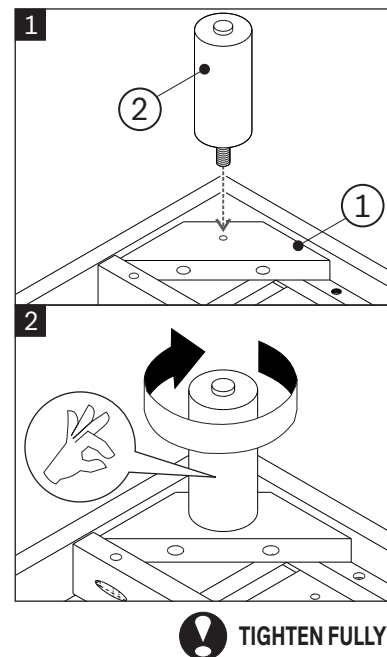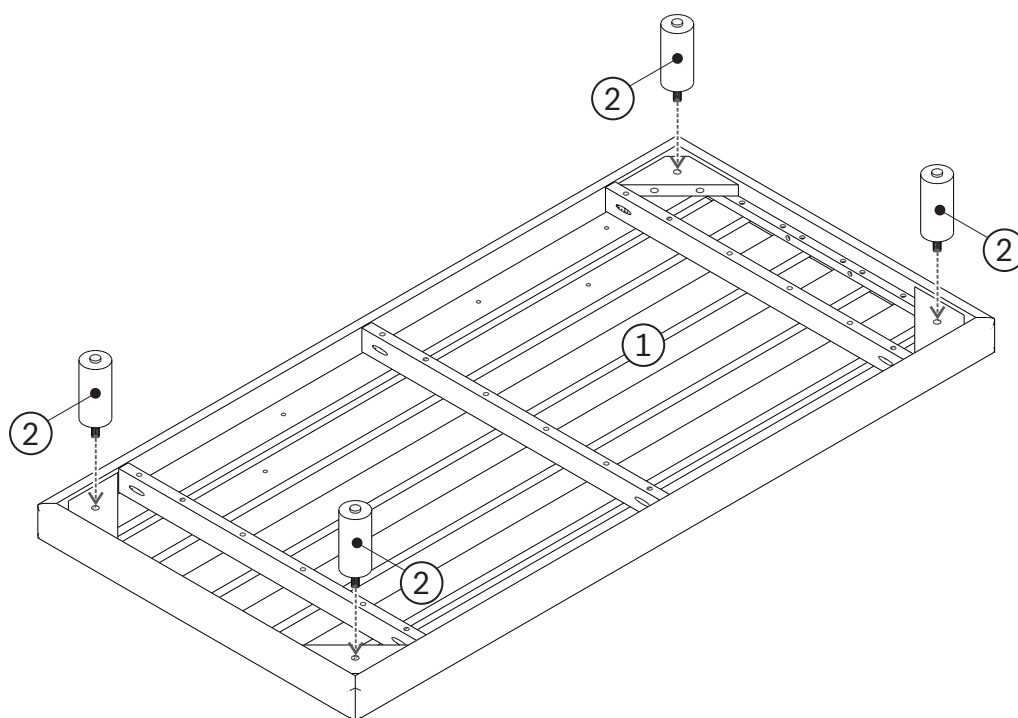

REMOVE CONTENTS TO LAY OUT ON THE FLATTENED CARTON, CARPETED AREA, OR ANOTHER PROTECTIVE SURFACE TO AVOID DAMAGE WHILE ASSEMBLING

### B ATTACHING METAL FRAMES TO WOODEN FRAME

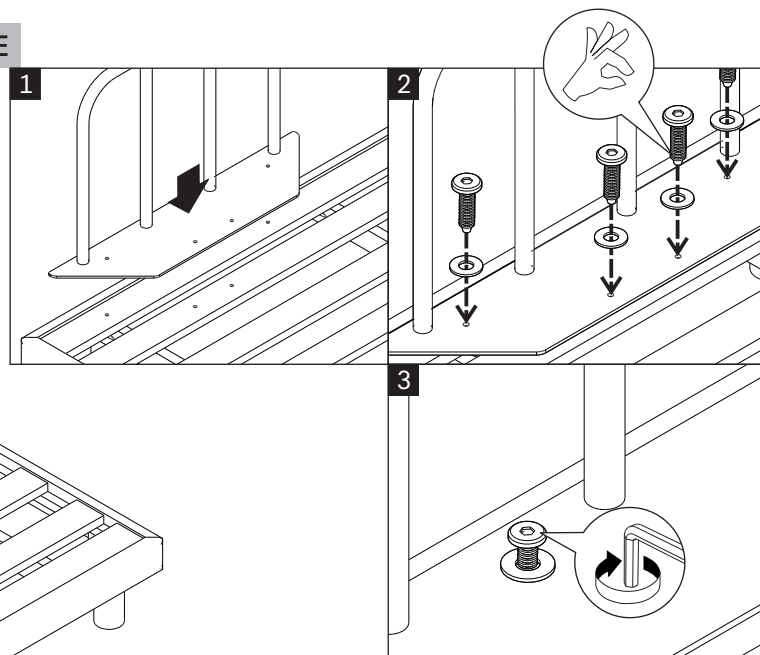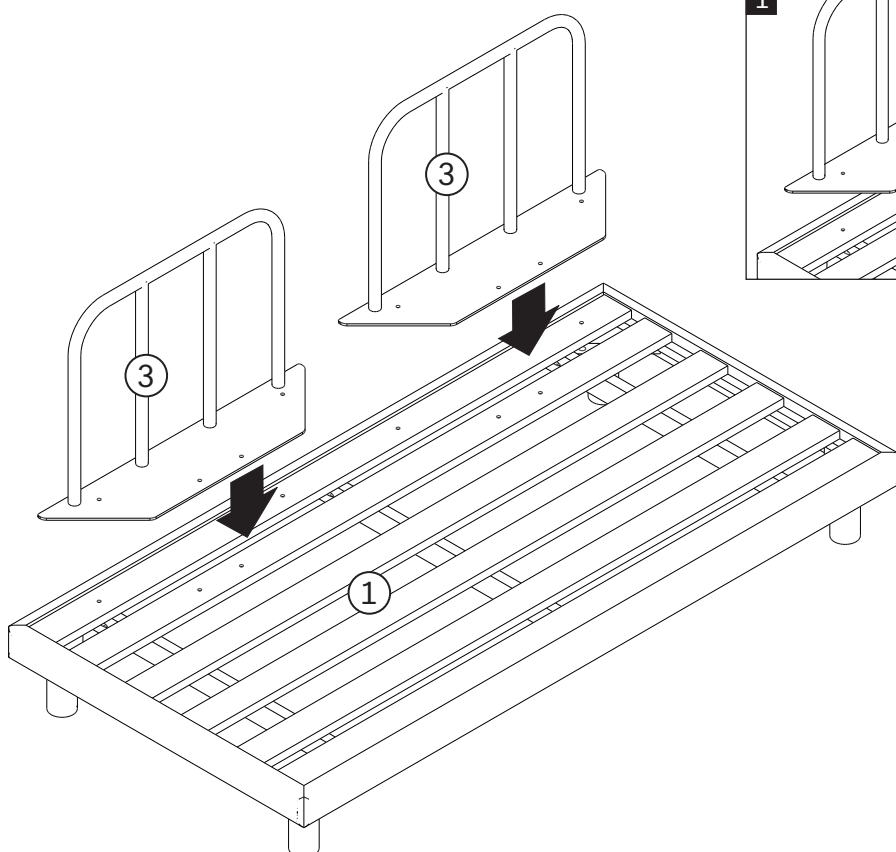


- ALIGN SCREW HOLES FOR CORRECT PLACEMENT
- USE JCBC SCREW M6x30mm (8X)
- USE WASHER M6x18mm (8X)
- TIGHTEN FULLY


## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION



### C ATTACHING BACKREST CUSHIONS TO THE METAL FRAME

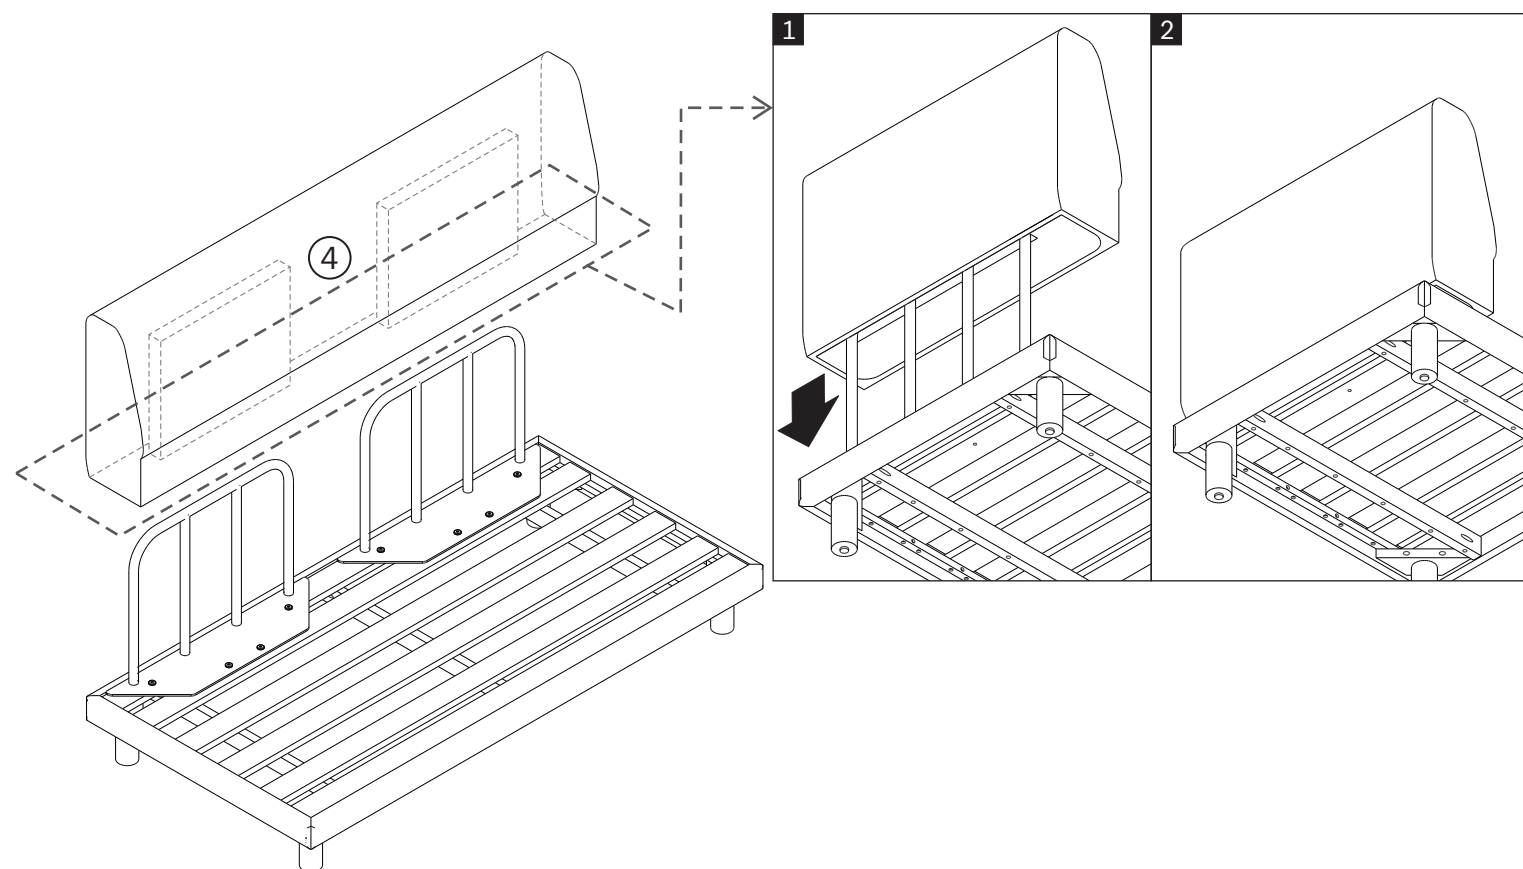






### D ATTACHING SEATING CUSHION

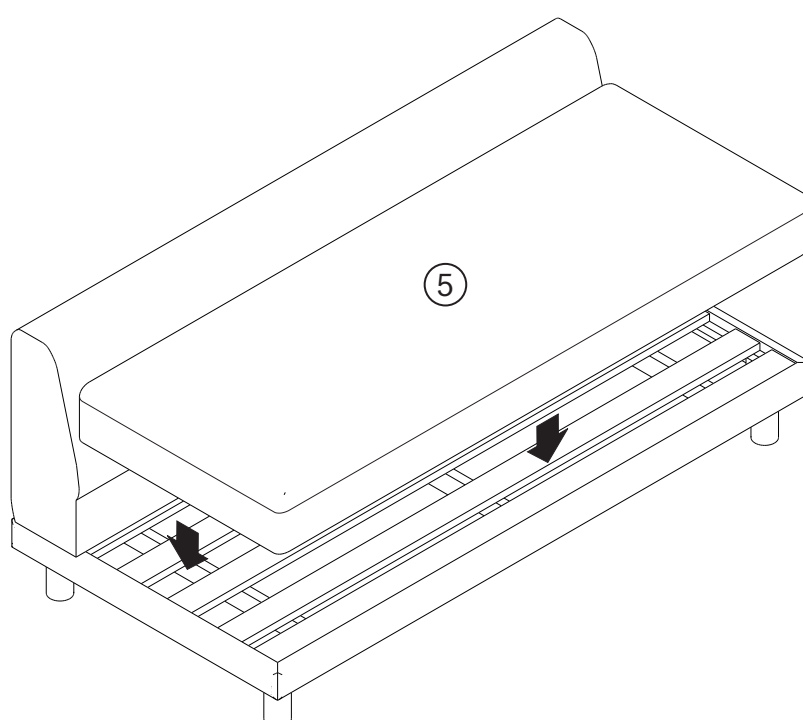

## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION



### E MODIFY THE ADJUSTABLE GLIDES

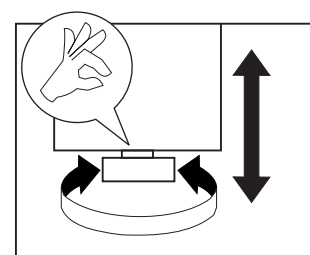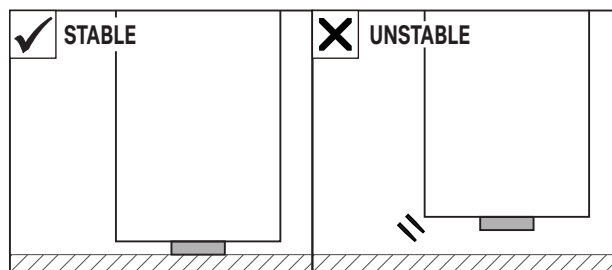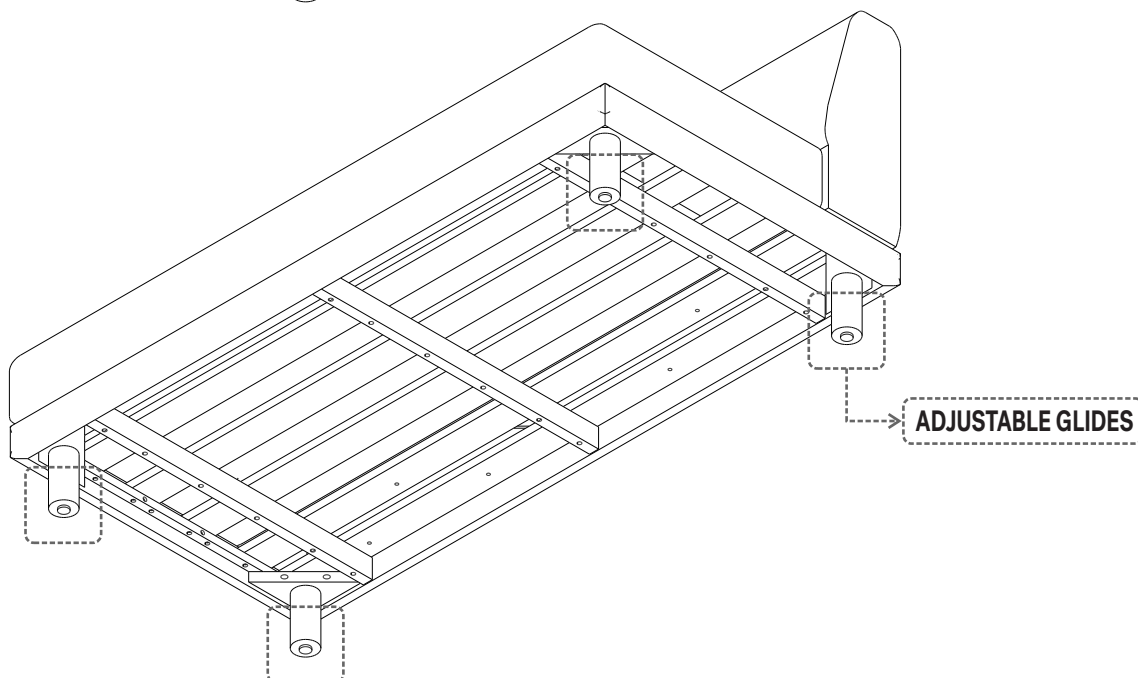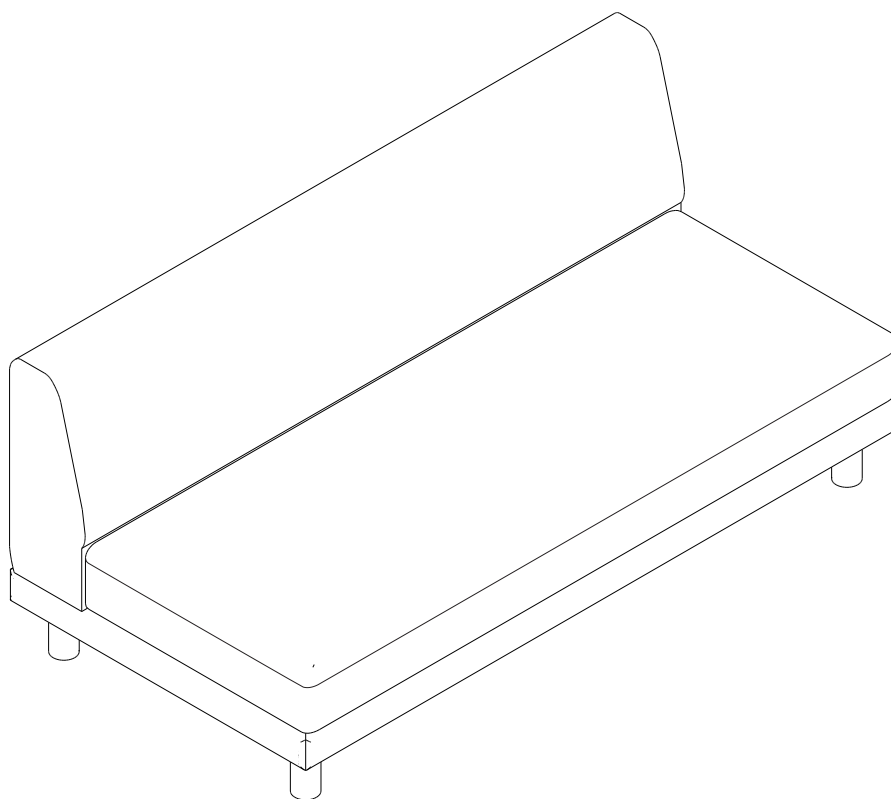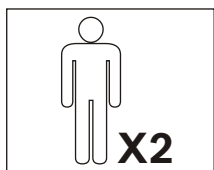



**NOTE :**  
TO ENSURE STABILITY, ALL GLIDES SHOULD BE ADJUSTED  
TO MAKE EVEN CONTACT WITH THE FLOOR.

## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION





### II. REMOVING FABRIC COVERS

#### A REMOVING BACKREST CUSHION COVER

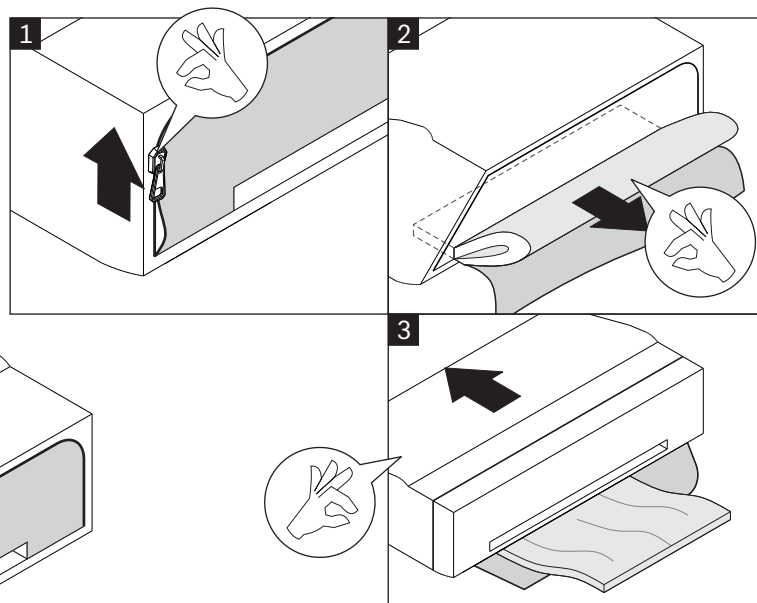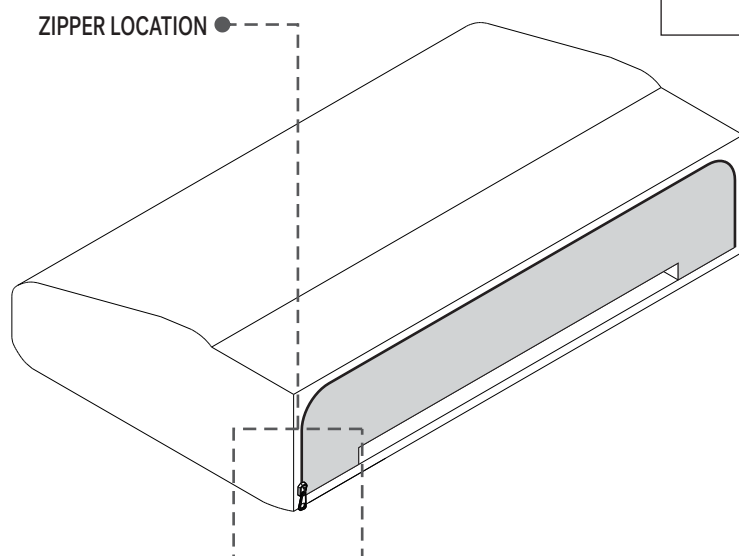

#### B REMOVING SEATING CUSHION COVER

ZIPPER LOCATION ●

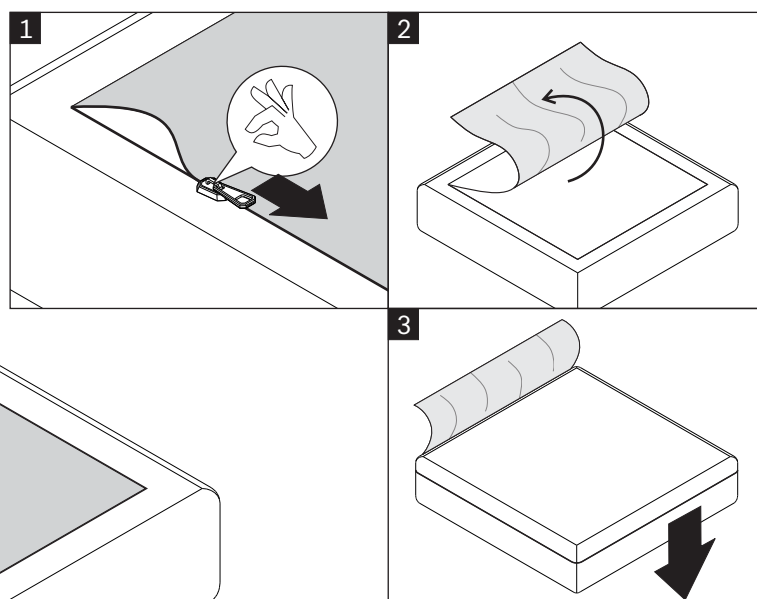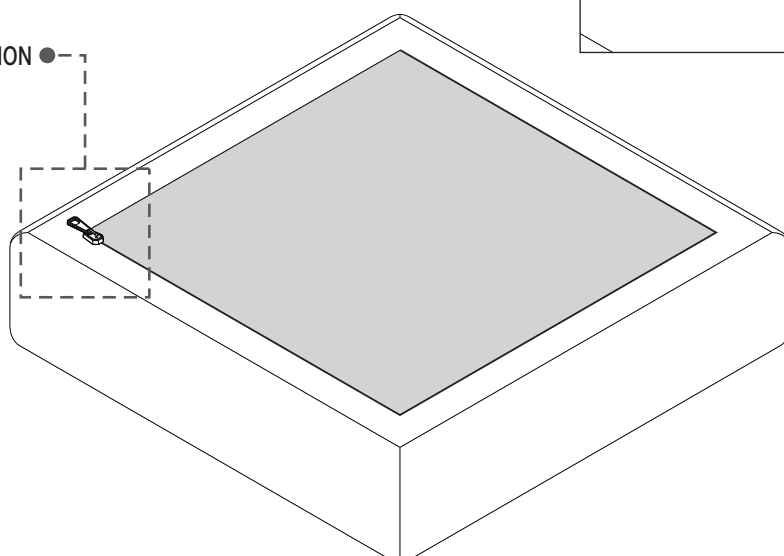


## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION




### III. INSTALLING FABRIC COVERS

#### A INSTALLING BACKREST CUSHION COVER

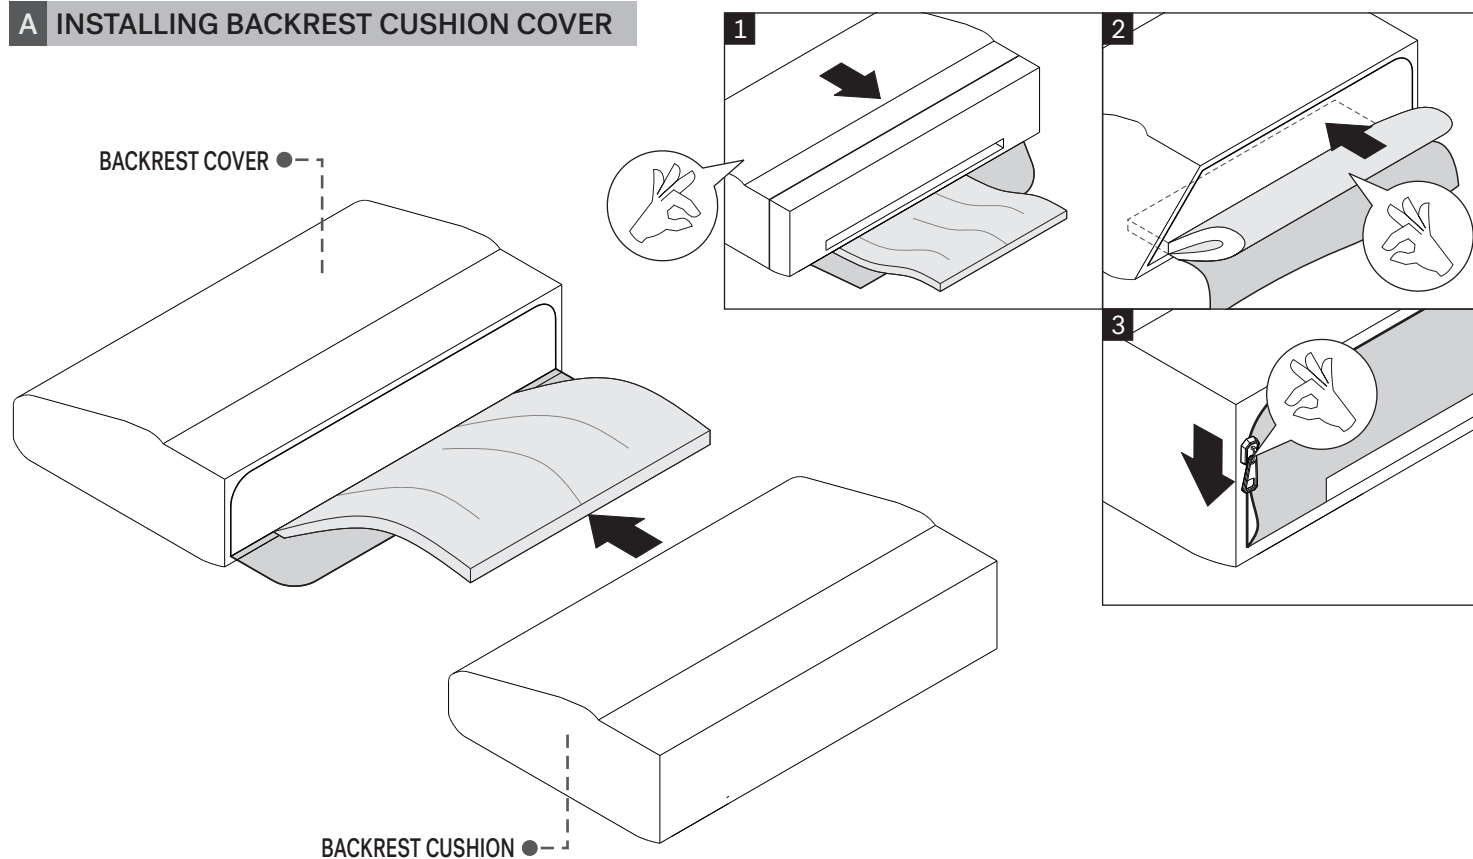


#### B INSTALLING SEATING CUSHION COVER

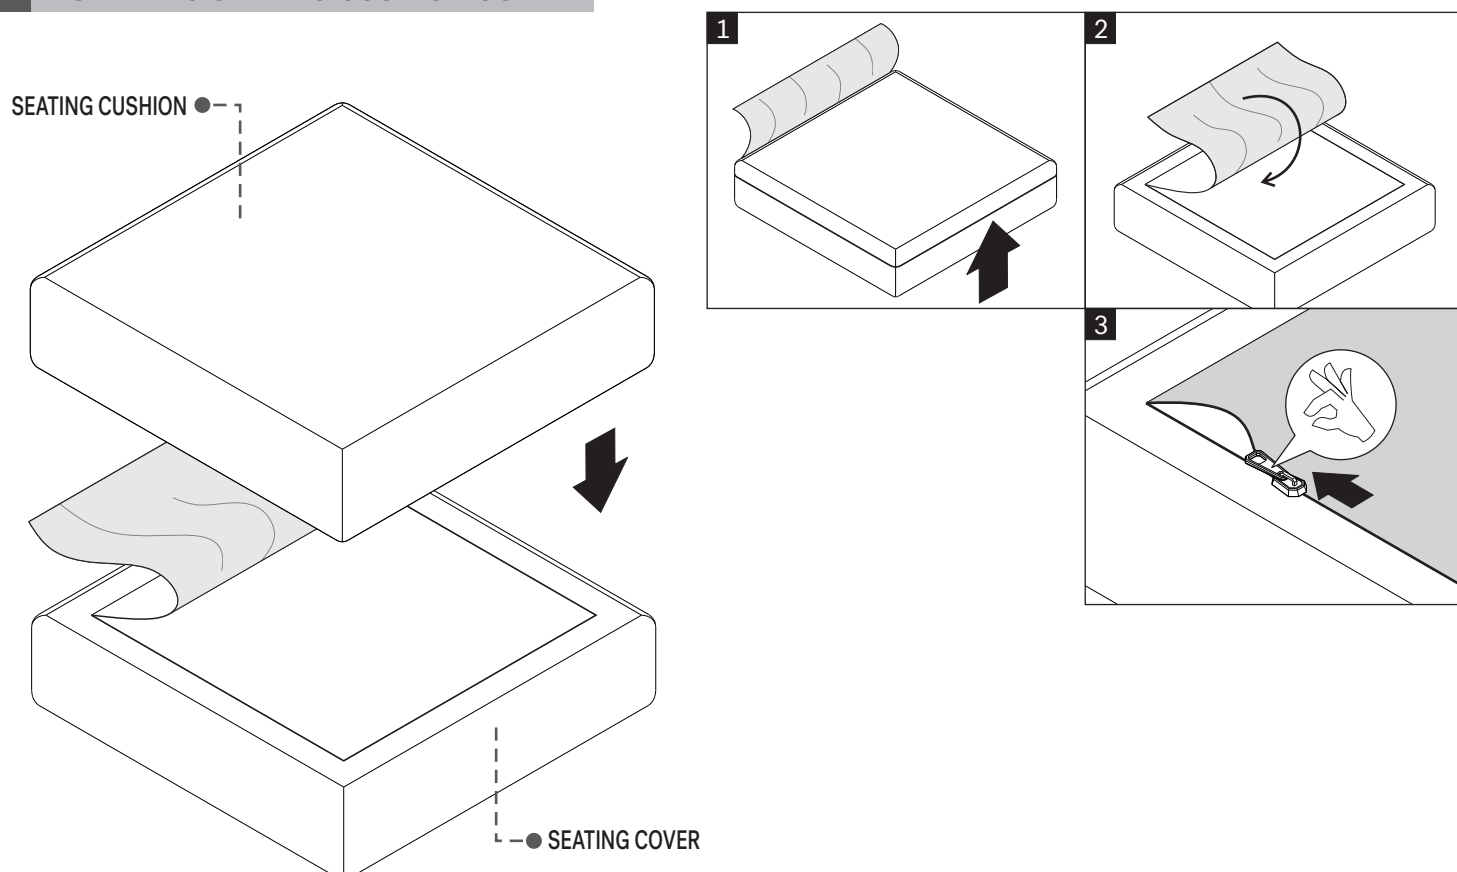




## 70255 MONOCLE OUTDOOR SOFA - 2 SEATER ASSEMBLY INSTRUCTIONS FOR SOFA INSTALLATION



### IV. COMBINING MODULAR COMPONENTS

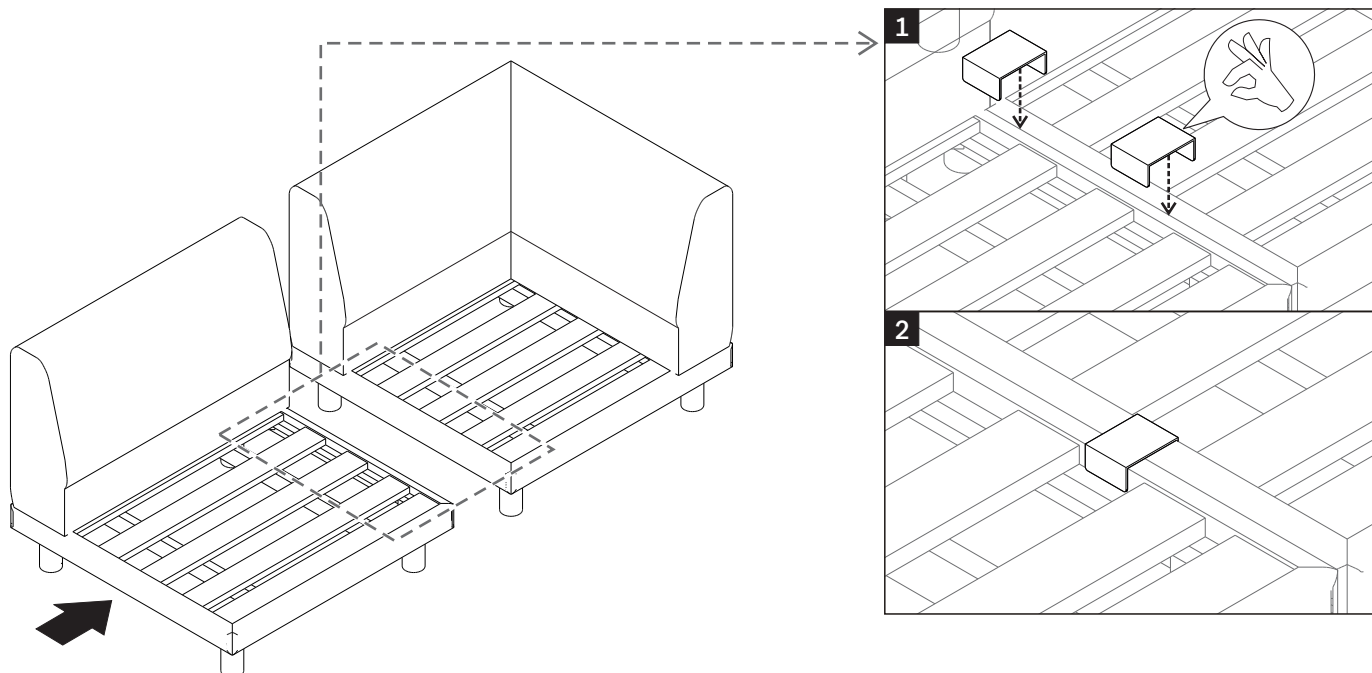

### POSSIBLE COMBINATIONS

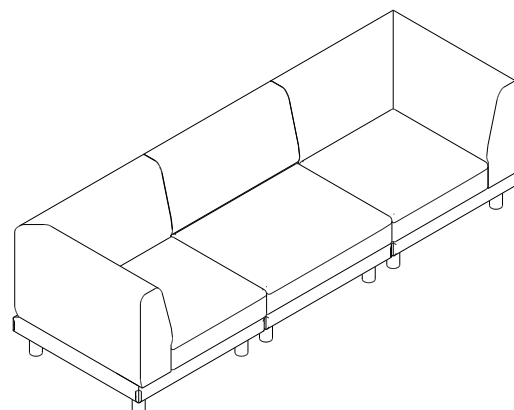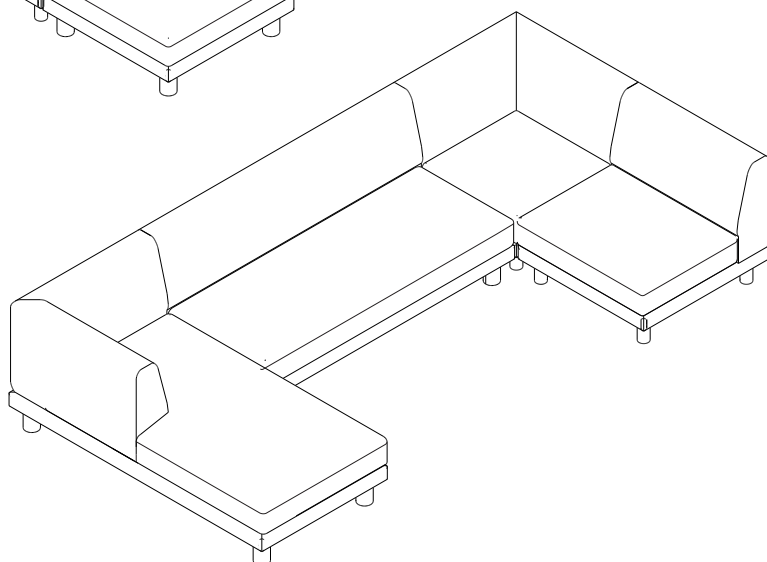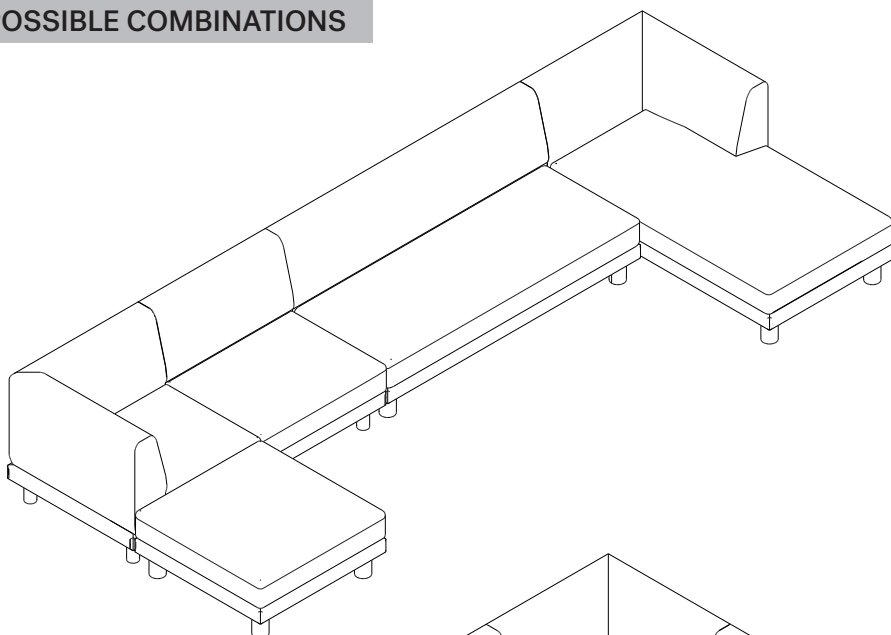

SEE ETHNICRAFT.COM FOR MORE INSPIRATION