

Patrice Chandelier**F3222/5, F3223/6, F3351/8 1.0**

GENERATION LIGHTING

CHANDELIER

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

Incandescent version may be dimmed with a standard incandescent dimmer. LED version may be dimmed with a LED dimmer. Consult lamp manufacturer for additional information.


This instruction shows a typical installation.

CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

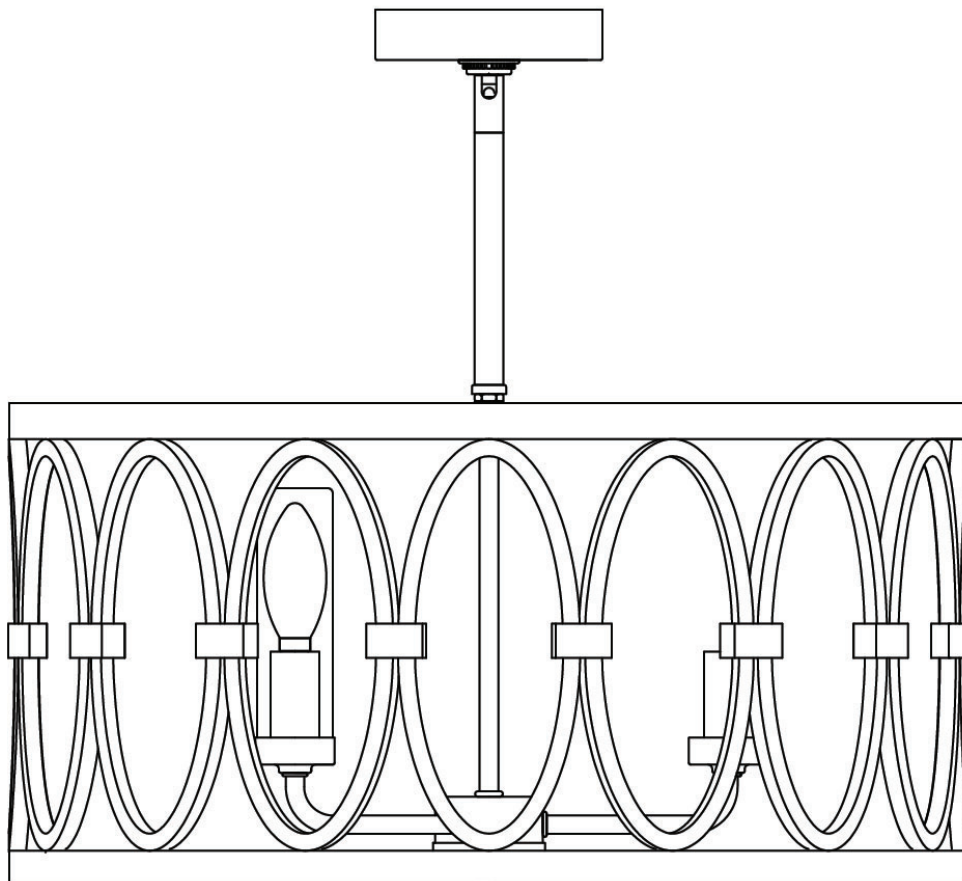

GENERATION LIGHTING
 7400 Linder Ave., Skokie, IL 60077
 T 847.410.4400 | F 847.410.4500
www.generationlighting.com

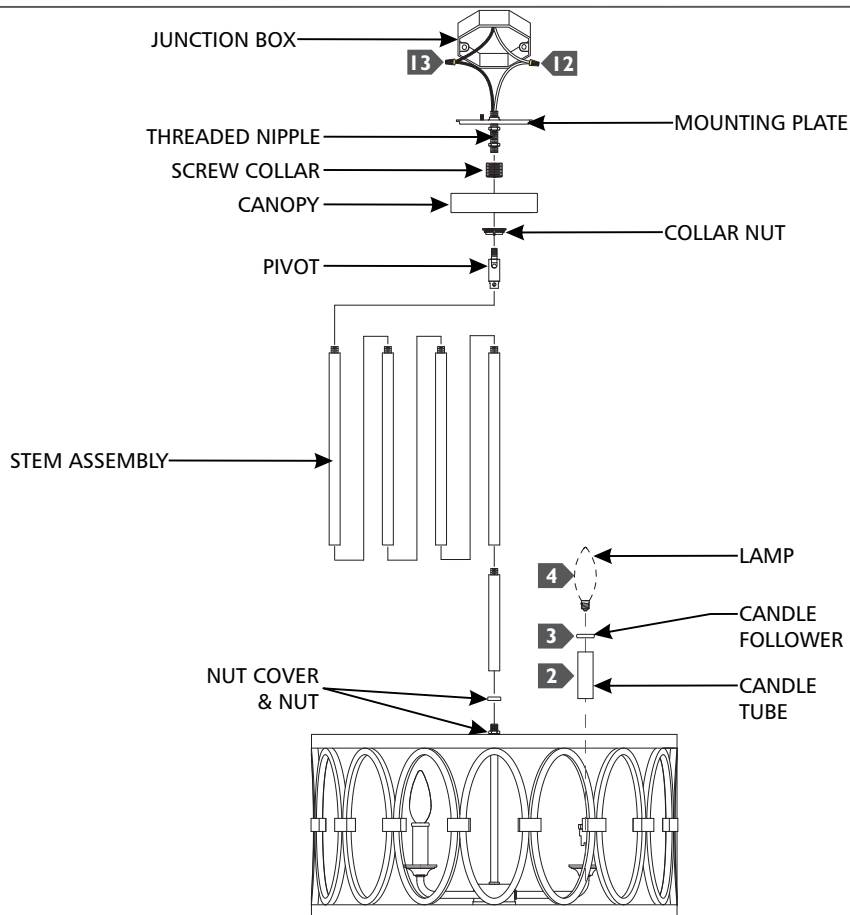IA

- 1** If necessary, screw the short end of the threaded nipple tightly onto the mounting plate.
- 2** Install the candle tubes by sliding them over the sockets.
- 3** Install the candle followers by placing them on top of the candle tubes.
- 4** Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage information.
- 5** Determine the wanted height or look of the fixture with the provided stems and pivot, then assemble them by screwing them together.
- 6** Feed the fixture wires through the nut cover and stem assembly, then slide the nut cover over the nut and screw the stem assembly onto the fixture.
- 7** Unscrew the collar nut off the screw collar and place it onto the stem followed by the canopy.
- 8** Screw the screw collar onto the threaded nipple.
- 9** Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem assembly.
- 10** Align and secure the mounting plate to the junction box.
- 11** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 12** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 13** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 14** Neatly place all the wires into the junction box, place the canopy onto the mounting plate, and secure it in place by screwing the collar nut tightly onto the screw collar.