

JAMIE YOUNG Cº

Landmark Four Door Credenza - Brown Sugar Oak

20LAND-CRBR

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

IMPORTANT SAFETY INSTRUCTIONS

TOOLS NEEDED:


- Level
- Pencil
- Tape Measure
- Screwdriver

Assembly requires 2 or more people.

NOTE:

When unpacking, lay parts on a padded surface such as packaging provided. Be sure to locate all hardware before throwing away any packaging.

PARTS INCLUDED

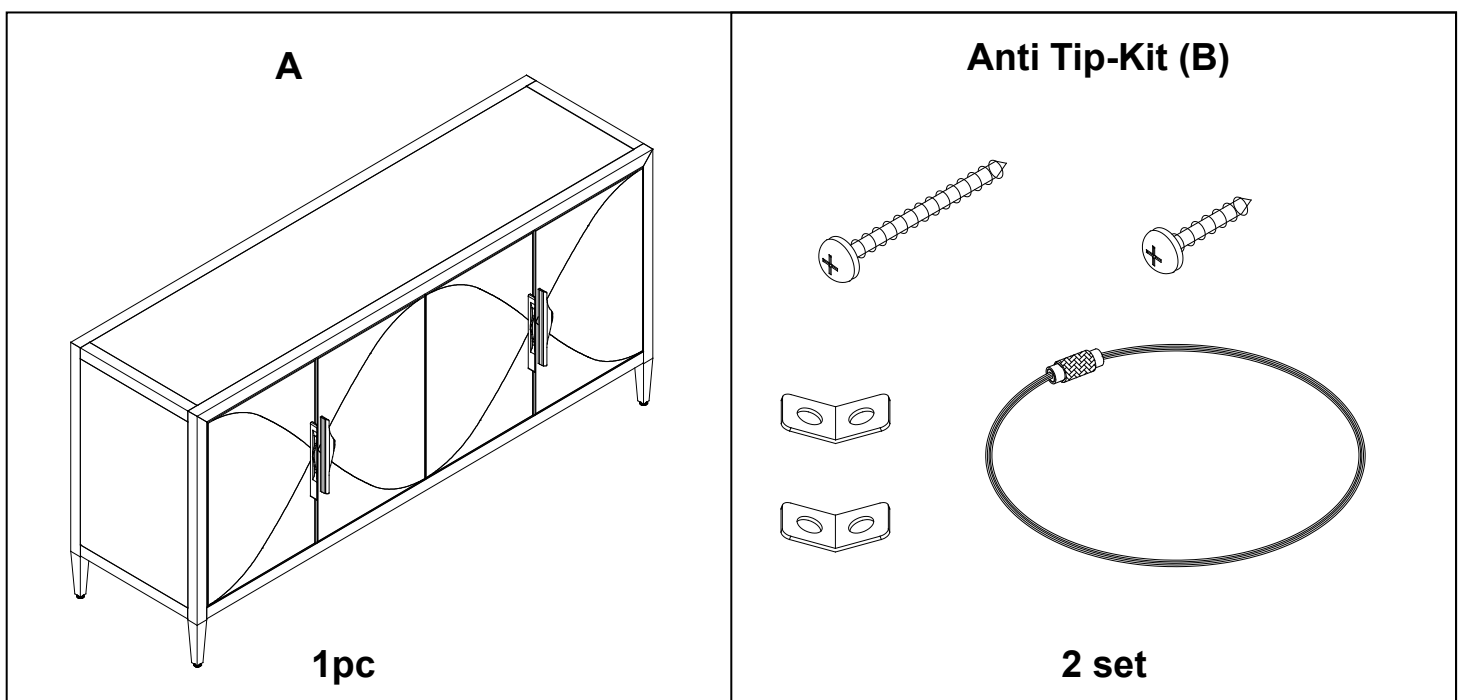

ASSEMBLY INSTRUCTIONS

Step 1: Leveling Adjustment

Adjust the leveling feet to ensure the cabinet stands evenly on the floor. This is essential for maintaining structural integrity and a clean visual alignment. See Figure 1

Step 2: Anti-Tip Safety Installation

Position the cabinet in its final location, then install the anti-tip kit by securing it to the wall. This step enhances safety and long-term stability. See Figure 2

Step 3: Hinge Adjustment Instructions . See Figure 3

Step 4: The Shelf Panels can be adjusted up and down in it own location as shown below. Consumer need only to unscrew the screw, adjust the Shelf Support Pin either up and down and place the Shelf Panel back onto the Shelf Panel and install the screw again. Illustration as shown below. See Figure 4

ASSEMBLY DIAGRAMS

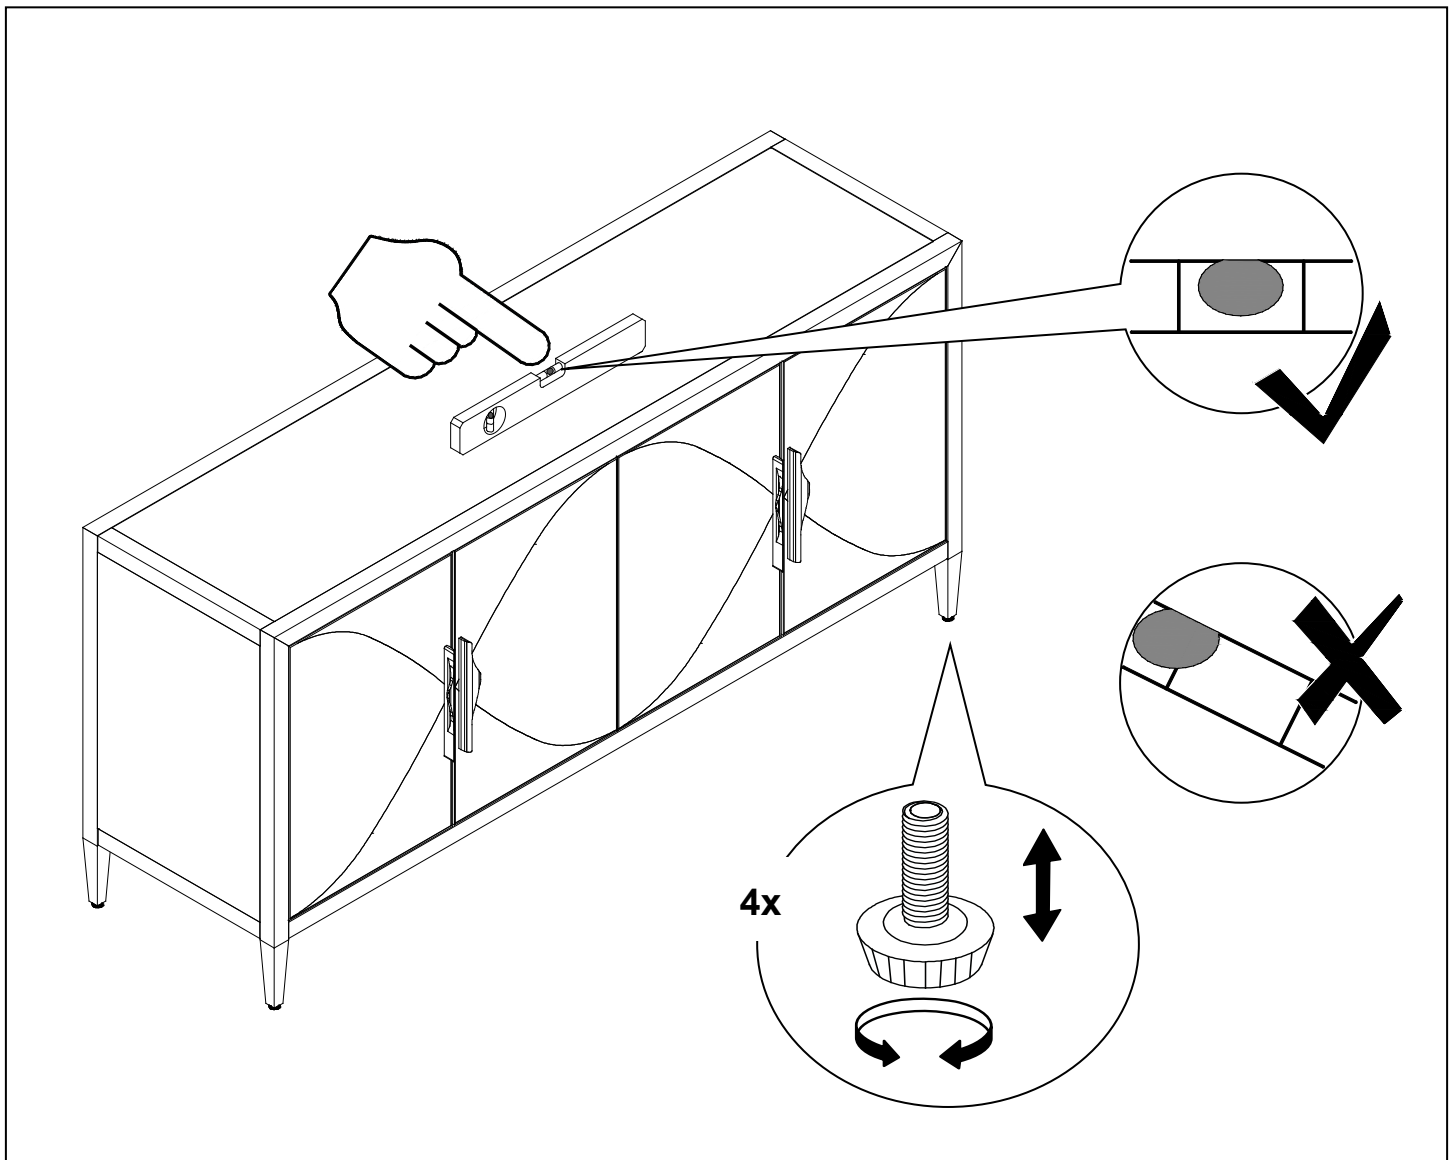


Figure 1

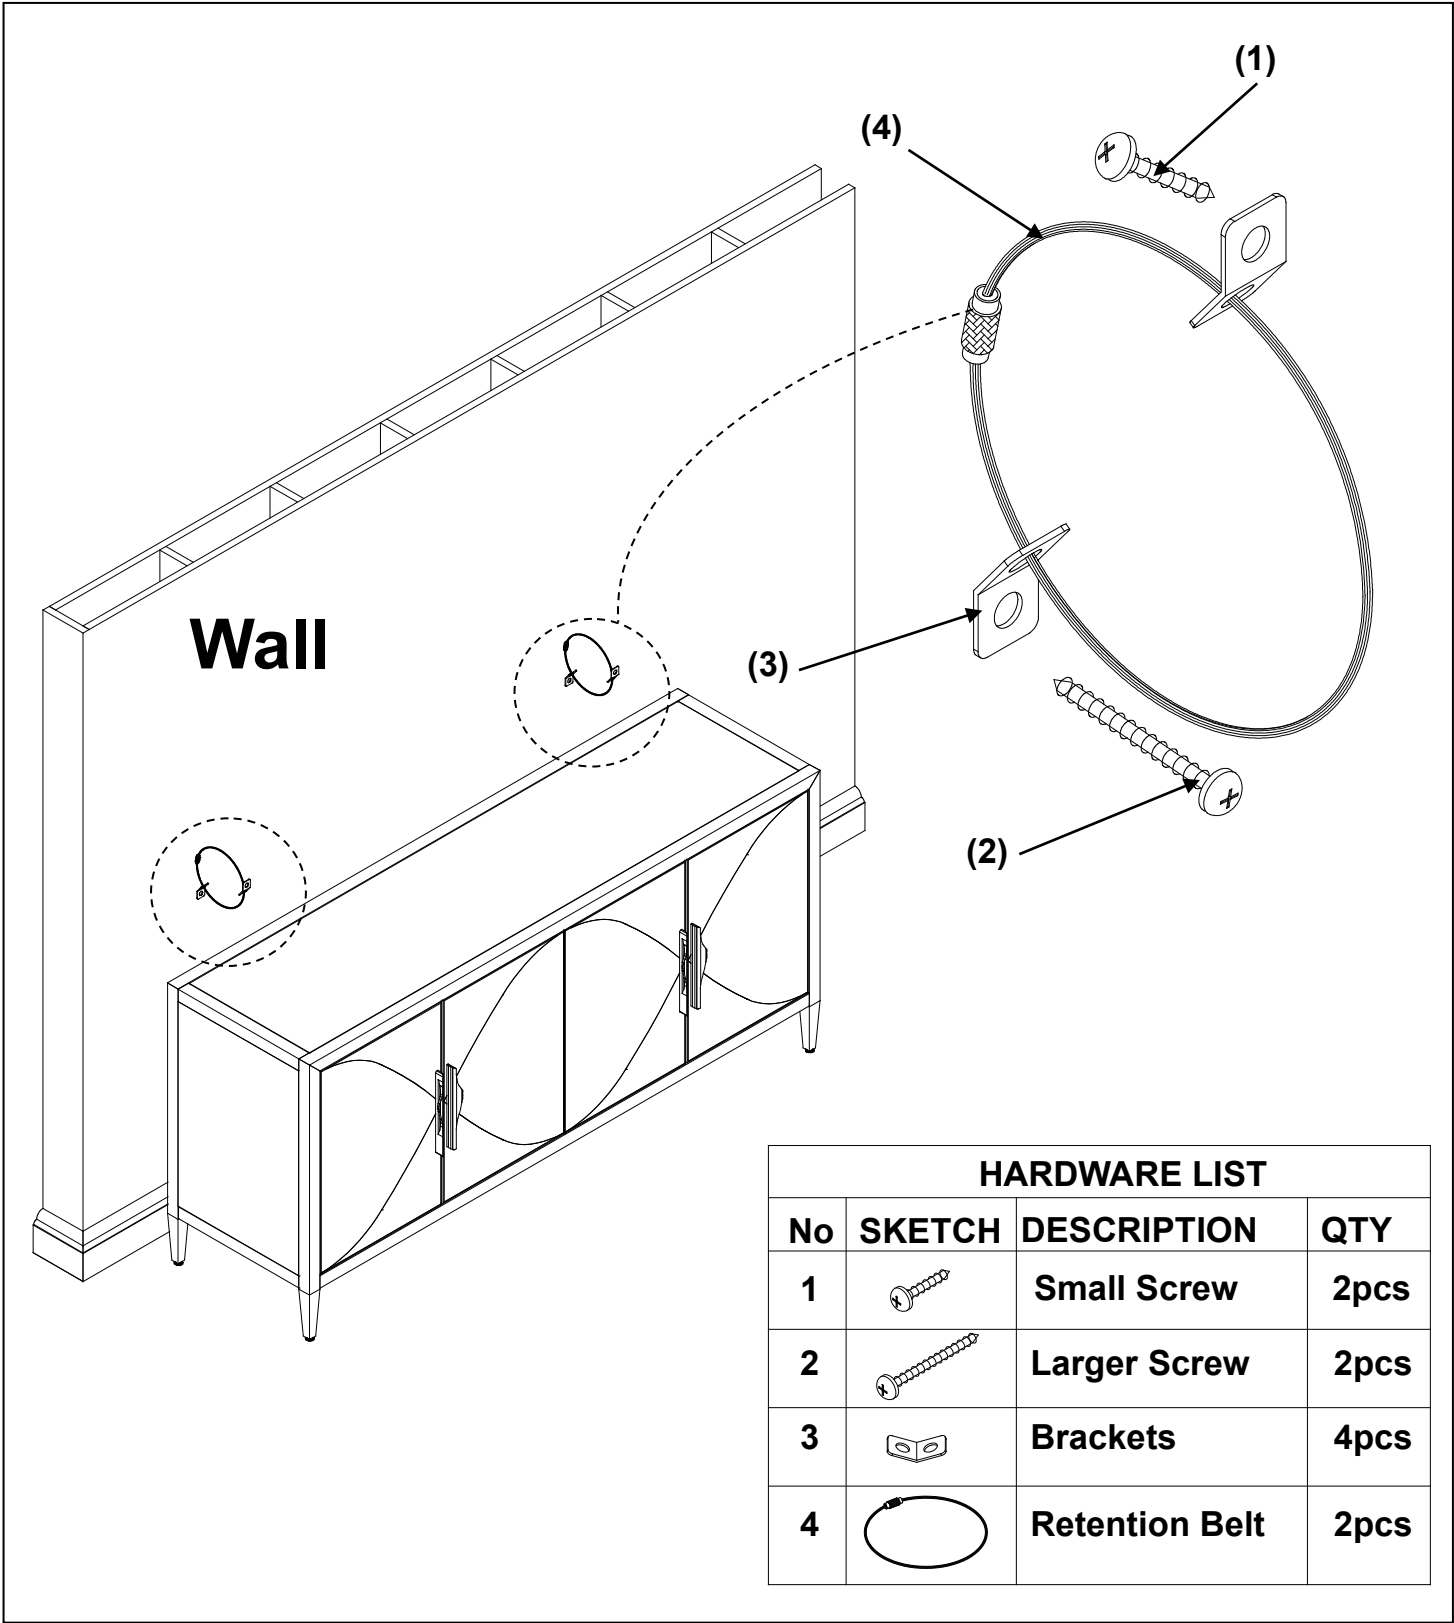


Figure 2

Cabinet Door Adjustment Instructions

- a) If the cabinet door needs to be moved closer to or away from the cabinet frame, locate the side-to-side adjustment screws on the hinge.
- b) Use the Phillips screwdriver to adjust these screws and gradually move the door in the desired direction.

ASSEMBLY DIAGRAMS

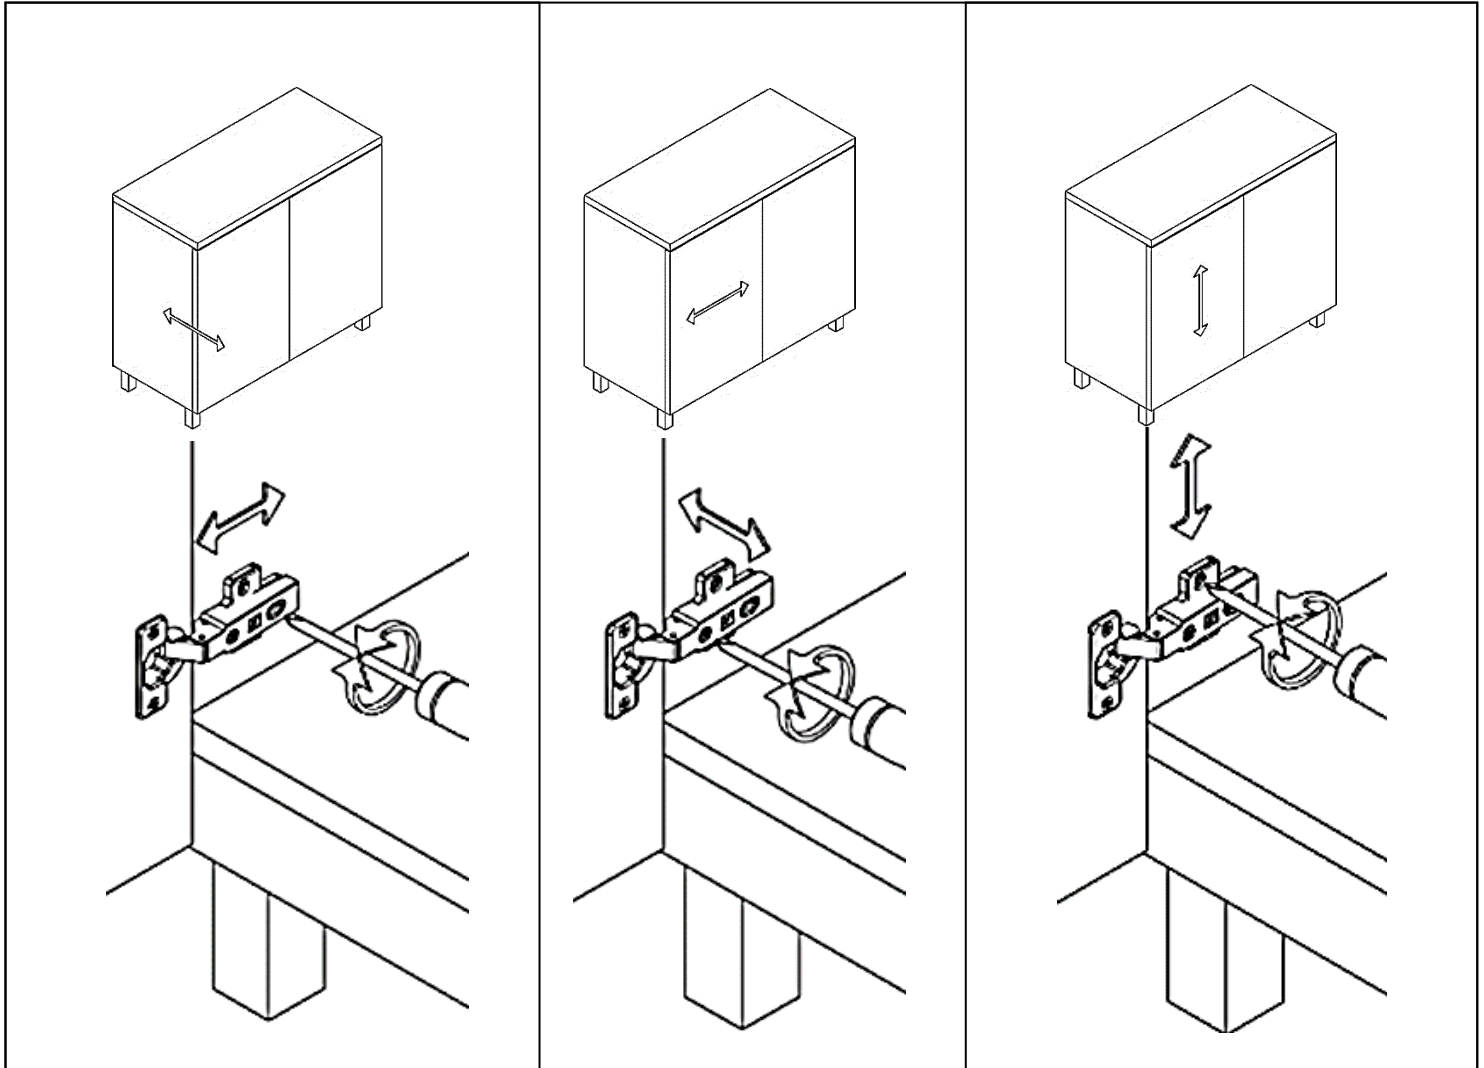


Figure 3

ASSEMBLY DIAGRAMS

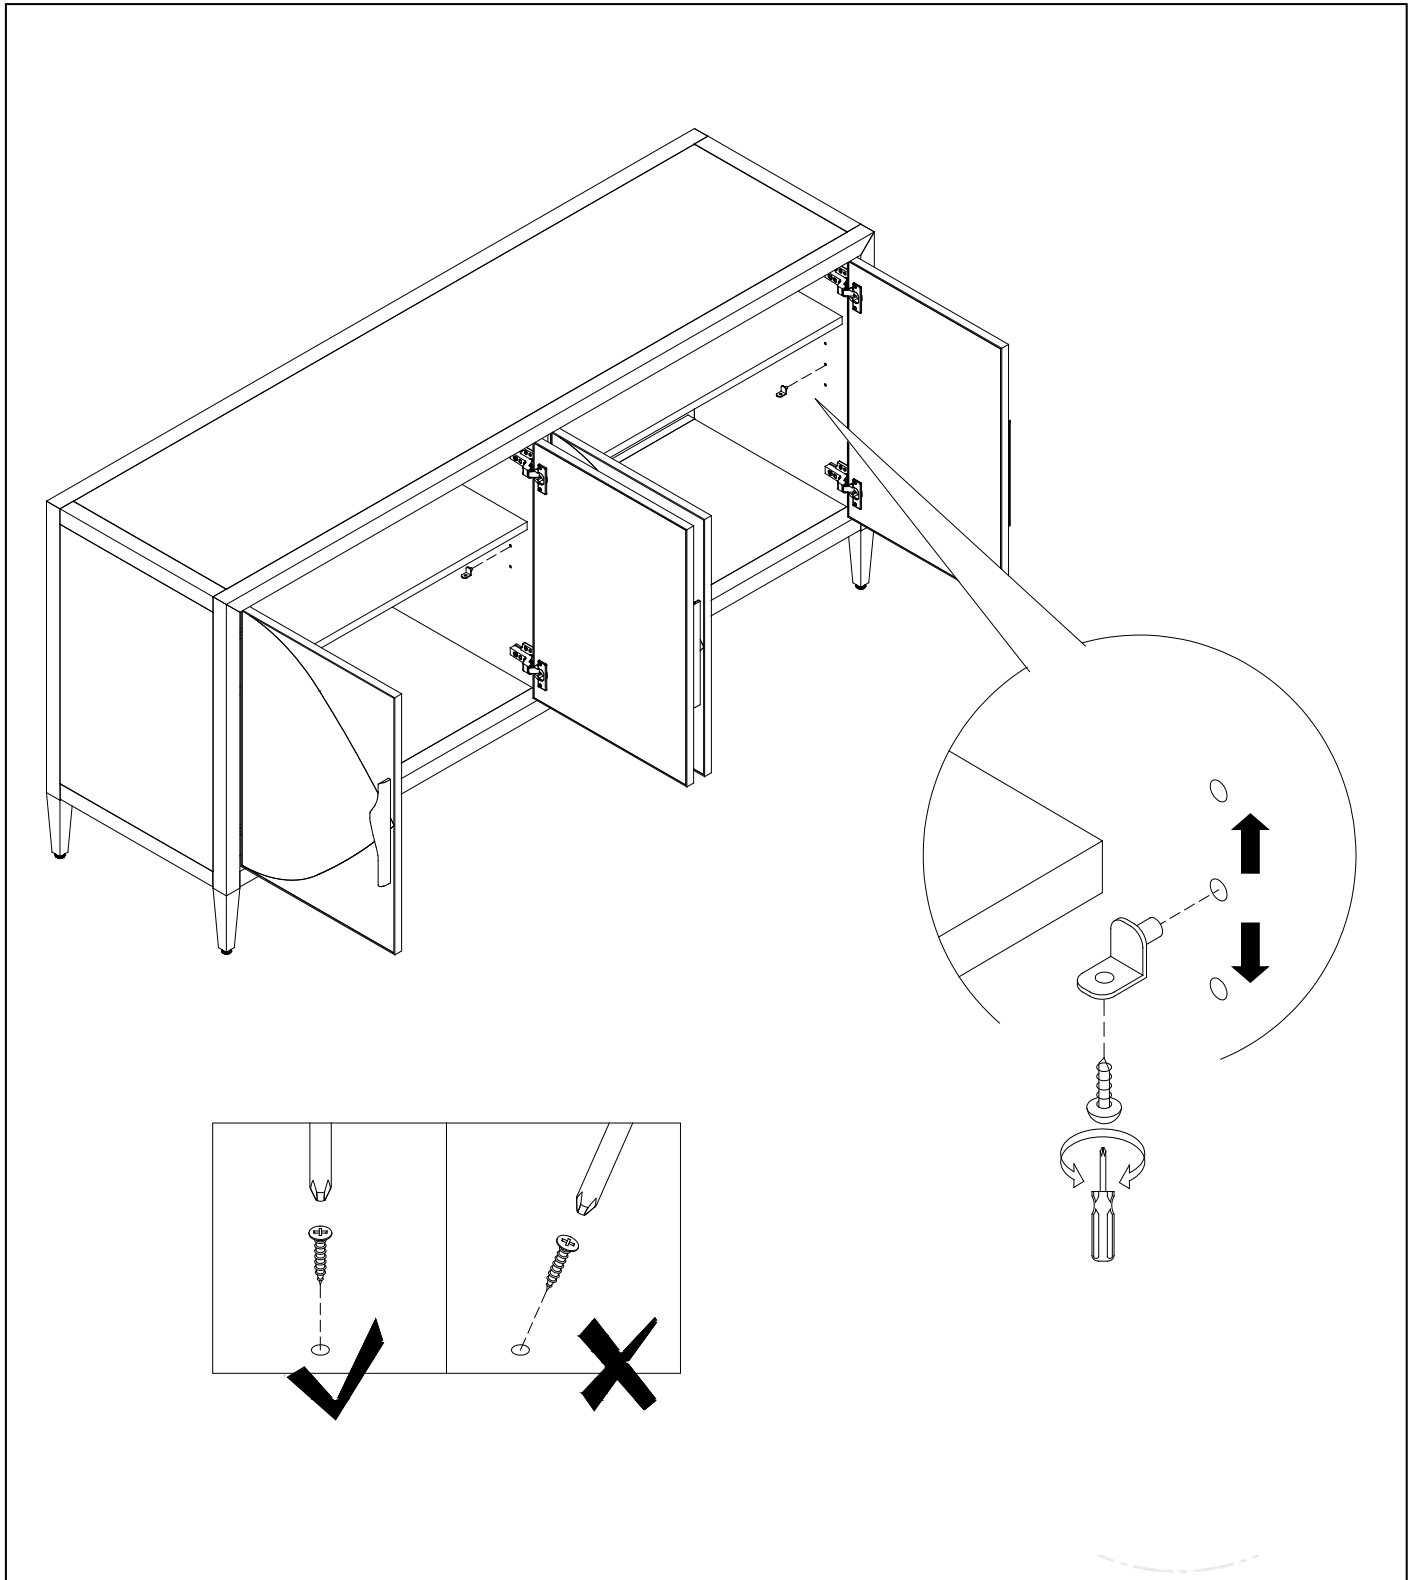


Figure 4

Thank you for purchasing this product !
www.jamieyoung.com



For more information, please scan the
QR code to watch the instruction video.