



JAMIE YOUNG Co

KEYSTONE MIRROR

SAFETY, INSTALLATION & CARE INSTRUCTIONS

ITEM DESCRIPTION: Keystone Mirror

ITEM NO:- 6KEYS-MIDO

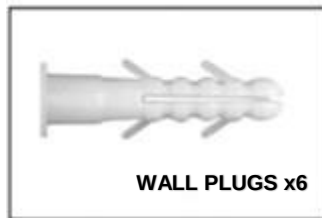
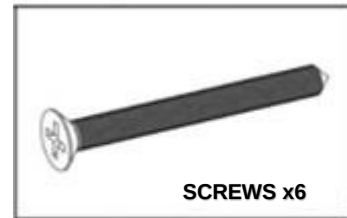
NAME: Keystone Mirror, Dove Ash Grey Vellum

MATERIAL TYPE: PLY, MDF, Metal, Vellum Leather

FINISH: Dove Ash Grey

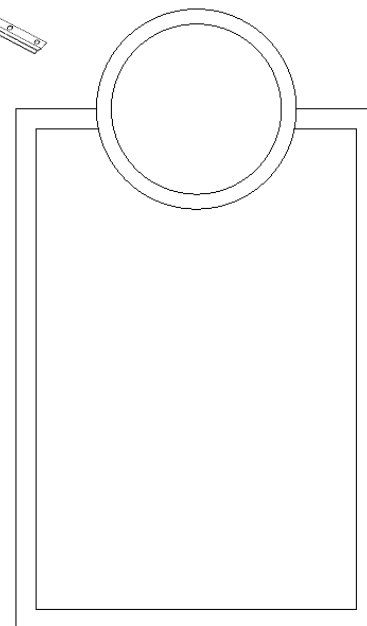
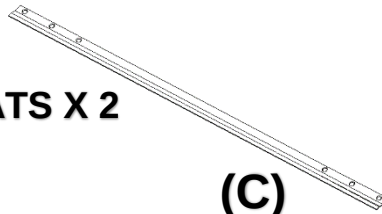
PART INCLUDED

- (A) WALL PLUGS (6)
- (B) SCREWS (6)
- (C) CLEATS (2)
- (D) MIRROR (1)

**(A)****(B)****TOOLS NEEDED**

(IF APPLICABLE)

- (A) ELECTRONIC STUD FINDER
- (B) DRILLING MACHINE
- (C) PENCIL
- (D) BUBBLE LEVEL

CLEATS X 2**(C)****(D)**



JAMIE YOUNG CO

KEYSTONE MIRROR

SAFETY, INSTALLATION & CARE INSTRUCTIONS

WARNING

YOUNG CHILDREN MAY BE INJURED BY TIPPING PRODUCTS, SO THE USE OF TIPPING RESTRAINTS IS HIGHLY RECOMMENDED. THIS PRODUCT IS ONLY A DETERRENT AND NOT A SUBSTITUTE FOR PROPER ADULT SUPERVISION. THE MANUFACTURER ASSUMES NO LIABILITY FOR IMPROPER INSTALLATION, THIS RESTRAINT WILL HELP PREVENT THE PRODUCT FROM TIPPING OVER.

SAFETY INSTRUCTION

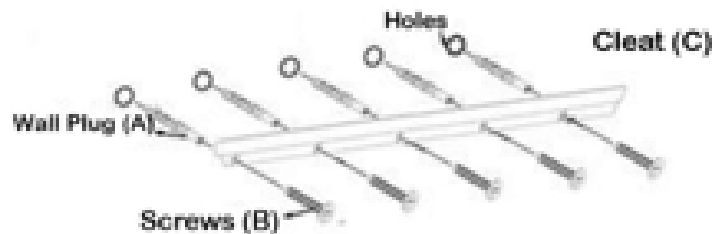
THIS HANGING SYSTEM IS INTENDED FOR DRYWALL STUD MOUNTING ONLY IF YOUR WALLS ARE MADE OF CONCRETE, BRICK OR PLASTER, PLEASE CONSULT YOUR LOCAL HARDWARE STORE FOR ASSISTANCE, FOR SAFETY AND EASE OF INSTALLATION, WE RECOMMEND HAVING TWO PEOPLE PERFORM THE INSTALLATION.

ASSEMBLY INSTRUCTIONS

1. Unpack all the parts and place on a protected work surface.
2. Hold mirror (D) at the desired location, so that mounting cleat (C) will be over a stud, with a pencil, mark the center-top of the mirror (D) on the wall.
3. Measure down from the center-top of the panel to the center-top of the mounting cleat on the back of the panel, and mark this point on the wall. Make a hole in the wall with use of drill. Before drilling additional holes, put the bubble level on the wall cleat (C) to test and make sure the wall cleat is level. Then hold the cleat (C) against the wall and drill holes for all wall plugs (A) in the as shown in the illustration. Please insert the respective plugs (A) in the holes, then set the cleat (C) on top of them.
4. Attach the wall cleat (C) by screwing screw (B) in to the inserted plugs. Then, tightly screw all mounting screw (B) through remaining holes of wall cleat (C).
5. Mount the mirror (D) to the wall by sliding the mirror until the mounting cleat rests on the wall cleat (C).
6. Installation is complete.

CARE INSTRUCTION

To Clean, Wipe gently with soft, dry cloth. Avoid the use of harsh chemicals or abrasive cleaners, as they may damage the finish.



Cleat (C) attached to the Mirror

