

Justice Design Group

Installation Instructions

Bath

For Model: FSN-8361, 8362, 8363, 8364


IMPORTANT

- Justice Design recommends that a licensed electrician install this lighting fixture
- Installation must comply with all building, safety, and electrical codes and requirements
- Disconnect power to the junction box prior to installation
- Do not reconnect power until this fixture is properly installed
- This fixture is designed to mount to a standard metal 4-0 octagonal junction box



Hardware Pack contains:


- A. (2) Mounting Screws
- B. (2) Fixture Screws
- C. (3) Wire Nuts
- D. (1) Mounting Plate

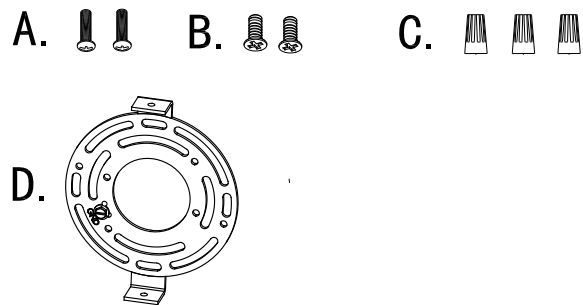

1


Attach the mounting plate (D) to junction box using mounting screws (A).

Note: The side of the mounting plate marked "GND" must face out. **The junction box is not included.**

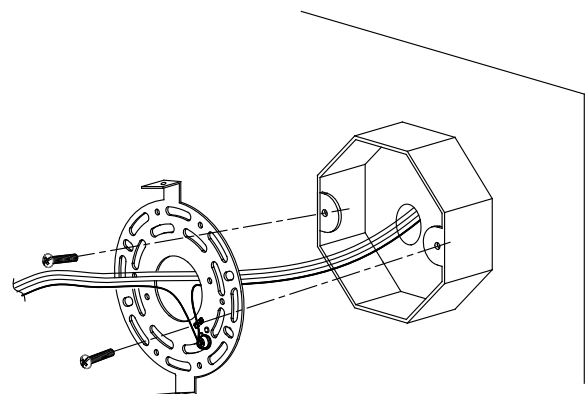


2

Connect fixture wires to supply wires using wire nuts (C).
Observe polarity: black to power, white to neutral, and bare copper to green ground.
Tuck wires and wire nuts into junction box.

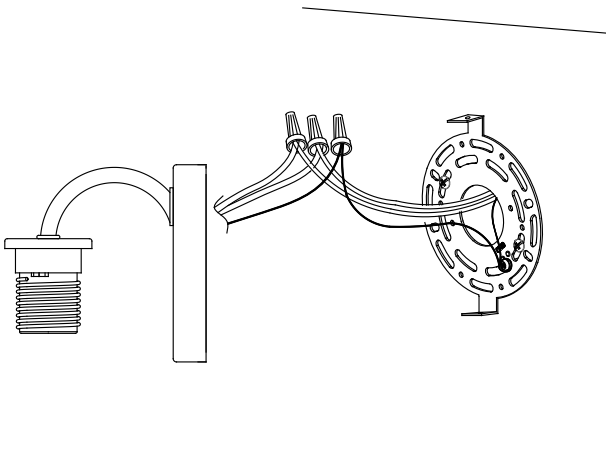


3

Attach fixture to Mounting Plate (D) using screws (B).

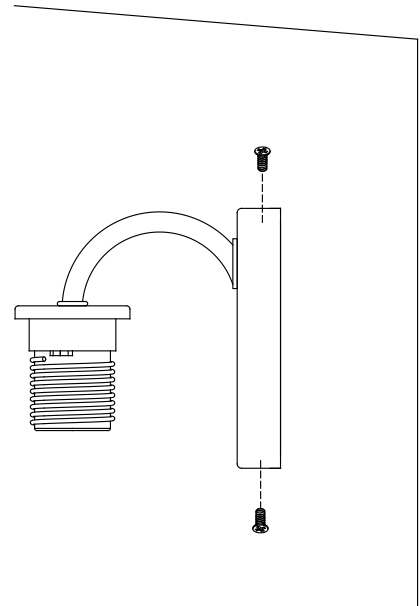


4

Attach shade by placing over fixture arm.
Secure with shade spacer and shade lock ring

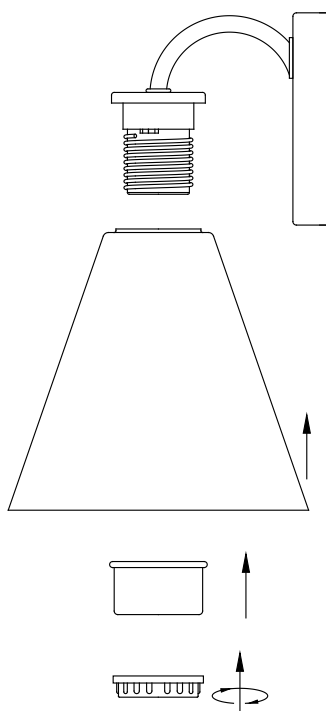

5

Install bulb (Not included). Take care never to exceed maximum wattage.
Please see the additional enclosed sheet for care instructions.

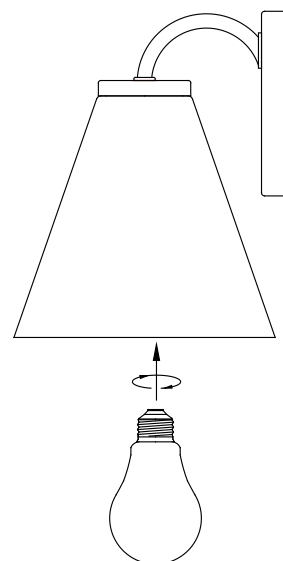

**Your installation is now complete.
Return power to the junction box
and test the fixture.**