




If you have any questions or problems assembling your fixture please call us for assistance. Customer Service:(702)361-4345 or (800)525-2655, customer.services@kalco.com

WARNING:





- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit. More than one person may be necessary to install fixture, make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.
- 4.This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

INSTALLATION(FIG. 2):

- 1.Turn off electricity.Take all parts from part box.
- 2.Use part #3 to connect part #2, #4 and #5.
- 3.Use part #2, #4 and #5 to connect part #1 and #6.
- 4.Use part #7 to fix part #8 on part #6.

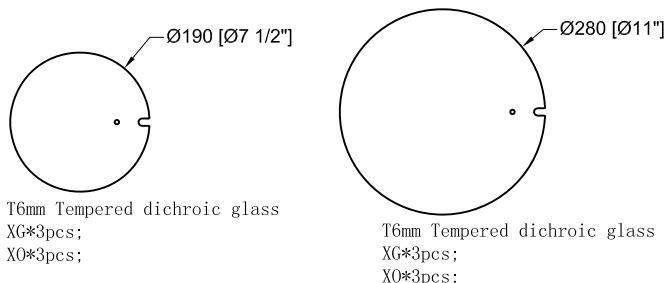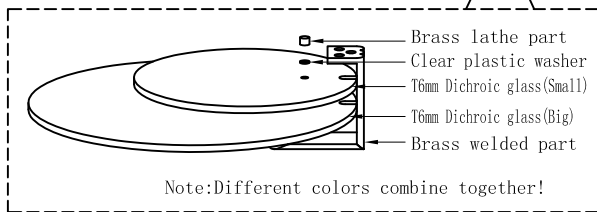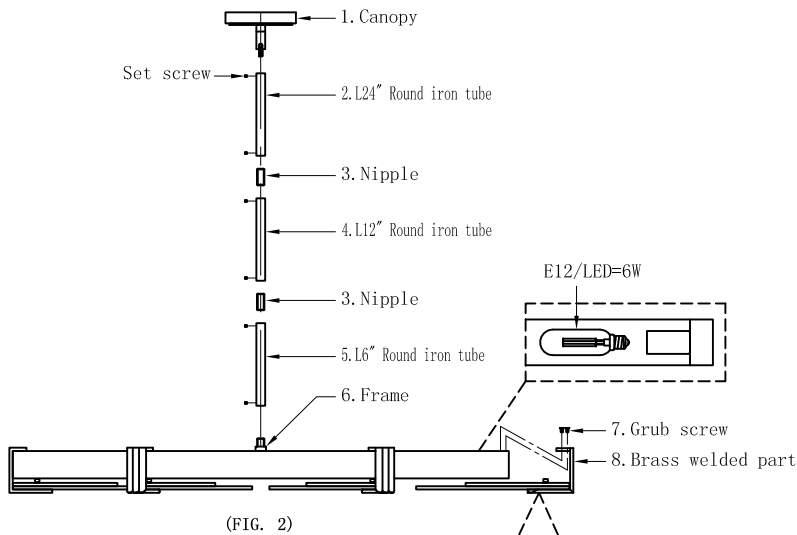

Wiring Diagram

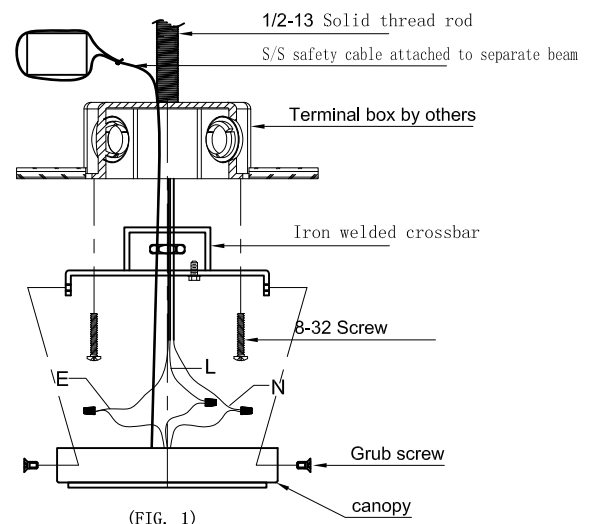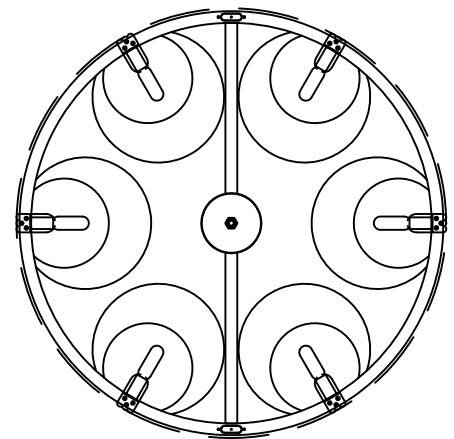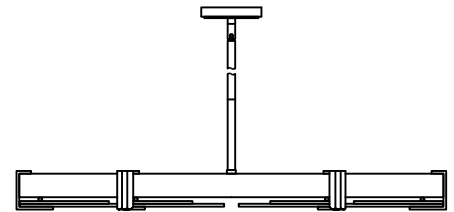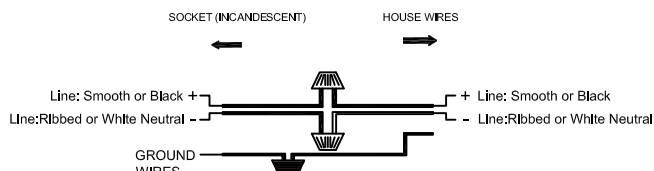

INSTALL CANOPY AS FOLLOWS (FIG. 1):

CAUTION: Be sure power is off at the main breaker box prior to installation.

- 1.Pre-mount (1) 1/2-13 Thread rod by contractor, move crossbar up to make it close to the ceiling, then use (2) 8-32 Screw and (1) 1/2-13 Nut to fix.
- 2.Connect the main wire with the power supply circuit see wire connection diagram.
- 3.Use grub screw to fix part #1 on the crossbar.