INSTALLATION INSTRUCTIONS 560-Outdoor Wall Sconce

WS-W56014/WS-W56018

MODERN FORMS

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Modern Forms. Substitution of parts or accessories not designated for use with this product by Modern Forms could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licensié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- · Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Modern Forms. Remplacer des pièces ou accessoires non conçus pour ce produit Modern Forms pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidue sur le luminaire. Nous recommendons aux clients qui resident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE



modernforms.com Phone (800) 526.2588 Fax (800) 526.2585 Headquarters/Eastern Distribution Center 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 Western Distribution Center 1750 Archibald Avenue Ontario, CA 91760



INSTALLATION INSTRUCTIONS

560-Outdoor Wall Sconce


WS-W56014/WS-W56018

MODERN FORMS

PREPARATION

- 1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
- 2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

FIG. 1

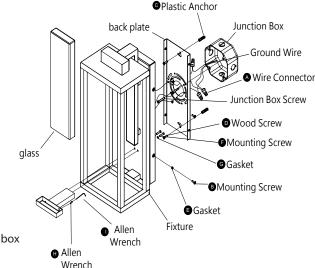

MOUNTING THE FIXTURE (Fig. 1)

- Remove the mounting screw (D) Install screw (F) and gasket(E)(G) from the fixture.
- 4. Drill holes in the wall aligned with the key holes located in the back plate, insert the plastic anchor (C).
- Secure the mounting back plate to the junction box using standard junction box screws that comes with the junction box.
 Note: (i)using any other non-original-manufacturer provided junction box screw may result in safty issue;
 (ii) The side of the mounting plate marked "GND" must face out.

CONNECTING THE WIRES (Fig. 2)

6. Connect the fixture's wires to junction box wires as shown in Fig. 2, making sure that all wire connectors (A) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the green screw provided. After wires are connected, tuck them carefully inside the junction box.


COMPLETING THE INSTALLATION

- 6. Secure the fixture to the mounting back plate using the mounting screw (B) and rubber gasket (C).
- 7. Insert the glass obliquely into the lamp cap, then push the glass up to the spring, when the glass is in the vertical direction, gently release the pressure let the glass sit between the limited block and outer frame.
- To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. indoor/outdoor silicone sealant) to outline the outside of fixture back plate where it meets the wall. Leave a space at the bottom to allow moisture to escape Fig.3

Fig. 2 Wiring **Fixture Wires House Wires** Black or Black Smooth (Hot) **Fixture Wires House Wires** White or White Ribbed (Neutral) **Fixture Wires House Wires** Bare wire Green or Bare Copper

(Ground)


Fig.3 Sealing

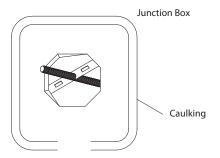

Mounting Plate Dimensions

WS-W56014&WS-W56018 Back Plate

(Ground)



modernforms.com Phone (800) 526.2588 Fax (800) 526.2585 **Headquarters/Eastern Distribution Center** 44 Harbor Park Drive Port Washington, NY 11050 Central Distribution Center 1600 Distribution Ct Lithia Springs, GA 30122 **Western Distribution Center** 1750 Archibald Avenue Ontario, CA 91760

