

# INSTALLATION INSTRUCTIONS

## LED Pendant

PD264620

# MODERN FORMS®

**CAUTION:** To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

**WARNING:** All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Modern Forms. Substitution of parts or accessories not designated for use with this product by Modern Forms could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

**MAINTENANCE NOTE:** Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.

**MISE EN GARDE:** Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licencié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

**ATTENTION:** Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Modern Forms. Remplacer des pièces ou accessoires non conçus pour ce produit Modern Forms pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

**NOTE D'ENTRETIEN:** Les conditions côtières peut causer une accumulation de minéraux et de résidus sur le luminaire. Nous recommandons aux clients qui résident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

## HARDWARE



Wire Connector  
Qty: 3pcs+1Extra



Wire Connector(P1)  
Qty: 3pcs+1Extra



Mounting Screw  
Qty: 1Extra

### ModernForms.com

Phone (866) 810.6615

Fax (800) 526.2585

### Headquarters, East Manufacturing Facility

44 Harbor Park Drive

Port Washington, NY 11050

### South East Manufacturing Facility

1600 Distribution Ct

Lithia Springs, GA 30122

### Central Manufacturing Facility

1700 South J Elmer Freeway, Ste 100

Cedar Hill, TX 75104

### West Manufacturing Facility

1700 S Archibald Ave

Ontario, CA 91761

# INSTALLATION INSTRUCTIONS

## LED Pendant

PD264620

MODERN FORMS®

### PREPARATION

1. Shut off the power at the circuit breaker and remove existing, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts in a clear area.  
Be careful not to lose any small parts necessary for installation.

### MOUNTING WALL PLATE (Fig.1)

3. Remove the mounting screw (B) and mounting plate from the canopy.
4. Secure the mounting plate to the junction box using the original junction box screws.  
(i) It is recommended to use only original junction box screws or replacements provided by junction box manufacturer.  
(ii) The side of the mounting plate marked "GND" must face out towards the installer.
5. Choose number of rods suitable for your hanging height.
6. Connect the canopy, rod(s), swivel, and fixture body. Make sure all connections are tightened.  
Run fixture wires through rod(s), swivel, and canopy.
7. Rotate clockwise to install and replace the glass.

### WIRING FIXTURE (Fig.2, Fig.3)

8. Due to limited space within the canopy, shorten the cable as necessary to make the installation easier.  
Make sure to identify and label all the wiring properly before any trimming/shortening (Fig.3).
9. Connect the driver's input/output wires to junction box wires as shown in Fig.2/Fig.3.  
Ensure all wire connectors (A), (B) are secure. Connect the fixture's ground wire to the ground in the junction box; this will be either a green wire or a bare copper wire. After wires are connected, tuck them carefully inside the junction box.

### COMPLETING THE INSTALLATION (Fig.1)

10. Mount the canopy against the mounting plate. Secure fixture to the mounting plate using the mounting screws (C).
11. For sloped ceiling applications, rotate the swivel at the top of the rods to ensure luminaire is aiming down (Fig.4).

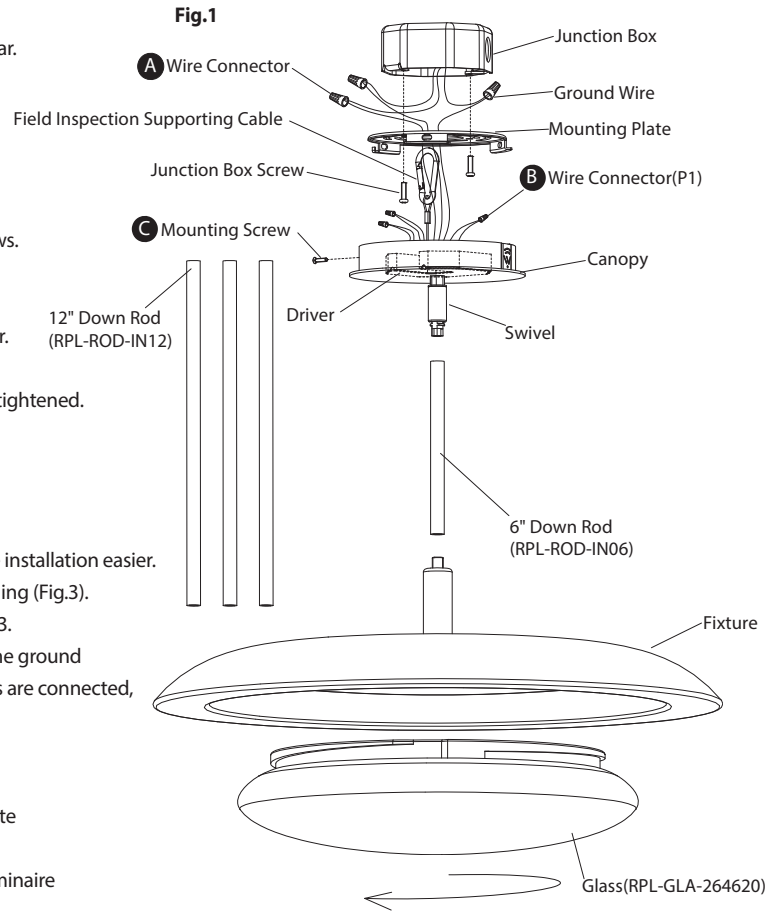


Fig.2

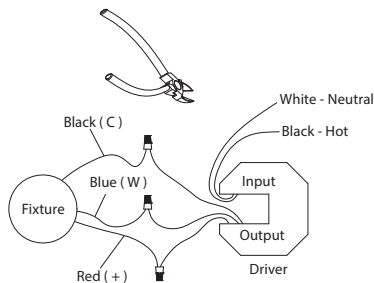


Fig. 4


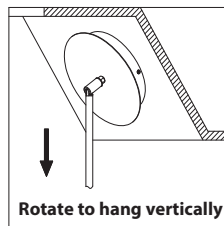


Fig. 3 Wiring

	Fixture Wires Black or Smooth	House Wires Black (Hot)
	Fixture Wires White or Ribbed	House Wires White (Neutral)
	Fixture Wires Bare wire (Ground)	House Wires Green or Bare Copper (Ground)

### Mounting Plate Dimensions

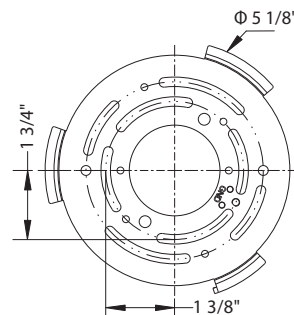

ModernForms.com  
Phone (866) 810.6615  
Fax (800) 526.2585

Headquarters, East Manufacturing Facility  
44 Harbor Park Drive  
Port Washington, NY 11050

South East Manufacturing Facility  
1600 Distribution Ct  
Lithia Springs, GA 30122

Central Manufacturing Facility  
1700 South J Elmer Freeway, Ste 100  
Cedar Hill, TX 75104

West Manufacturing Facility  
1700 S Archibald Ave  
Ontario, CA 91761