

# INSTALLATION INSTRUCTIONS FOR 10286-860 FOR CHANDELIER READ AND SAVE THESE INSTRUCTIONS

**WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER**  
**AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR**

## ASSEMBLING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box and remove the old fixture including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts in a clear area. Take care not to misplace any small parts necessary for installation.
3. Attach the mounting plate (A) to the junction box (not included) using mounting screws (C) (Size: 8-32\*1/2"L). The side of the mounting plate marked "GND" must face out.
4. Fixture includes three 12" and one 6" rods. Determine desired hanging height and thread rods (F1/F2) to the nipple (G). If installing with one 6" rod only the all thread must be removed. Then feed fixture wire carefully through each rod.
5. Screw the rods into the swivel of canopy (D).
6. The support cable is provided to support the weight of the fixture while wiring. Attach hook (Z) on the end of support cable into a slot located on the mounting plate (A). Carefully allow the support cable to support the weight of the fixture while wiring.

## CONNECTING THE WIRES (Fig.2)

7. Connect the electrical wires as shown in Fig.2, making sure that all wire connectors are secured. If your junction box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the mounting plate (A) using the green screw (B) provided.
8. Tuck wire connectors neatly into the junction box.

## COMPLETING THE INSTALLATION


9. Align the canopy (D) onto the mounting plate (A) and secure with screws (E).
10. Install (16) sixteen candelabra base bulb up to 60 watts each or CFL or LED equivalent (Not included), in accordance with the fixture specification (**DO NOT EXCEED THE MAXIMUM WATTAGE RATING!**) (**NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!**)
11. Align the cloth shade (H) onto the arm (I) and secure with screws (J).

Your installation is now complete. Return power to the junction box and test the fixture.

**IMPORTANT: FIXTURE SHOULD BE INSTALLED BY A QUALIFIED ELECTRICIAN TO ENSURE PROPER WIRING AND INSTALLATION.**



**Fig.1**

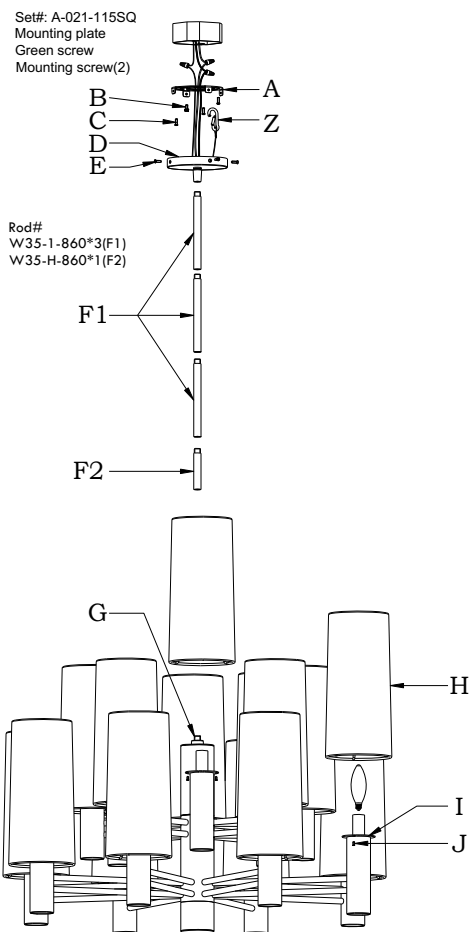

**Fig.2**

