



CONTENTS

Laddi Pendant 02 Lighting Assembly

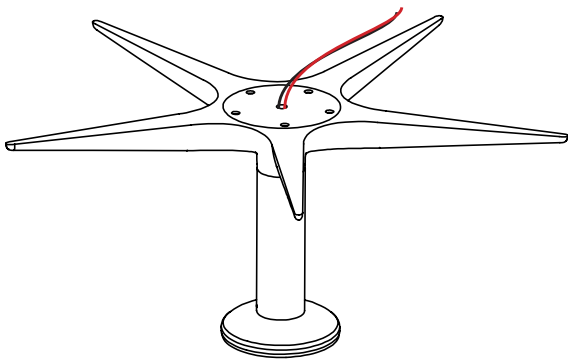


(x2) 8-32 Screw



(x5) Wago Connector




Wire set

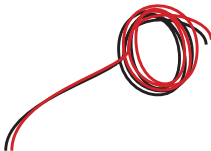

Cover tube
with threaded
stem




Glass shade

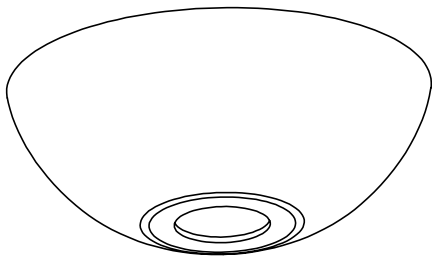


(x1) Driver



Canopy assembly

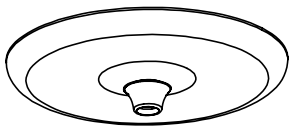

(x2) Toggle anchor
On 240V fixtures only



(x2) Wood screw
On 240V fixtures only



(x2) Long 8-32 screw
On 240V fixtures only



(x2) Metal screw
On 240V fixtures only



SAFETY INFORMATION

Suitable for dry or damp locations.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Laddi Pendant 02 | INSTALLATION

Cord length adjustment

Note: Please contact a licensed electrician.


Example fixture only:

To measure length of cord, first determine overall length (OAL), subtract 2" for the canopy height and subtract the fixture height from the OAL. Fixture height is measured from bottom of the fixture to stem connection point. The resulting measurement is the final stem length.

Ex. The fixture below has an OAL of 40" and a fixture height of 7.8".

$40'' \text{ OAL} - 2'' \text{ canopy} - 7.8'' \text{ fixture height} = 31'' \text{ cord}$

Note: leave extra 6" cord length to pass through the canopy and make the wire connection.

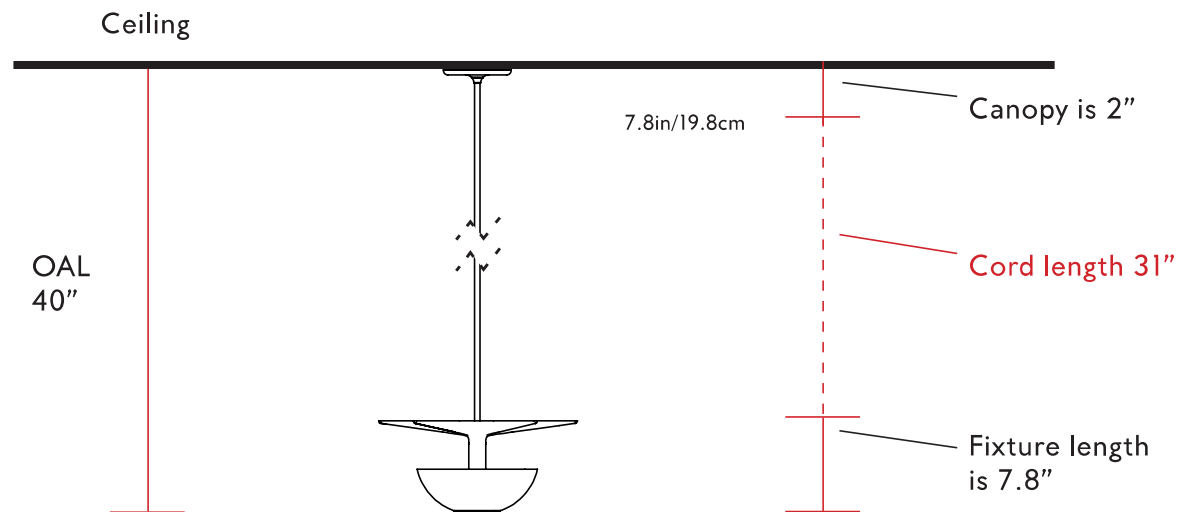


Laddi Pendant 02 | INSTALLATION

Stem and cover tube length adjustment


Note: Please contact a licensed electrician.

Example fixture only:


1. To customize the length of the provided stem, cut cover tube to desired length. Then cut the inner threaded tube so that it remains 7/8" longer than the cover tube.

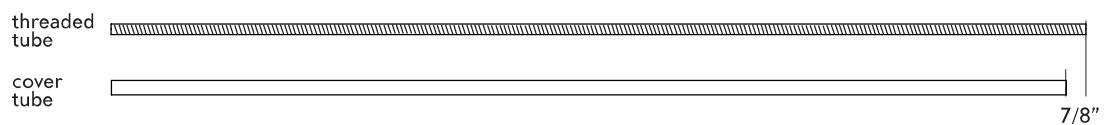


2. Mark the length of the tube required, using a marker or tape. Then hold down the tube with a hand or a clamp, use a hacksaw or electrical tool to cut the tube. Recommended to clean tube after cutting to remove any metal chippings.

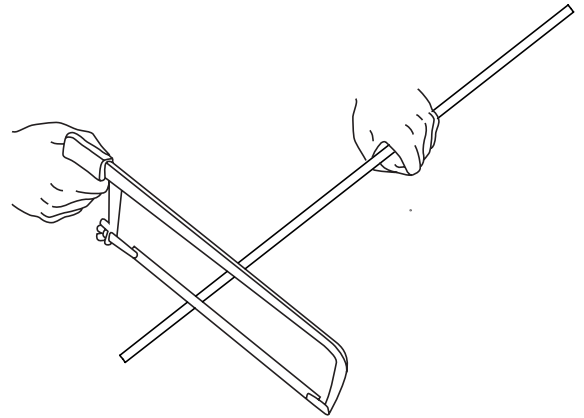

3. Now that the cover tube is cut to 32", measure the all thread tube to be 32 and 7/8" long. And place a mark, with a marker or tape.

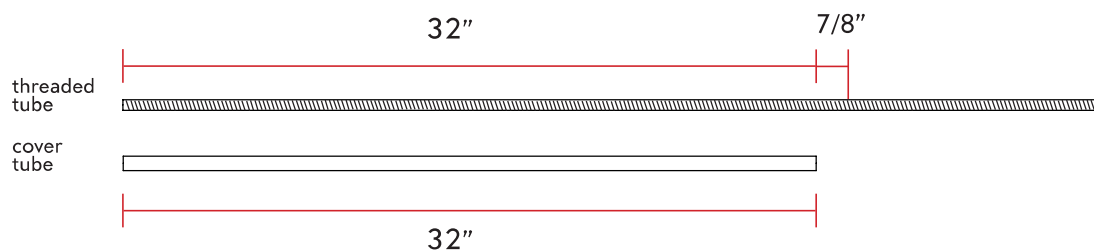


4. Hold down the all thread with a hand or a clamp, use a hacksaw or electrical tool to cut the all thread tube. Recommended to clean all thread tube after cutting to remove any metal chippings.

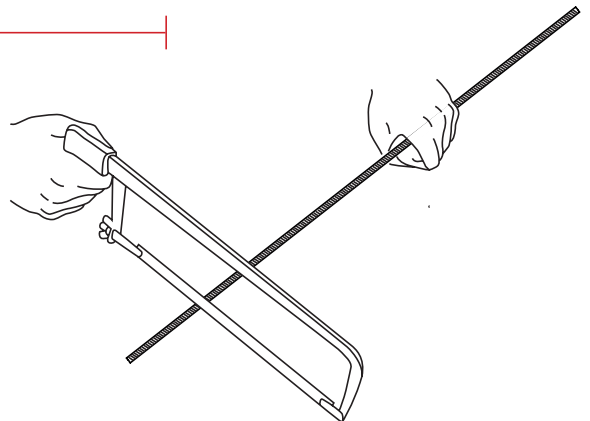

Laddi Pendant 02 | INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.


01. Unscrew 5 screws (A) from the fixture (B) to open the cover plate (C).

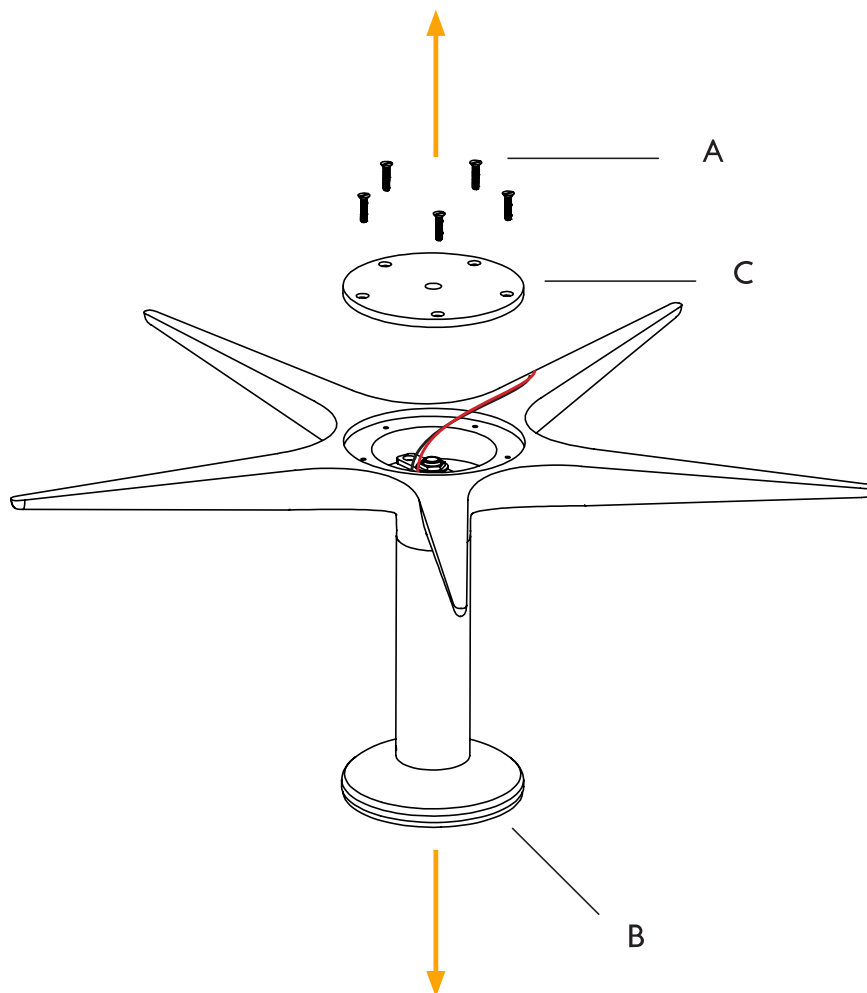

Laddi Pendant 02 | INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.


02. Secure the cover plate (C) to the threaded rod (D), with a nut (E) and a lock-washer (F).
03. Slide the cover tube (G) over the threaded rod, then slide the canopy nut (H) and canopy (I) over the cover tube.
04. Then screw on the crossbar assembly (J) onto the threaded rod on the top.
05. Pull the provided wires set (K) through the stem.

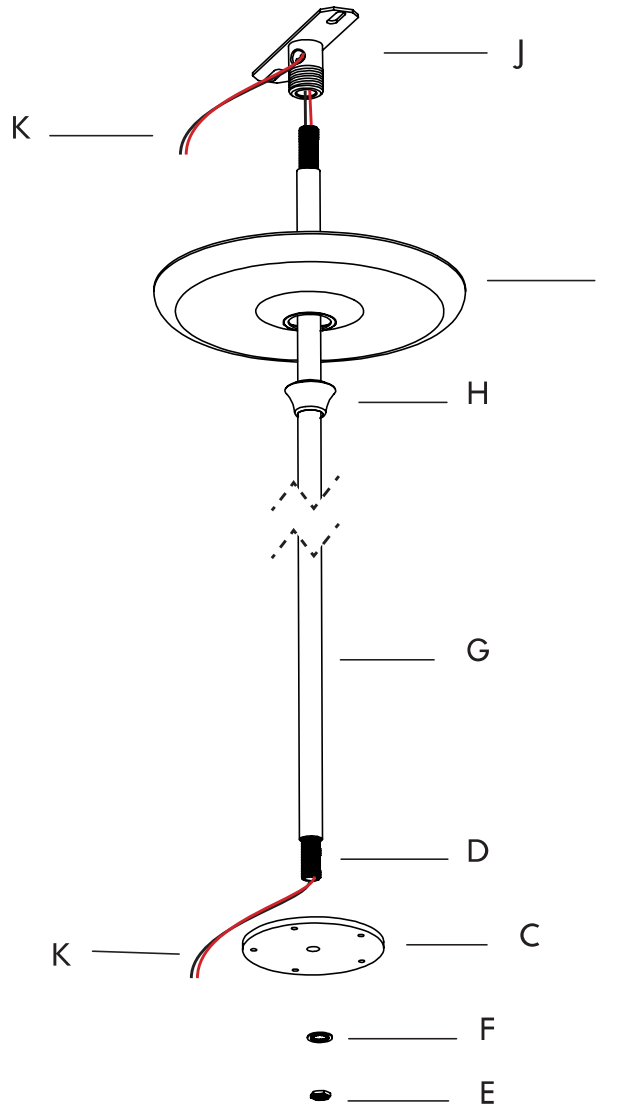

Laddi Pendant 02 | INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.


6. Connect the fixture to the stem assembly by make the low voltage wire connection with the provided 2-port wagos (L).
7. Then secure the cover-plate (C) with 5 screws (A).

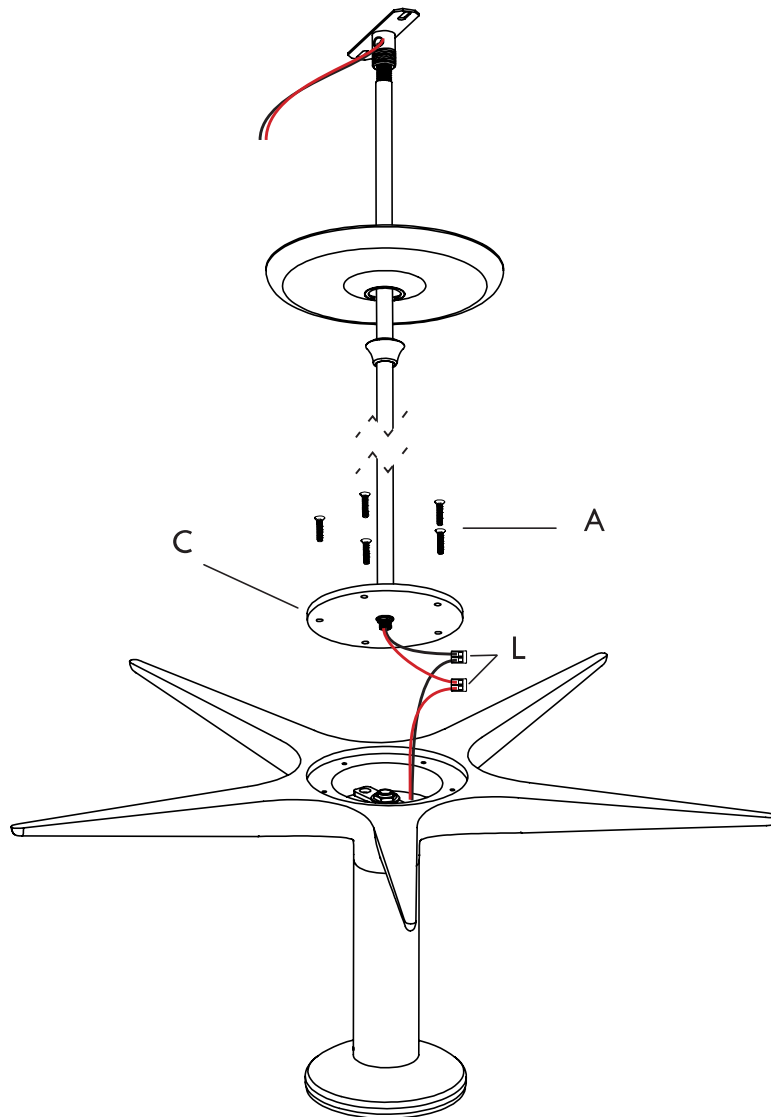

Laddi Pendant 02 | INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.

8. Bring the LED driver (M) to the J-box(N), then make the lead wire connection with the provided 2-port wagos (O).
9. Optional, make the dimming wire connection with the provided 2-port wagos (P).
10. Tuck the LED driver into the J-box, be sure to pull out the green ground wire.
11. Bring the fixture up to J-box, and make the ground wire connection with provided 2-port wagos (Q).
12. Then make the low voltage wire connection with provided 2-port wagos (R).
13. Tuck in all wires back into J-box, and secure the crossbar (J) to J-box (N) with the provided two screws (S).
14. Raise the canopy (I) over the J-box, and secure it with canopy nut (H).

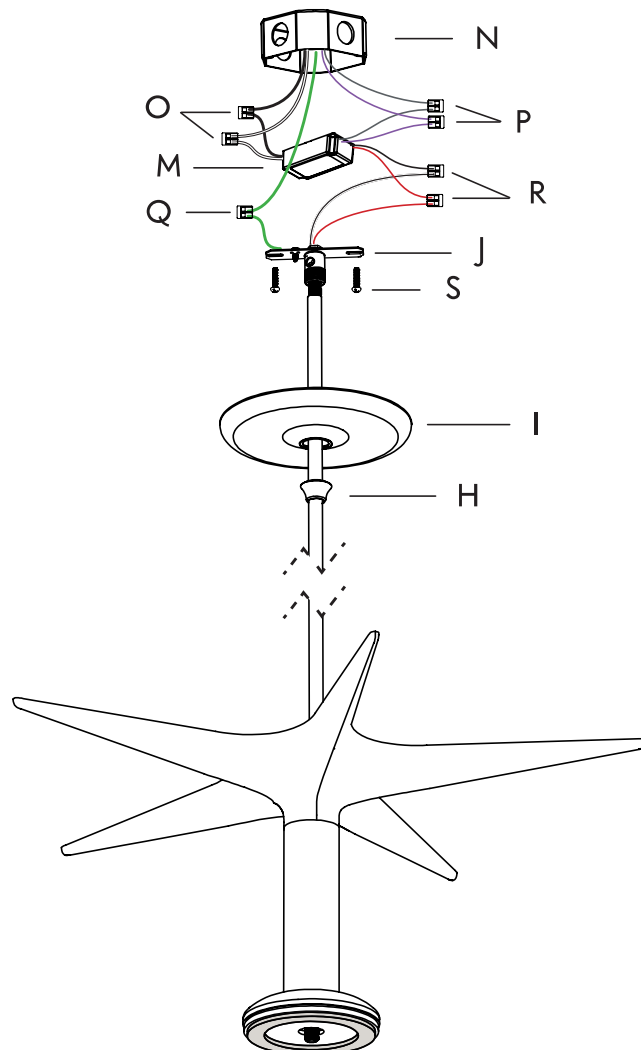

Laddi Pendant 02 | INSTALLATION

Note: Please contact a licensed electrician for installation. Ensure power is off during installation.

15. Unscrew the shade cover (T) from the main fixture (B).
16. Secure the Glass shade (U) on to the main fixture (B) with a shade cover (T).
Be sure to align the glass with the rubber gasket for even glass fitment.

