


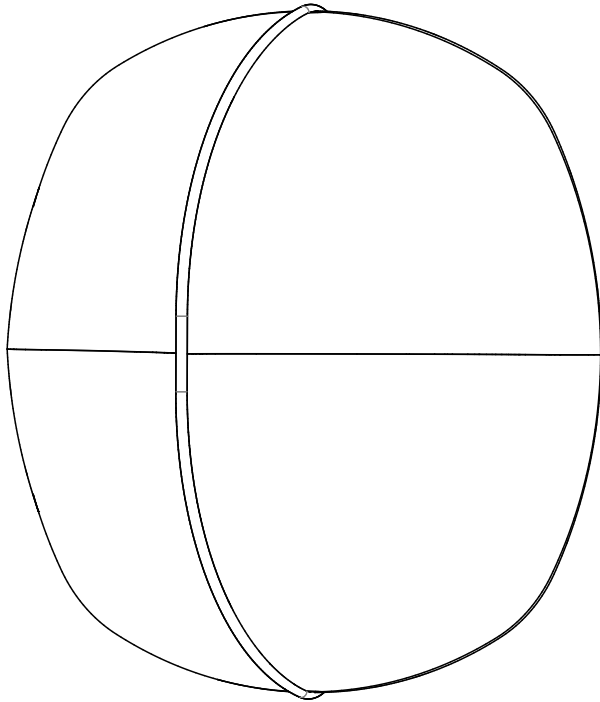

Mori Sconce

16585 rA

Low Voltage Input



CAUTION:

Before starting, turn off power at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación, apague la corriente en el tablero principal.

ATTENTION:

Coupez l'alimentation avant de proceder à l'installation.



Calling for backup? Scan above to contact our team.


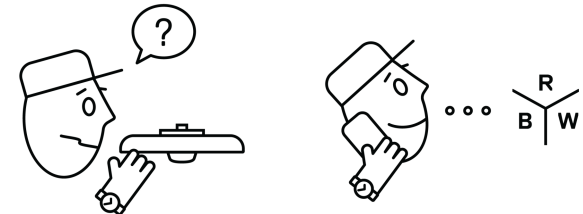


www.RBW.com

+1 212 388 0399

support@RBW.com


© RBW Studio LLC, 2013, 2020

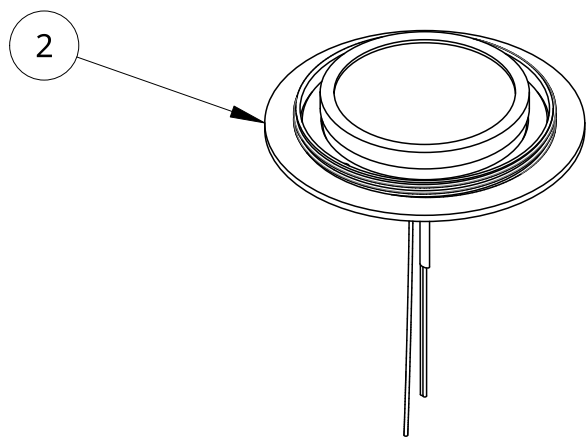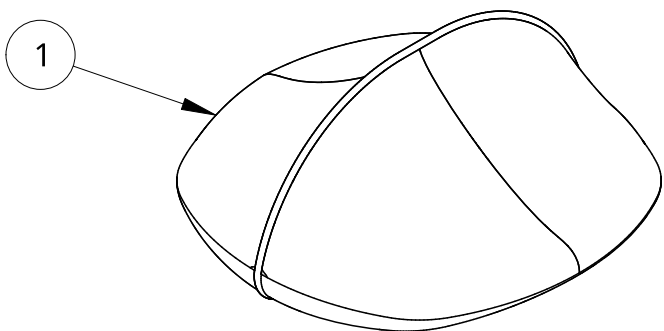

Item	Qty	Part number	Description
1	1	12301	Mori Sconce Shell
2	1	14920-27	Mori Sconce Sub-Assembly. DC - GLV50. 2700K CCT



Driver dimensions and location may vary,
consult your order confirmation for details.

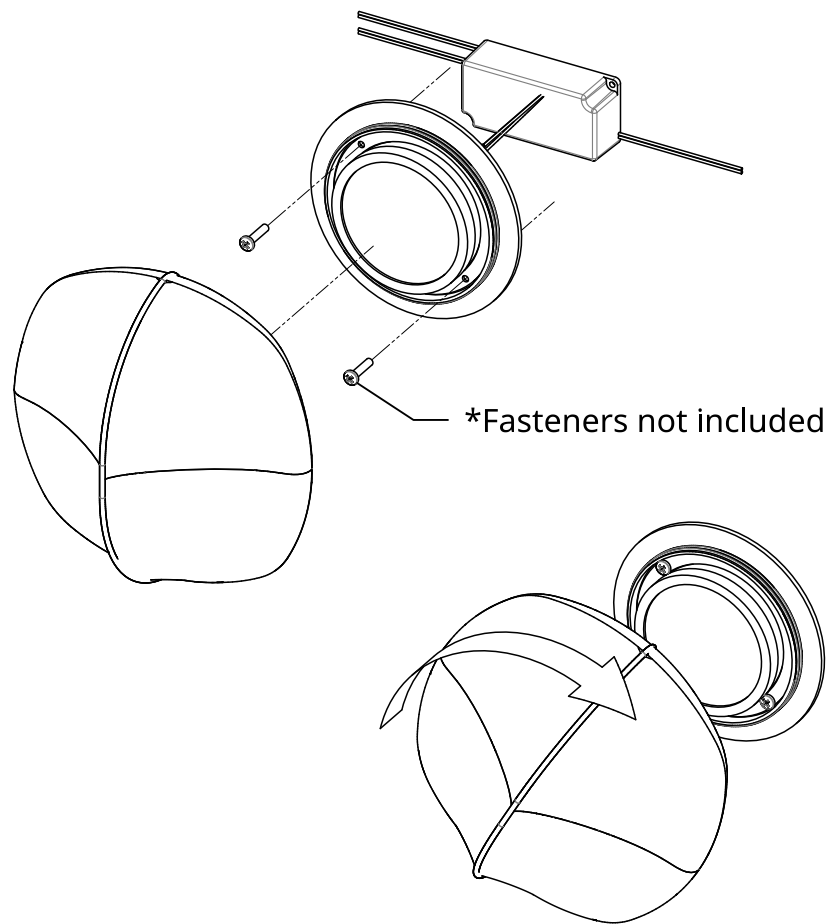

Installation - Sconce Kit

1. Connect Red (+) and Black (-) Sconce wires to low voltage leads from externally located driver.
2. Use appropriate fasteners to secure Mori Sconce Sub-Assembly to the desired mounting location.
3. Thread Mori Sconce Shade clockwise onto Mori Sconce Sub-Assembly until secure.
4. Congratulations! End of guide.