


Mori Sconce

12528 rA

AC Input

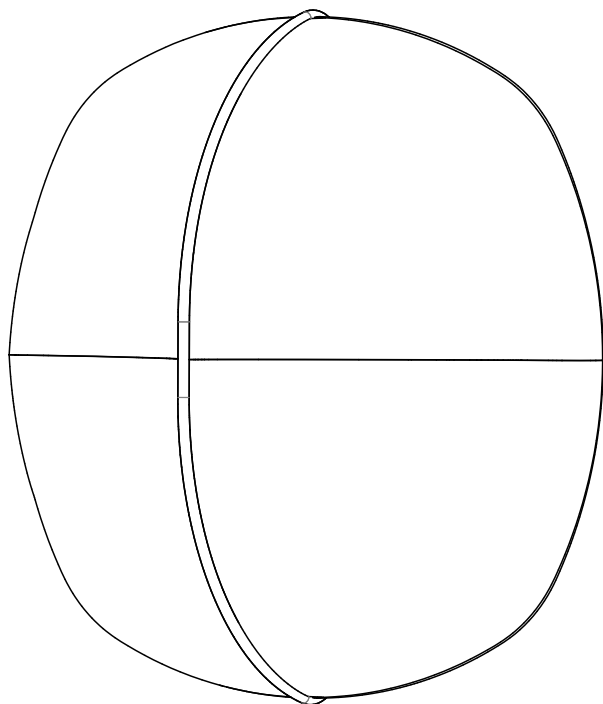

CAUTION:

Before starting, turn off power at main circuit panel.

ADVERTENCIA:



Antes de comenzar la instalación, apague la corriente en el tablero principal.

ATTENTION:

Coupez l'alimentation avant de proceder à l'installation.



Calling for backup? Scan above to contact our team.

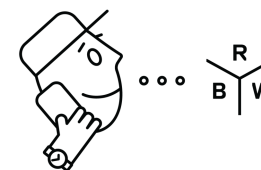
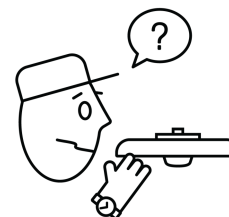


www.RBW.com

+1 212 388 1621



support@RBW.com

© RBW Studio LLC, 2013, 2020

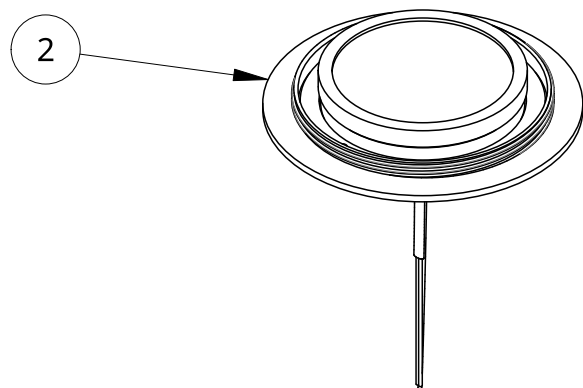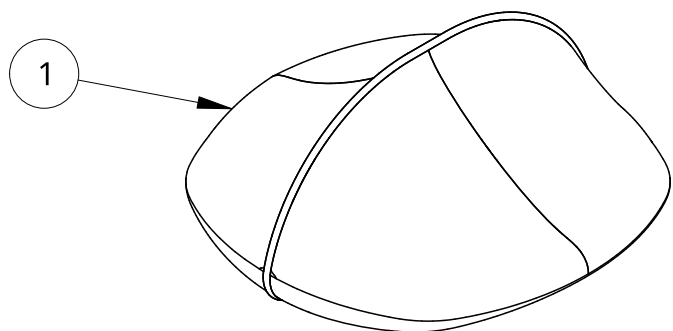

Item	Qty	Part number	Description
1	1	12301	Mori Sconce Shell
2	1	12447-27	Mori Sconce Sub-Assembly

*Fasteners not included

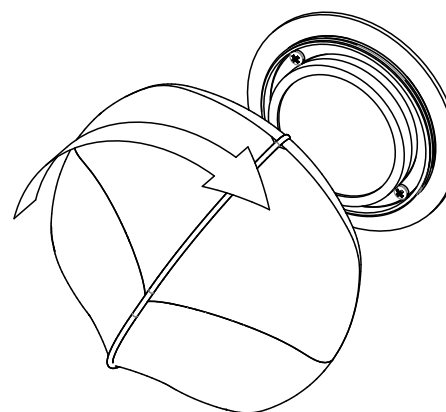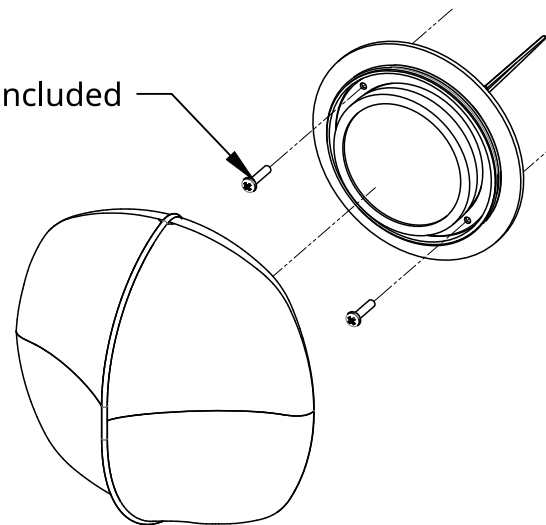

Installation - Sconce Kit

1. Connect Mori Sconce leads to power feed in mounting location.
2. Use appropriate fasteners to secure Mori Sconce Sub-Assembly to the desired mounting location.
3. Thread Mori Sconce Shade clockwise onto Mori Sconce Sub-Assembly until secure.
4. Congratulations! End of guide.