


Brim

12544 rA

Sconce
AC Input

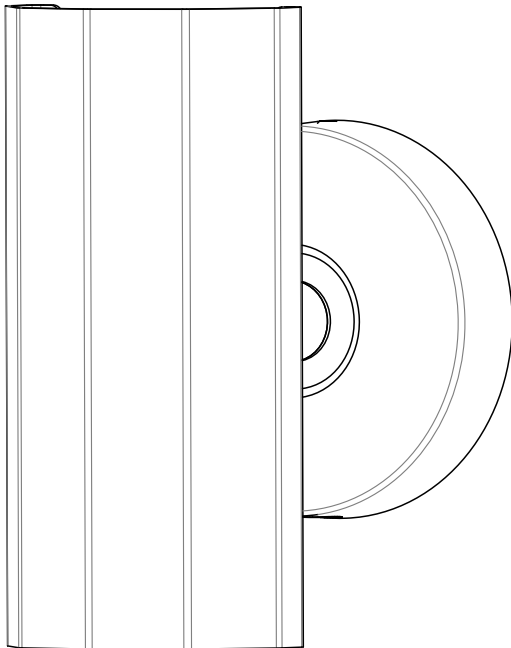

CAUTION:

Before starting, turn off power
at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación,
apague la corriente en el tablero
principal.

ATTENTION:

Coupez l'alimentation avant de
procéder à l'installation.



Calling for backup? Scan above
to contact our team.

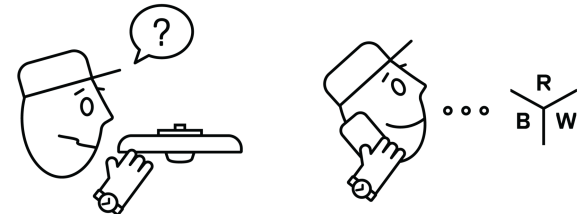


www.RBW.com


+1 212 388 1621

support@RBW.com

© RBW Studio LLC, 2013, 2020

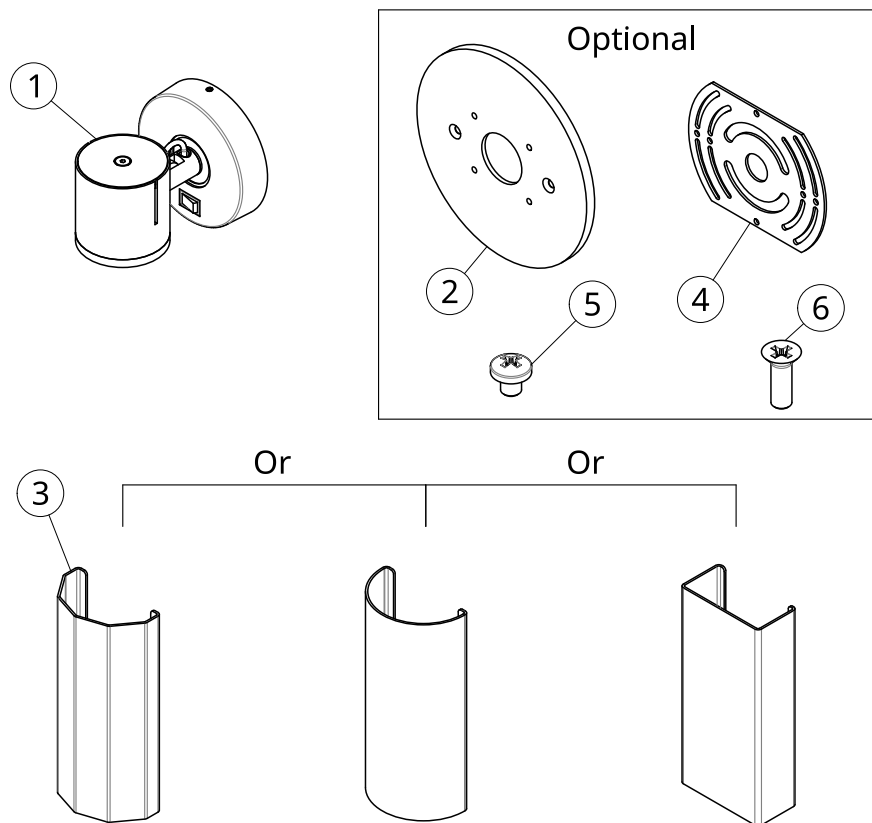


Item	Qty	Part number	Description
1	1	10297-PC20-27	Brim Head + Housing Switch Sub-assembly
2	1	12588-PC20	Junction Cover Plate
3	1	12605-PC20	Brim Shade 1
4	1	12609	Universal Wall Plate
5	4	90272A189	Pan head machine screw #8-32 x 0.1875 Stainless Steel
6	2	90471A270	Flat countersunk head (82) machine screw #8-32 x 0.5 Stainless Steel

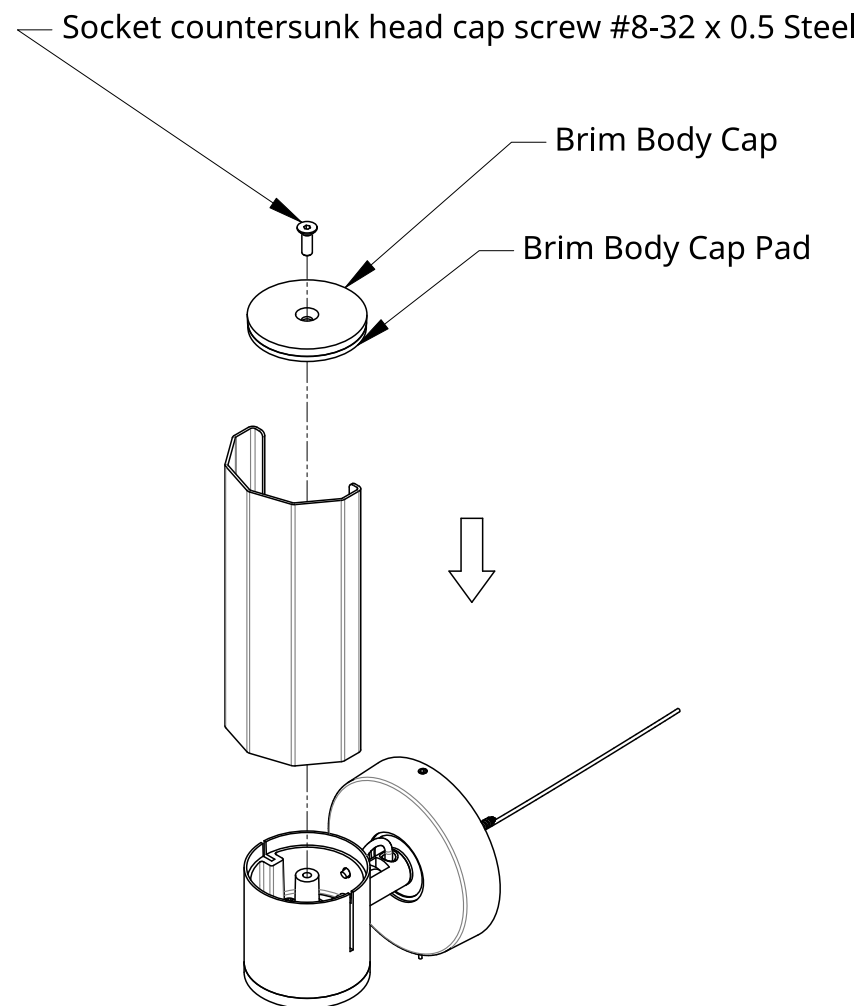

Installation - Brim Shade

1. Remove 8-32 Countersunk Cap Screw Body Cap and Body Cap Pad from Brim Head and Housing Sub-assembly.
2. Insert Brim Shade into slots in Brim head.
3. Reinstall Body Cap, Cap Pad and 8-32 Countersunk Cap Screw.

*If using Junction Box Cover refer to Junction Box Cover steps after step 1

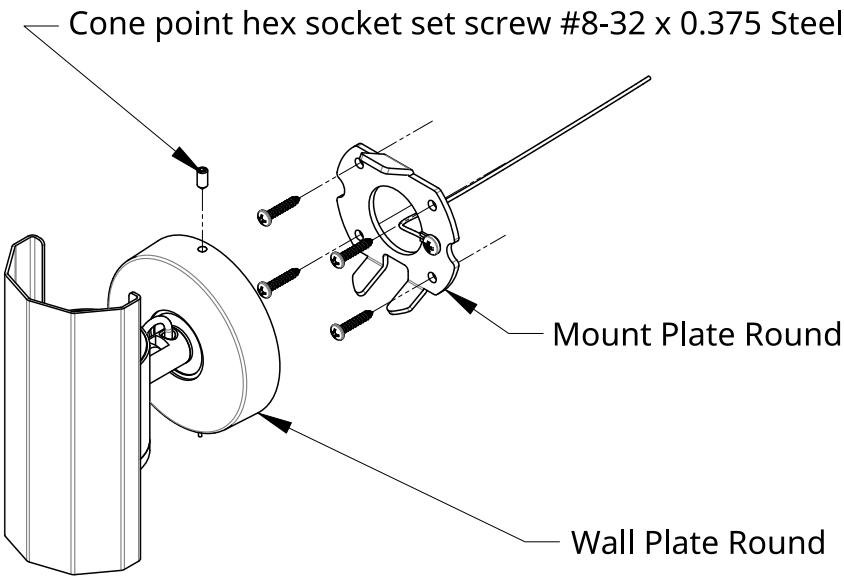


Surface	Recommended Fastener
Stud-Backed Drywall	#10 Drywall Screw
Hollow Drywall	Molly or Toggle Bolt
Concrete Slab	10-24 Expanding Anchor
Wood	#10 Wood Screw

Installation - Mount Plate

1. Remove Set Screw from Wall Plate Round to remove Mount Plate.
2. Fasten Mount Plate to desired mounting location using appropriate fasteners.
3. Connect scone leads to power feed through Mount Plate center hole.
4. Place luminire over Mount Plate Round and secure with Set Screw.

*Optional Junction Box Cover

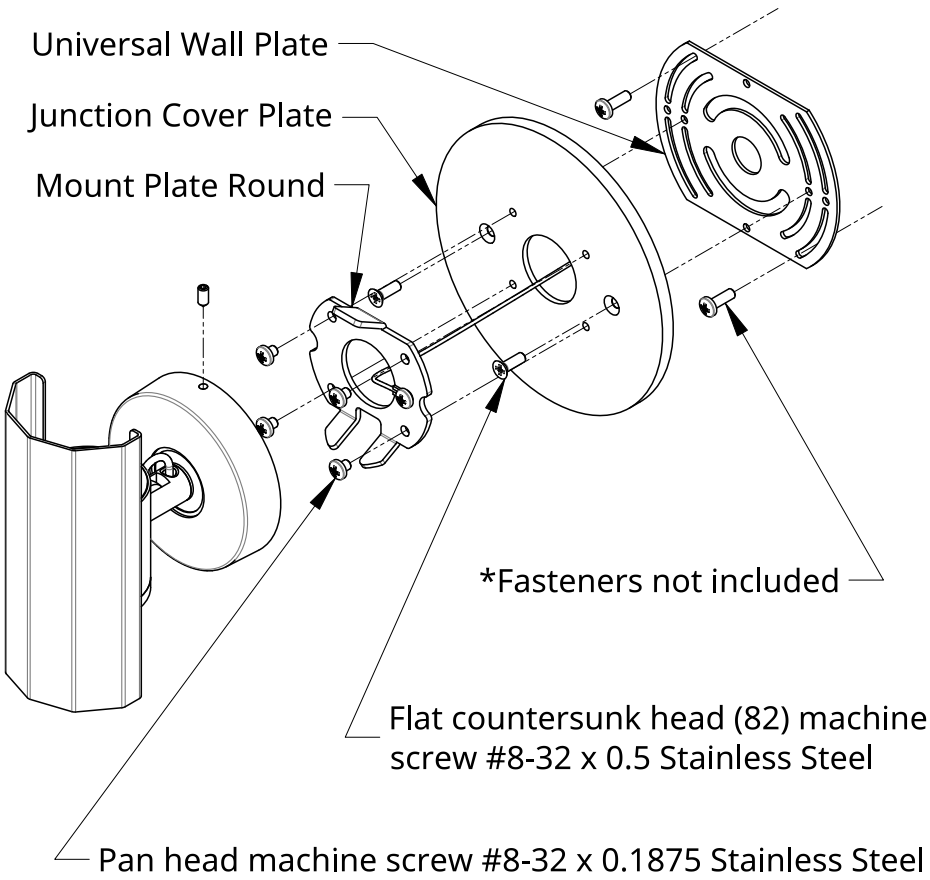

Installation - Junction Box Cover

1. Fasten Universal Wall Plate to desired mounting location using appropriate fasteners.
2. Fasten Junction Cover Plate to Universal Wall Plate using 2 #8-32 Flat Head Machine Screws.
3. Fasten Mount Plate Round to Junction Cover Plate with 4 #8-32 Pan Head Machine Screws.
4. Place luminire over Mount Plate Round and secure with Set Screw.