




# Monocle

14799 rA

Low Voltage Input

Note: External power supply may be required.

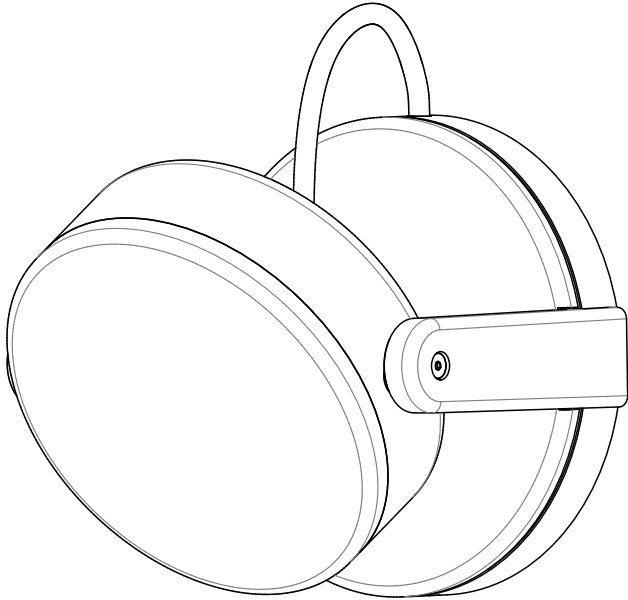

## CAUTION:

Before starting, turn off power at main circuit panel.

## ADVERTENCIA:



Antes de comenzar la instalación, apague la corriente en el tablero principal.

## ATTENTION:

Coupez l'alimentation avant de procéder à l'installation.



Calling for backup? Scan above to contact our team.

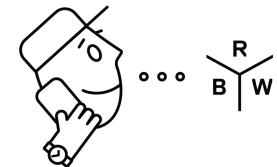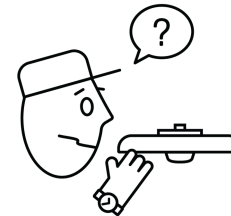


[www.RBW.com](http://www.RBW.com)



+1 212 388 0399

[support@RBW.com](mailto:support@RBW.com)

© RBW Studio LLC, 2013, 2020

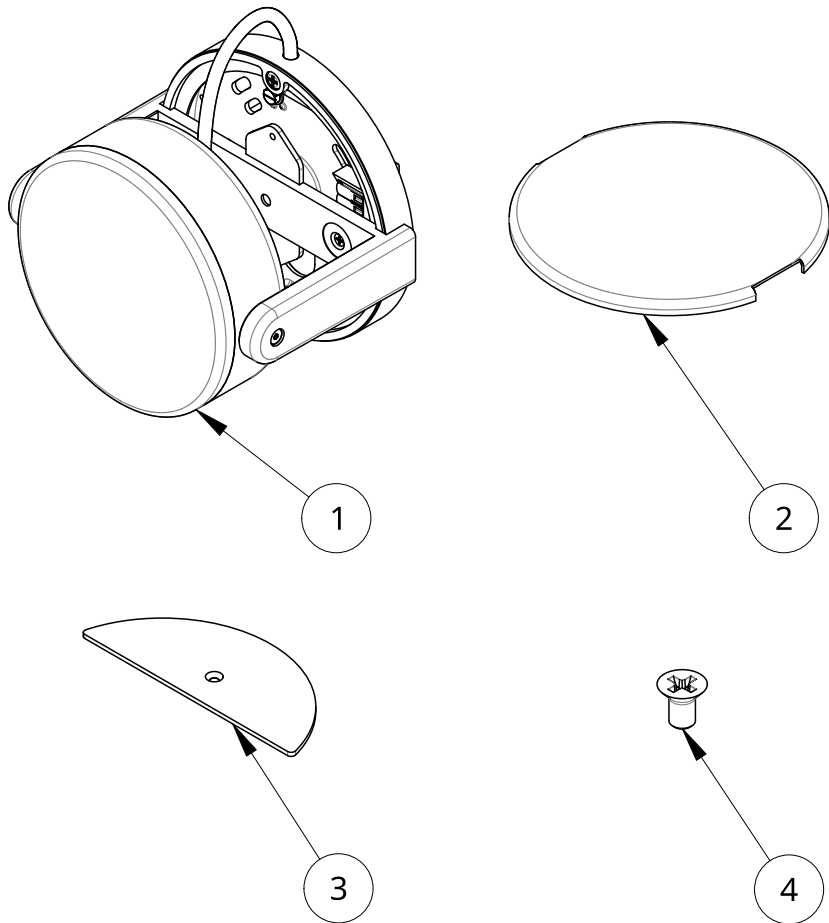


| Item | Qty | Part number | Description                                  |
|------|-----|-------------|--|
| 1    | 1   | 14772-PC20  | Monocle Assembly PC20                        |
| 2    | 1   | HB-RB       | Rotary Base PC20                             |
| 3    | 2   | 12333       | Wire Cover                                   |
| 4    | 2   | 90471A205   | #6-32 x 1/4" Flat head (82) machine screw SS |

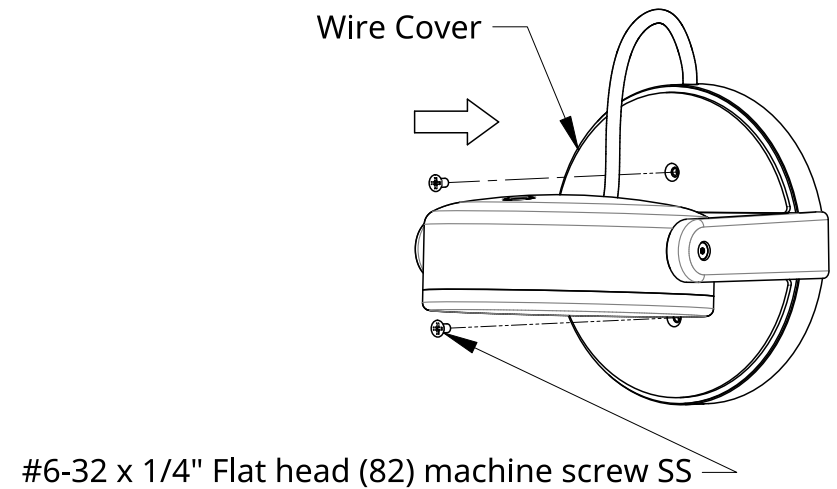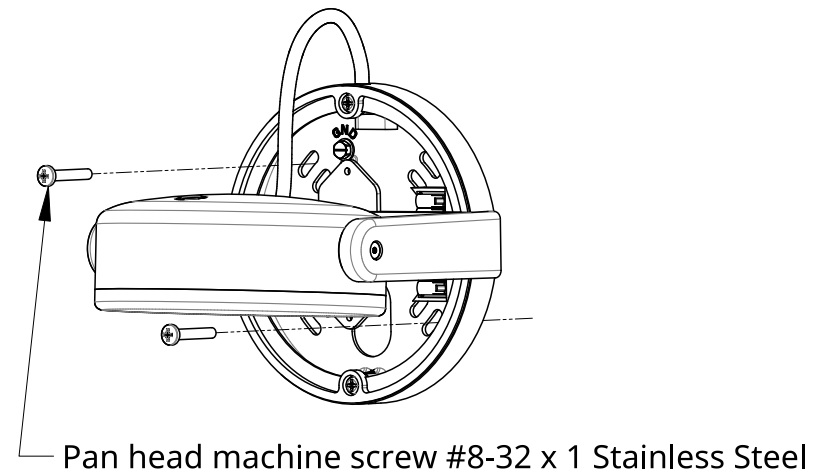

#### Installation - Monocle Touch Assembly

1. Connect Red (+) and Black (-) Sconce wires to low voltage leads from externally located driver.
2. Fasten Monocle Touch Assembly to desired mounting location using #8-32 Pan Head Screws.
3. Place Wire Covers on Monocle Touch Assembly.
4. Secure Wire Covers by fastening #6-32 Flat Head Screws.

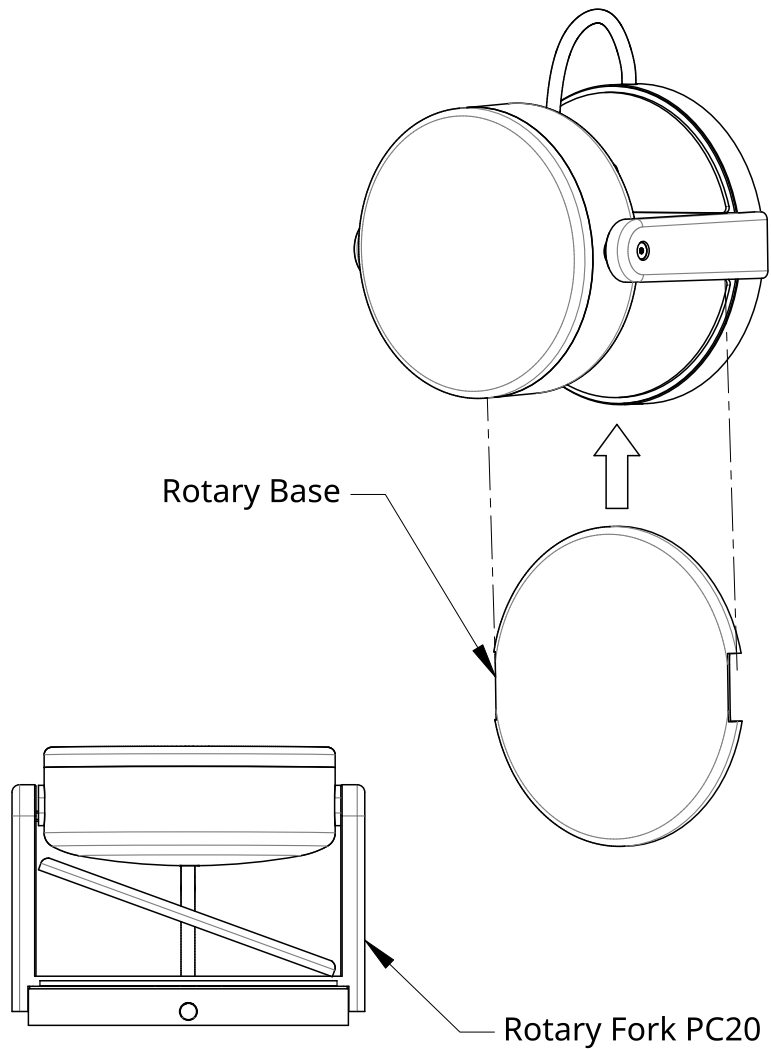

Page intentionally left blank

### Installation - Rotary Base

1. Insert Rotary Base between Rotary Fork on an angle so notches are aligned with Rotary Fork.
2. Rotary Base will connect magnetically, then remove stickers from interior of Fork.
3. Congratulations! End of guide.