


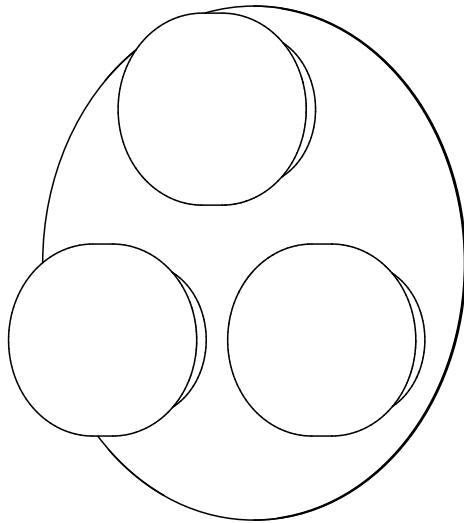

Pastille

12434 rA

Vanity and Cluster
Low Voltage Input



CAUTION:

Before starting, turn off power
at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación,
apague la corriente en el tablero
principal.

ATTENTION:

Coupez l'alimentation avant de
procéder à l'installation.



Calling for backup? Scan above
to contact our team.

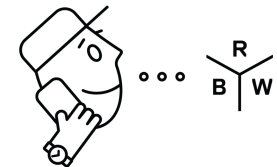


www.RBW.com


+1 212 388 1621

support@RBW.com


© RBW Studio LLC, 2013, 2020

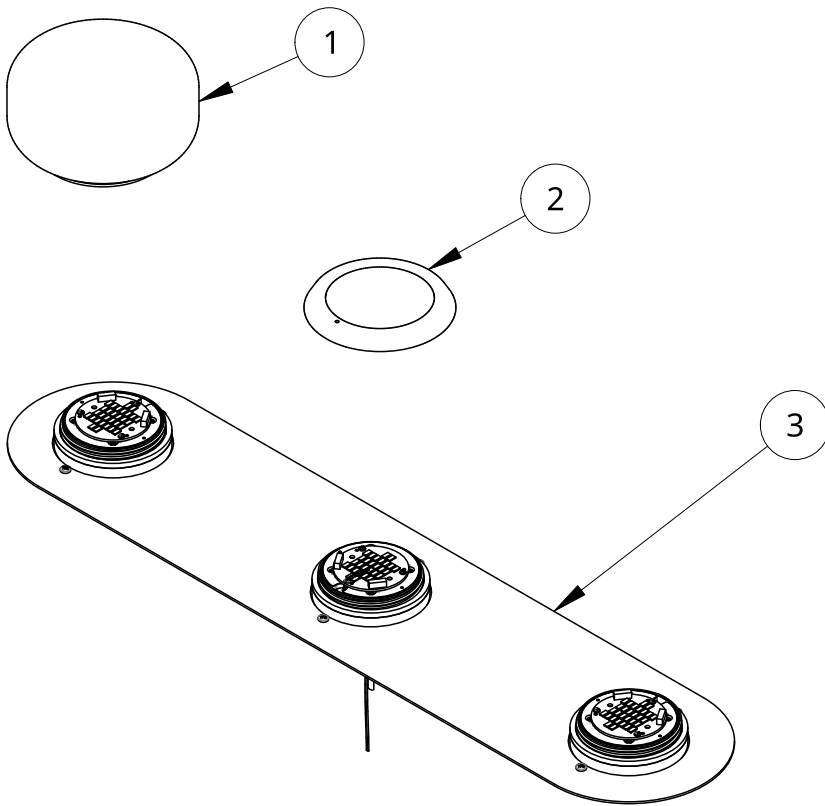

Item	Qty	Part number	Description
1	3	11955	Pastille Globe IP20 Sub-Assembly
2	3	11945-PC30	Mount Collar PC30
3	1	11962-PC30-27	Pastille Vanity DC - GLV 50 IP20 Sub-Assembly

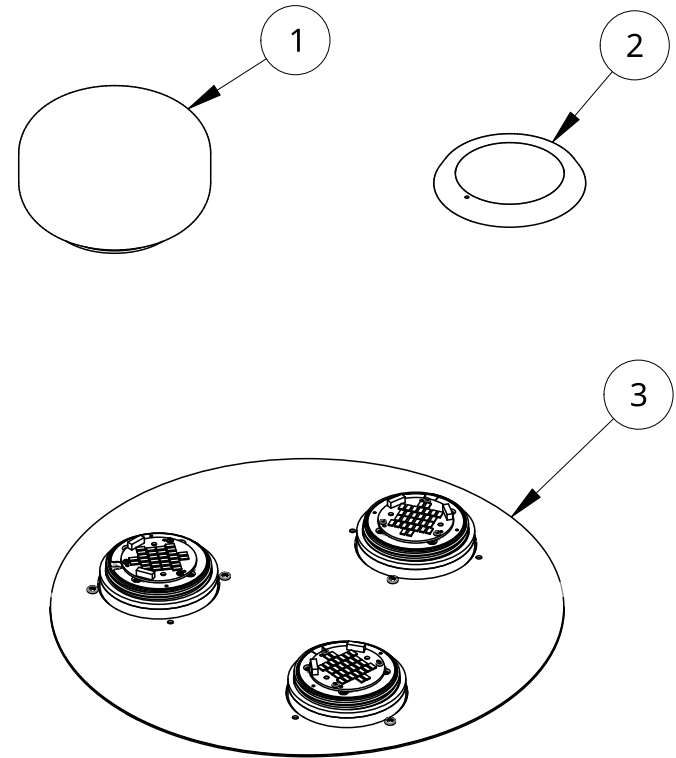


Item	Qty	Part number	Description
1	3	11955	Pastille Globe IP20 Sub-Assembly
2	3	11945-PC30	Mount Collar PC30
3	1	11965-PC30-27	Pastille Cluster DC - GLV 50 IP20 Plate Sub-Assembly

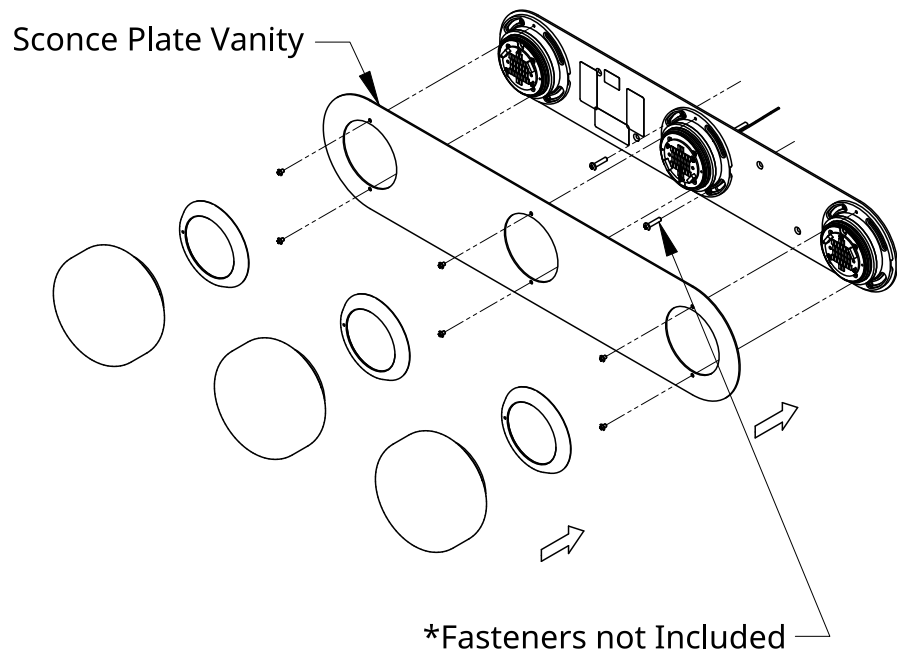

Installation - Pastille Vanity

1. Connect low voltage leads from the wall to the leads from Sconce Kit.
2. Use appropriate fasteners to fasten the Sconce Kit to the mounting surface.
3. Fix Sconce Plate to Sconce Kit assemblies using included 6-32 Machine Screws.
4. Place Mount Collar over Sconce Kits.
5. Thread Pastille Globes onto the Sconce Kits to tightly secure Mount Collars.

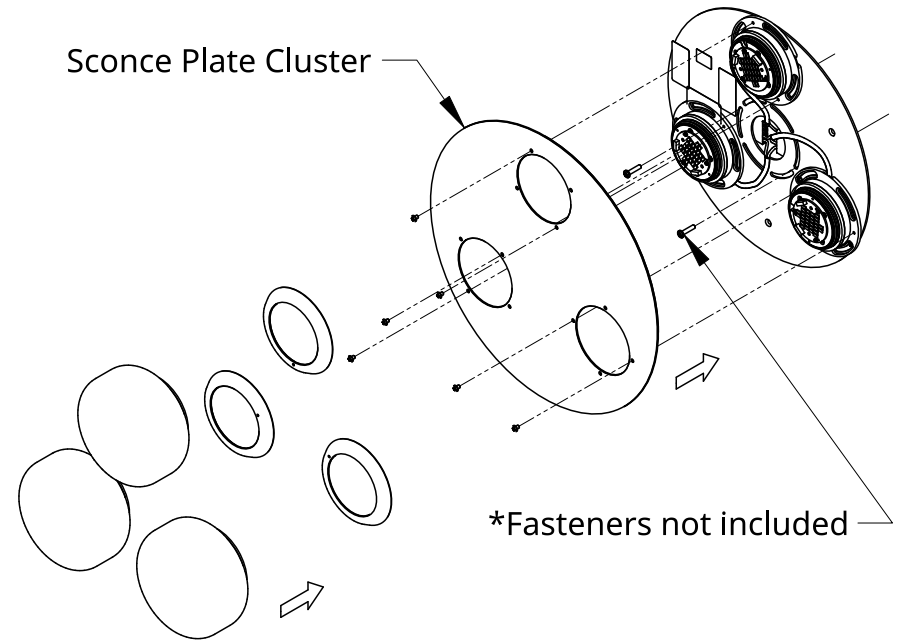

Installation - Pastille Cluster

1. Refer to previous steps.
2. Congratulations! End of guide.