


# Latis Individual 10970 rA

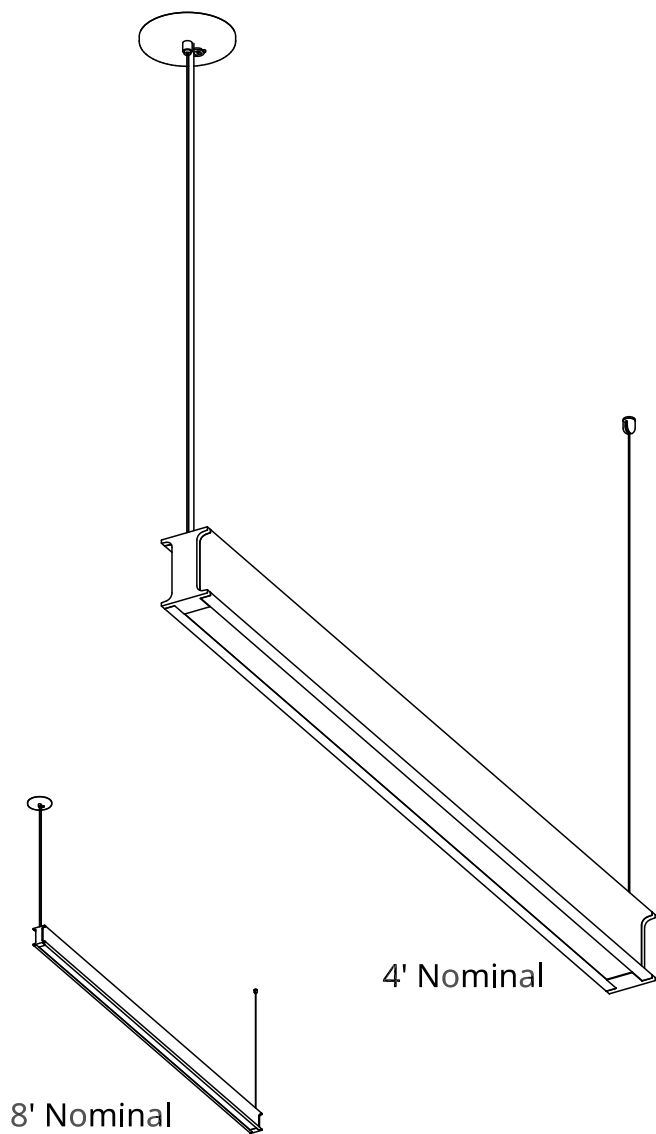

## CAUTION:


Before starting, turn off power at main circuit panel.

## ADVERTENCIA:

Antes de comenzar la instalación, apague la corriente en el tablero principal.


## ATTENTION:


Coupez l'alimentation avant de procéder à l'installation.

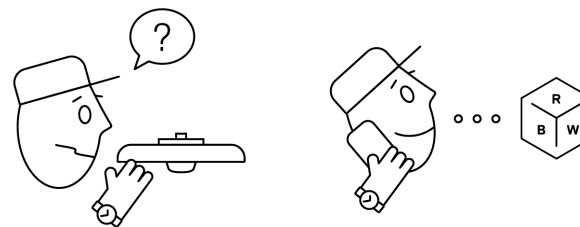

[www.RBW.com](http://www.RBW.com)  
+1 212 388 1621  
[support@RBW.com](mailto:support@RBW.com)


Item No.	Qty	Part number	Description
1	1	A-10204-32	46 Single Cosine/Cover
2	1	10783	Aircraft Cable Gripper Body
3	1	10784	Aircraft Cable Gripper Base
4	1	CC1/4-202P	2 Piece Cable Coupler
5	1	SVT-72-1	SVT Power Cord 72 in L
6	1	NU233WZ	1-8 IPS. Zinc Plated Steel Hex Head Nut
7	1	10782	CrossBar #178/#58
8	1	102	Heyco-1800-1801
9	1	10795	CP08 Canopy
10	2	AC 3/64-150	Aircraft Cable
11	1	10632	Latis Cap Upper End
12	1	10631	Latis Cap Upper End Power

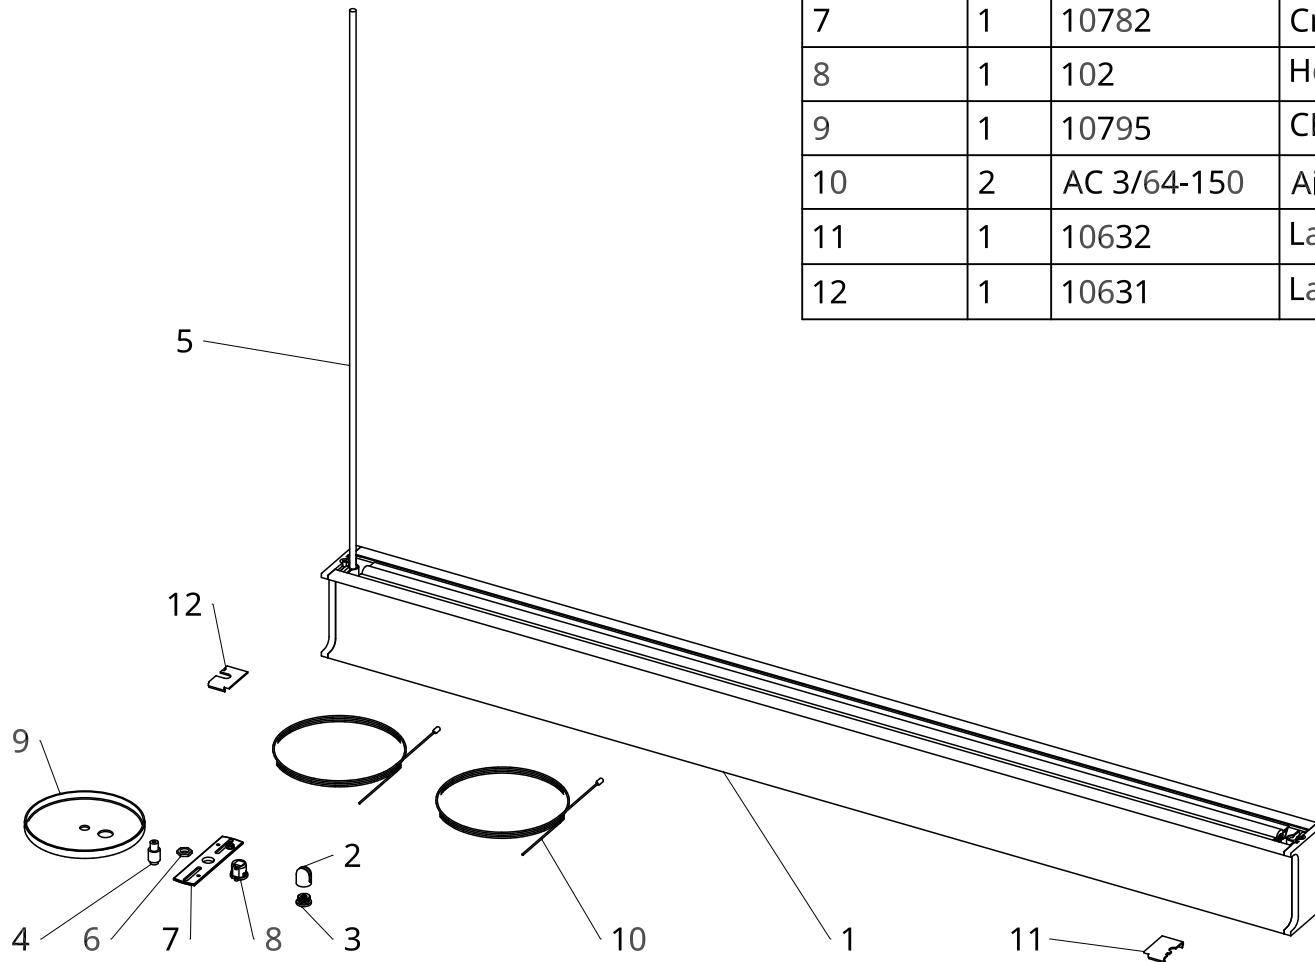

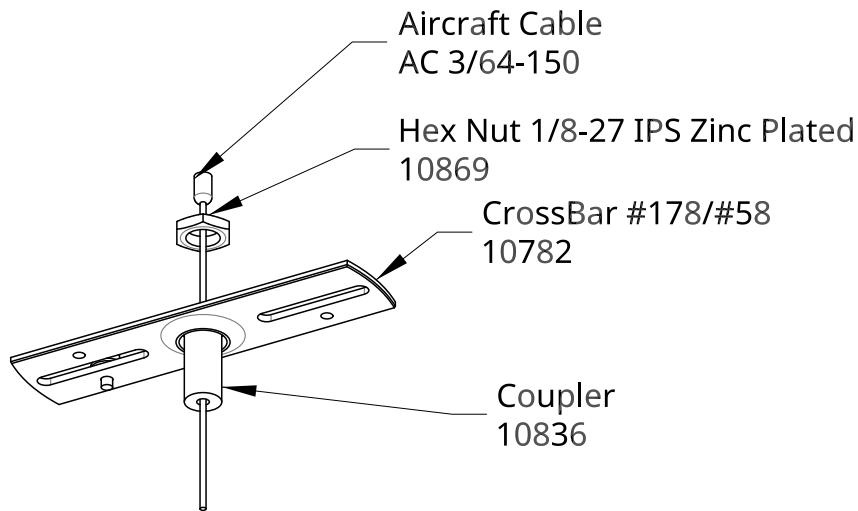

#### Installation - CROSSBAR



1. Thread Coupler into Crossbar.
2. Add Hex Nut and Cable.
3. Screw Crossbar into junction box.

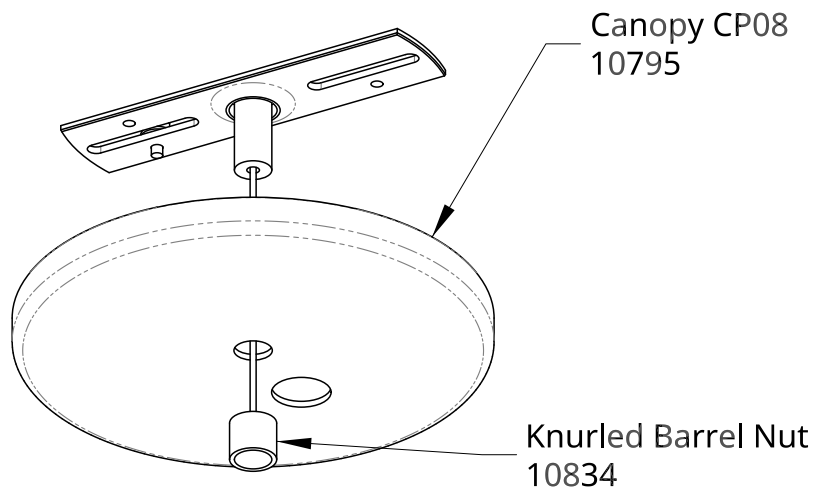

#### Installation - CANOPY

1. Place Canopy on Coupler at ceiling.
2. Screw Knurled Barrel Nut onto Coupler to retain Canopy.
3. Do not trim Cable at this time.



Ceiling Surface	Recommended Fastener
Stud-Backed Drywall	#10 Drywall Screw
Hollow Drywall	Molly or Toggle Bolt
Concrete Slab	10-24 Expanding Anchor
Wood	#10 Wood Screw

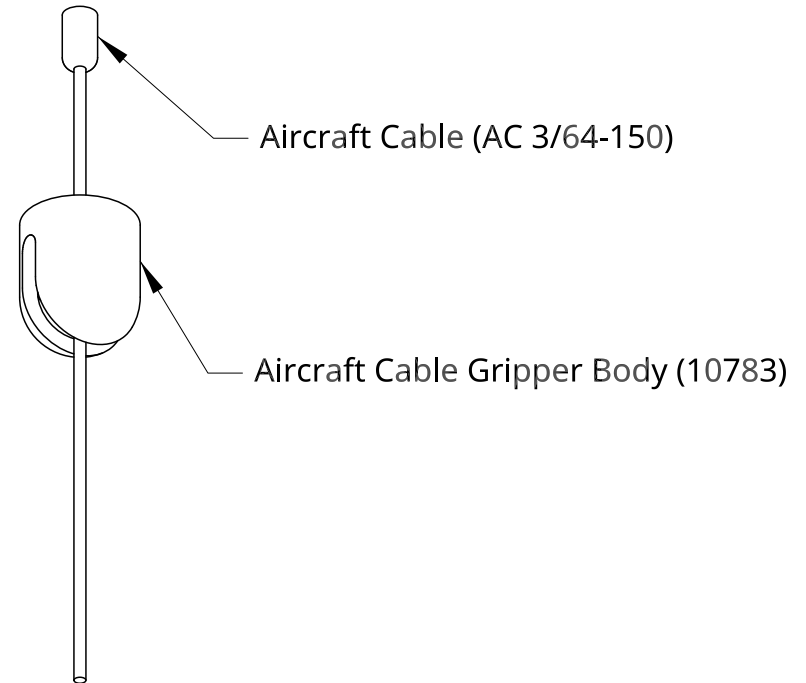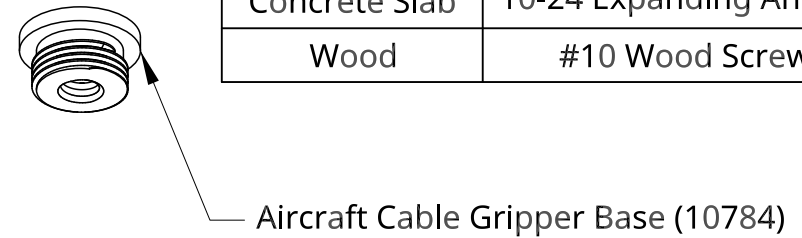

#### Installation - HANG POINT


1. Mount Gripper Base to ceiling with appropriate fastener. (Not Provided)
2. Add Cable to Gripper Body and screw onto Base.
3. Do not trim Cable at this time.

Page Intentionally Left Blank

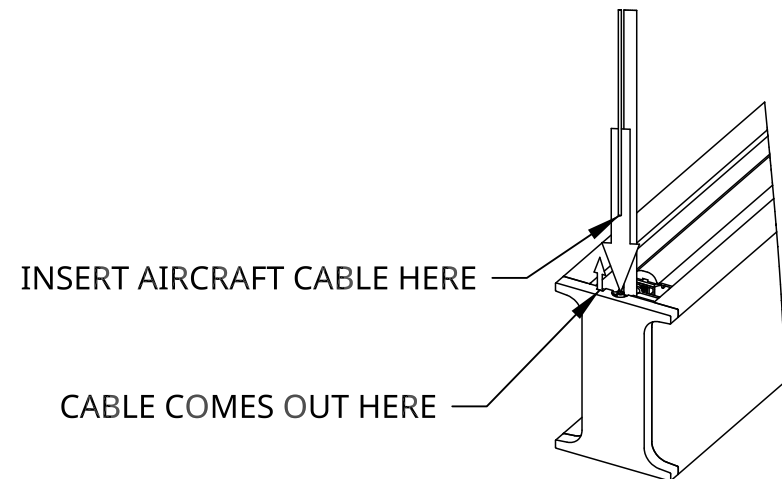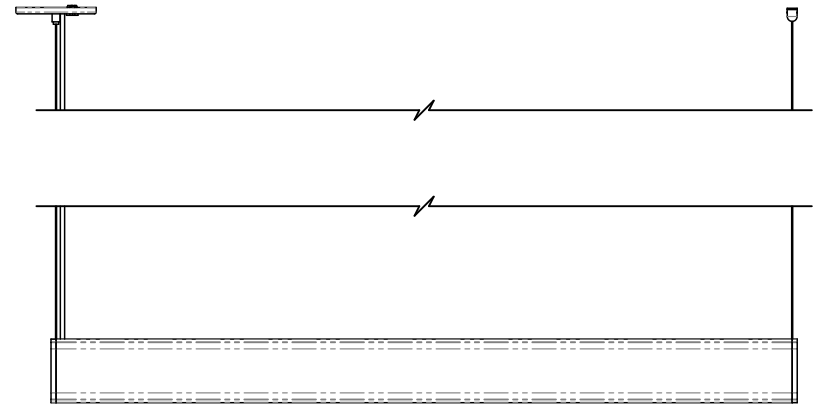


#### Installation - HANG LUMINAIRE

1. Raise fixture and insert cable in each end. Make sure the the cord on the fixture is under the canopy on the ceiling.
2. Adjust the height and level fixture.
3. Do not trim cables at this time.

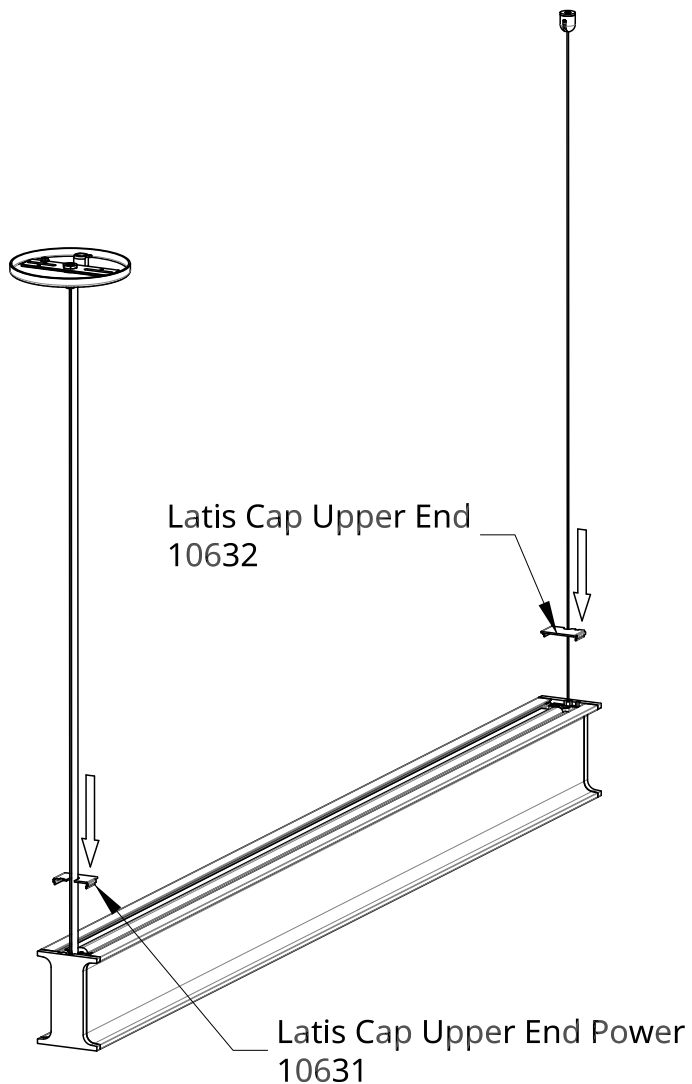

#### Installation - COMPLETE ASSEMBLY WITH CAPS

1. Snap in Caps - Upper End Power and Upper End.

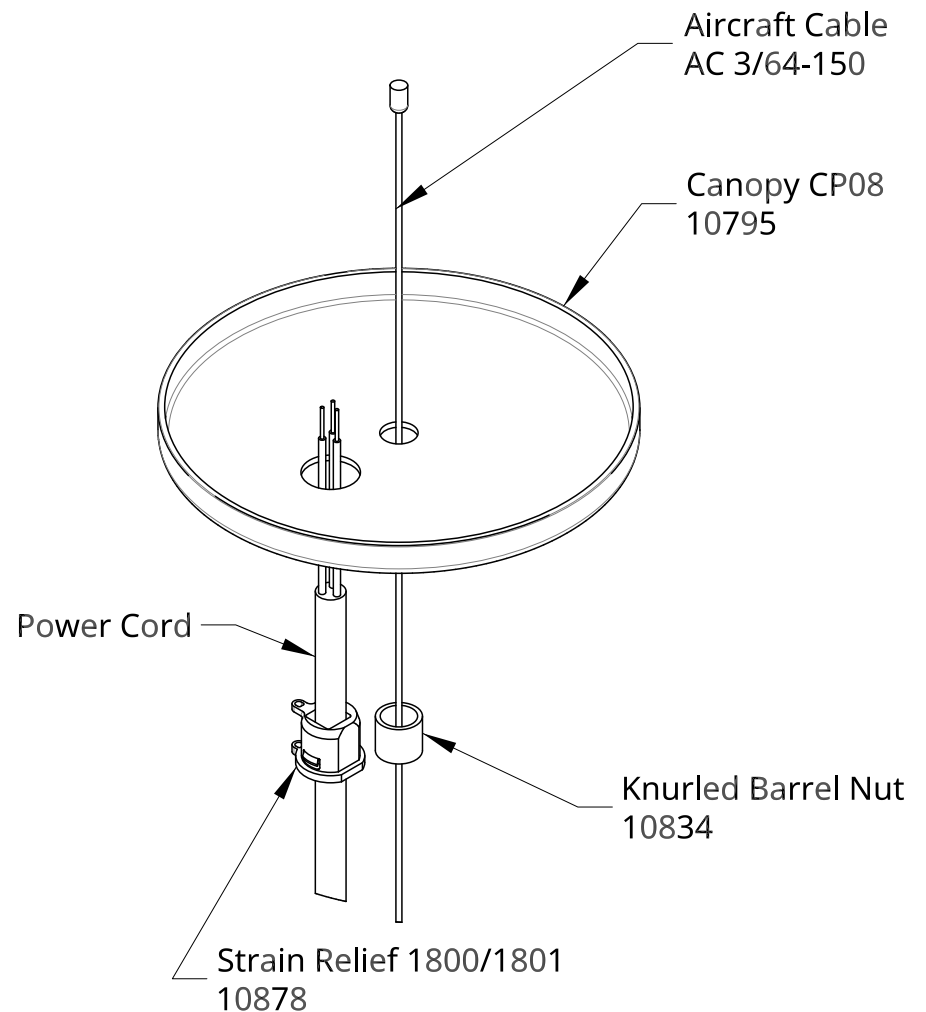

#### Installation - CONNECT LUMINAIRE TO POWER

1. Unscrew Knurled Barrel Nut and lower Canopy.
2. Insert Cord into Strain Relief.
3. Insert Cord and Strain Relief into Canopy.
4. Connect wires from Cord to power.
5. Raise Canopy and screw Knurled Barrel Nut in place.
6. Check height and adjust level. Trim Aircraft Cables.
7. Congratulations! End of guide.