


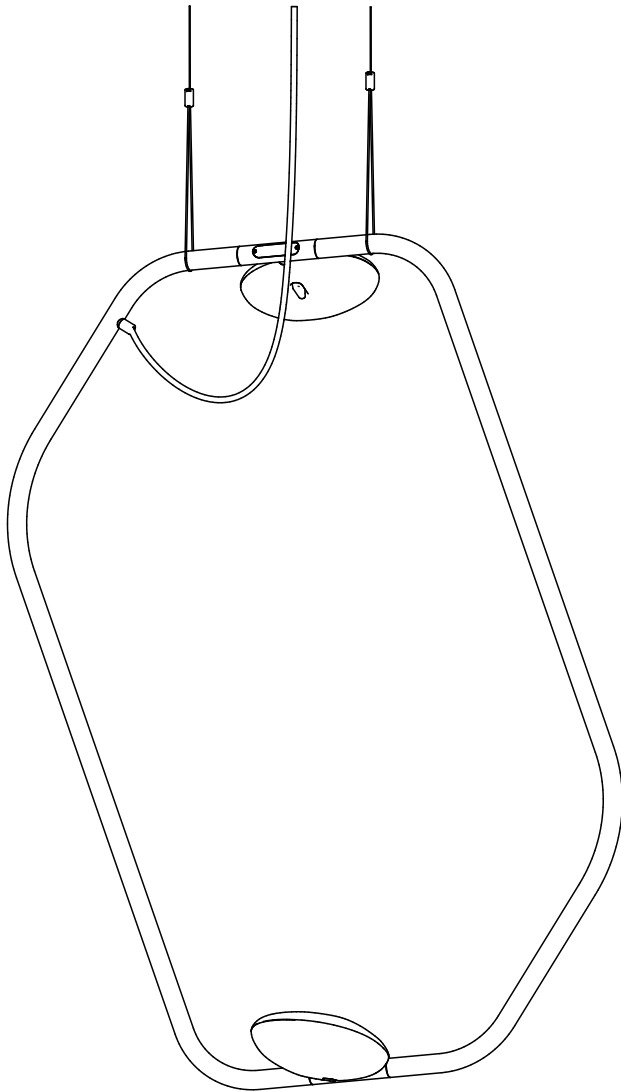

Palindrome

12523 rA

AC Input



CAUTION:

Before starting, turn off power at main circuit panel.

ADVERTENCIA:



Antes de comenzar la instalación, apague la corriente en el tablero principal.

ATTENTION:

Coupez l'alimentation avant de proceder à l'installation.



Calling for backup? Scan above to contact our team.

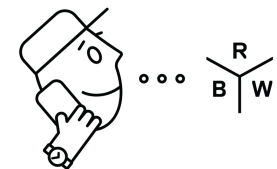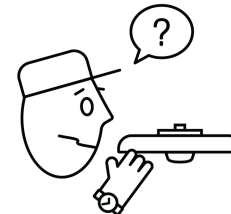


www.RBW.com

+1 212 388 1621


support@RBW.com

© RBW Studio LLC, 2013, 2020


* Suspension point locations determine product orientation

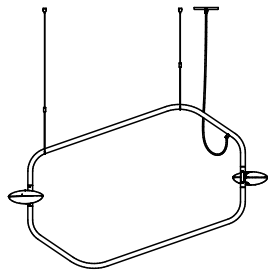


PD2

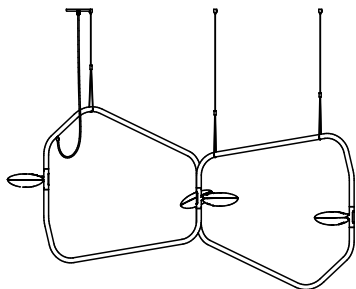

PD4

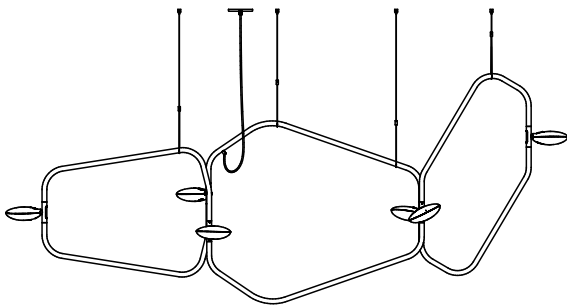


PD6

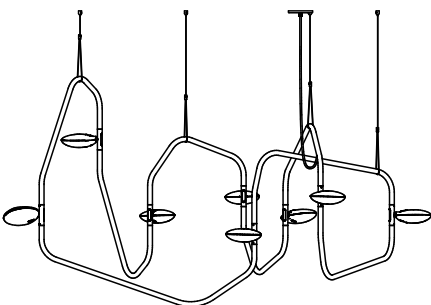

PD8


Configurations				
Product	Item	QTY	Part Number	Description
PD2	1	1	12512	Palindrome 2 Frame
	2	2	12516-27	Palindrome Lamp Assembly
	3	1	12518	Palindrome Canopy Kit
	4	1	12519	Palindrome 2 Suspension Kit
PD4	1	1	12513	Palindrome 4 Frame
	2	4	12516-27	Palindrome Lamp Assembly
	3	1	12518	Palindrome Canopy Kit
	4	1	12520	Palindrome 4 Suspension Kit
PD6	1	1	12514	Palindrome 6 Frame
	2	6	12516-27	Palindrome Lamp Assembly
	3	1	12518	Palindrome Canopy Kit
	4	1	12521	Palindrome 6 Suspension Kit
PD8	1	1	12515	Palindrome 8 Frame
	2	8	12516-27	Palindrome Lamp Assembly
	3	1	12518	Palindrome Canopy Kit
	4	1	12522	Palindrome 8 Suspension Kit

* Part configurations may vary depending on product SKU (refer to table on page 2)

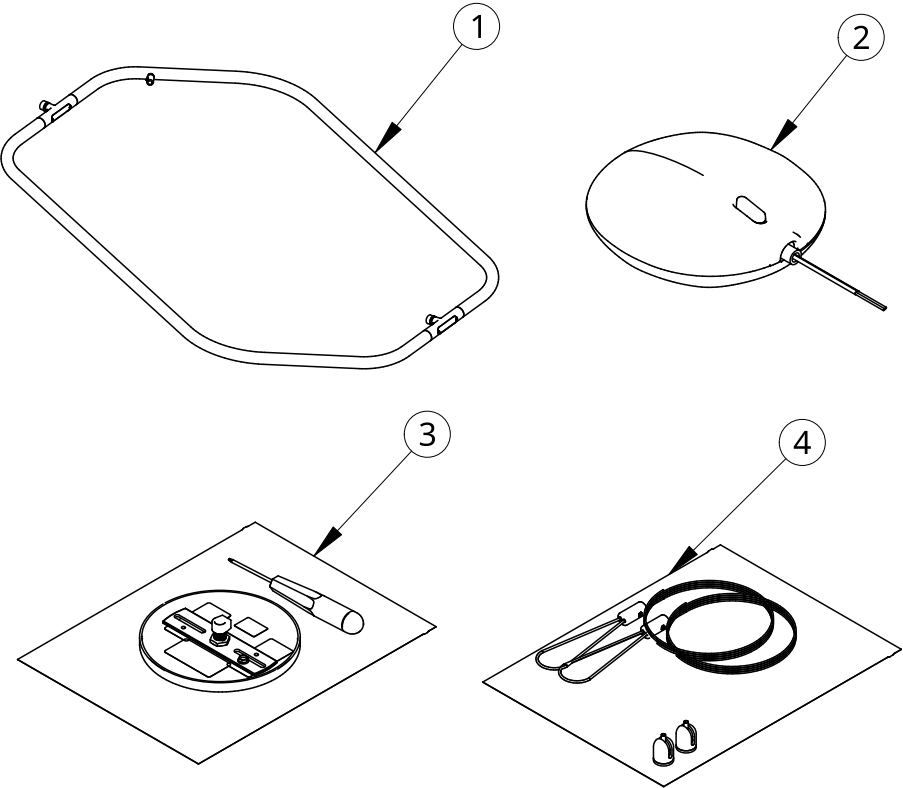

Item	Qty	Part number	Description
1	1	12512	Palindrome 2 Frame
2	2	12516-27	Palindrome Lamp Assembly
3	1	12518	Palindrome Canopy Kit
4	1	12519	Palindrome 2 Suspension Kit


* Assembly and installation requires 2+ people

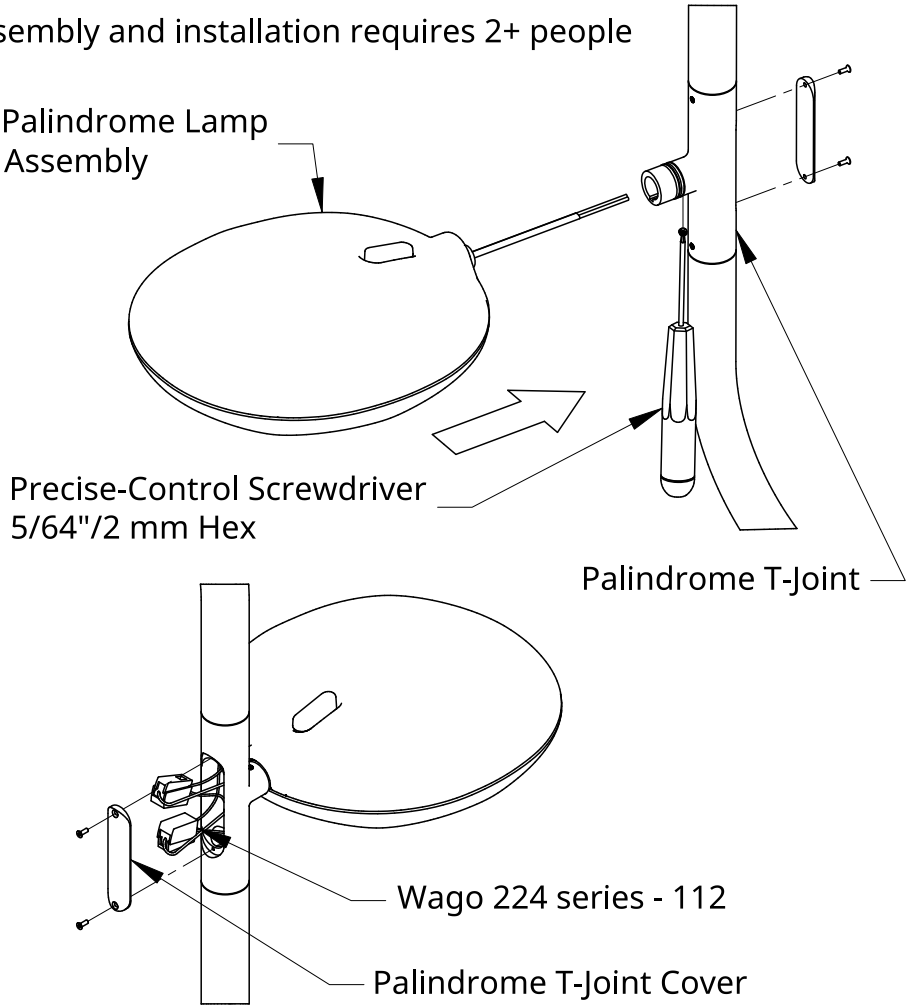

Installation - Glass Lamp


1. Remove set screw using included 2mm Hex Screwdriver and remove two PH flat head screws and T-Joint Cover.
2. Insert Glass Lamp Assembly into T-Joint.
3. Fasten Set Screw to secure Lamp Assembly in place.
4. Connect leads from Lamp Assembly to corresponding Wago connectors.
5. Re-attach T-Joint Cover by fastening two PH flat head screws.

* Fasten Gripper Base to a secure location

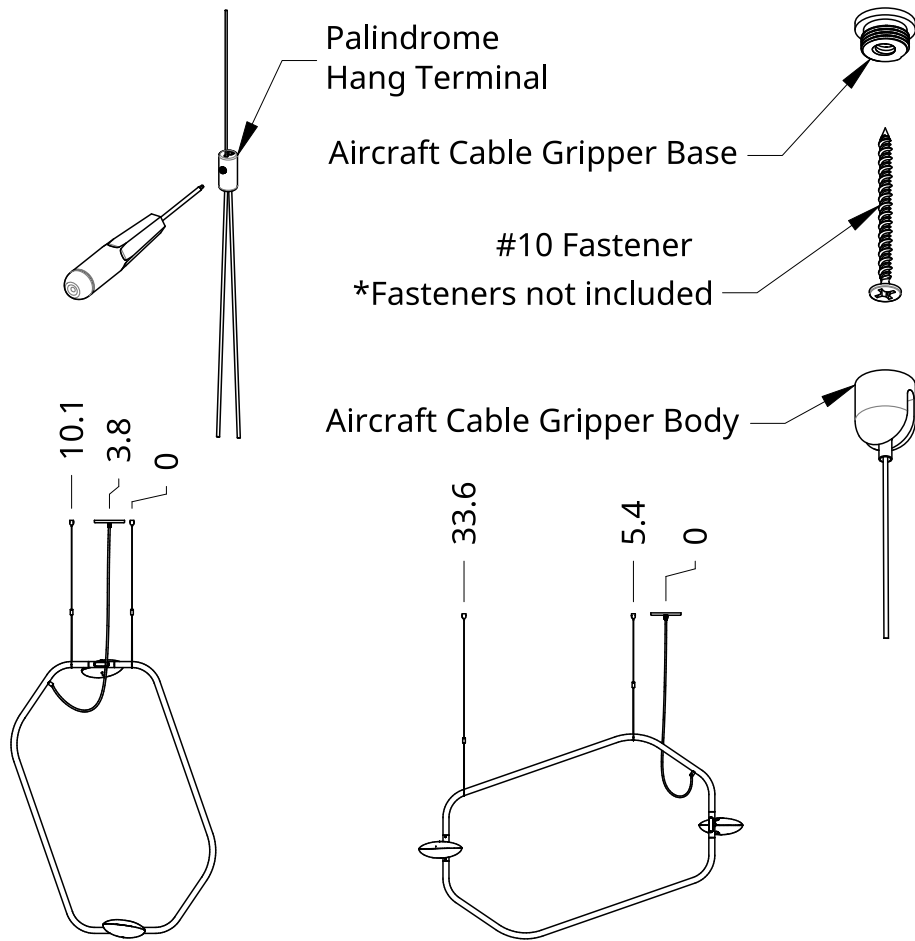

Installation - Cable Gripper and Canopy

1. Arrange Palindrome below installation location, aligning power feed and suspension locations.
2. Feed Cable around Palindrome Bent Tube in hang point locations.
3. Allow around 6" of slack between Gripper and Tube before tightening set screw.
4. Use appropriate fasteners to secure Cable Gripper Bases to desired suspension locations.
5. Feed Cable through the Gripper Turret and thread Gripper Body to Gripper Base.

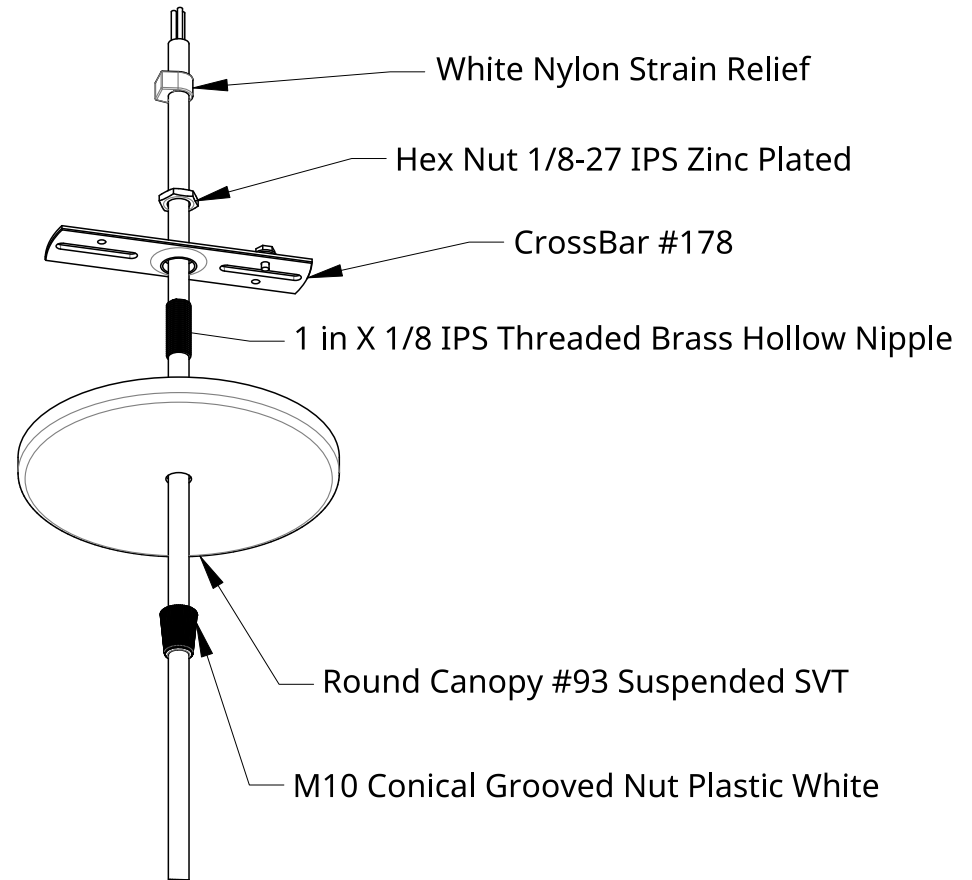

Installation - CP09 Canopy Kit

1. Thread Brass Nipple through the Crossbar and thread Hex Nut onto Brass Nipple.
2. Slide the Conical Nut, Round Canopy, Nipple, Crossbar, Hex Nut and Strain Relief over Power Cord.
3. Fasten Strain Relief at desired hang height by tightening the set screw.
4. Fasten Crossbar to the junction box.
5. Trim and strip excess power cord.
6. Connect to power feed.
7. Raise Round Canopy and thread Conical Nut onto 1/8 IPS Nipple.
8. Congratulations! End of guide.