


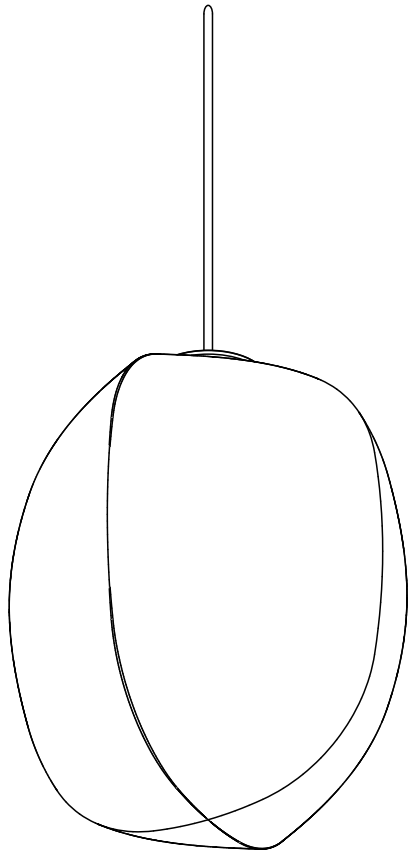

Mori Pendant

16766 rA

Low Voltage Input



CAUTION:

Before starting, turn off power at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación, apague la corriente en el tablero principal.

ATTENTION:

Coupez l'alimentation avant de procéder à l'installation.



Calling for backup? Scan above to contact our team.


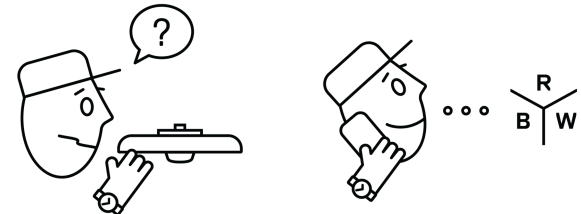


www.RBW.com

+1 212 388 0399

support@RBW.com

© RBW Studio LLC, 2013, 2020

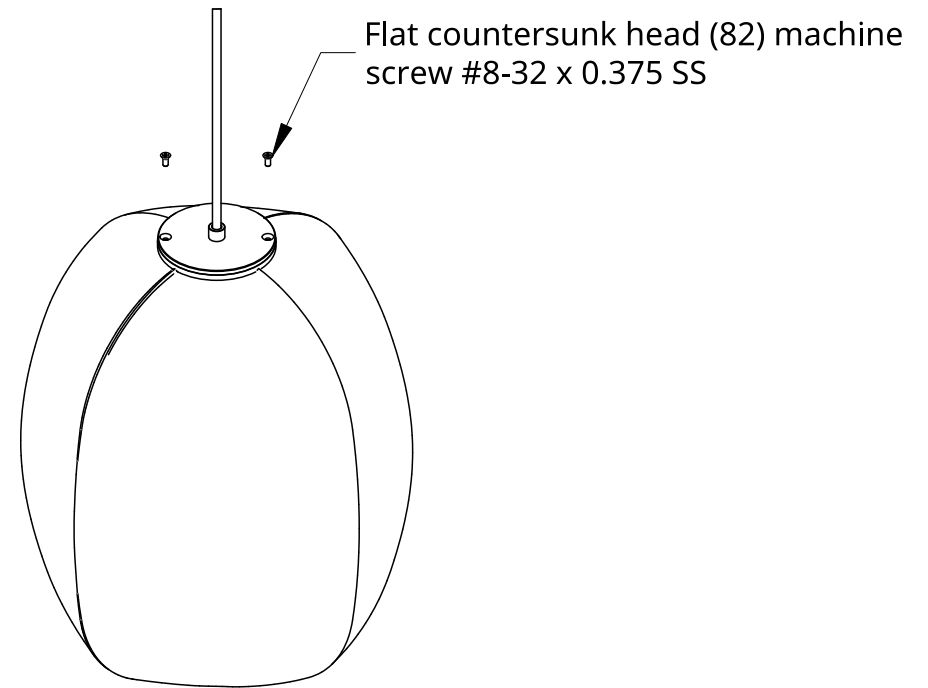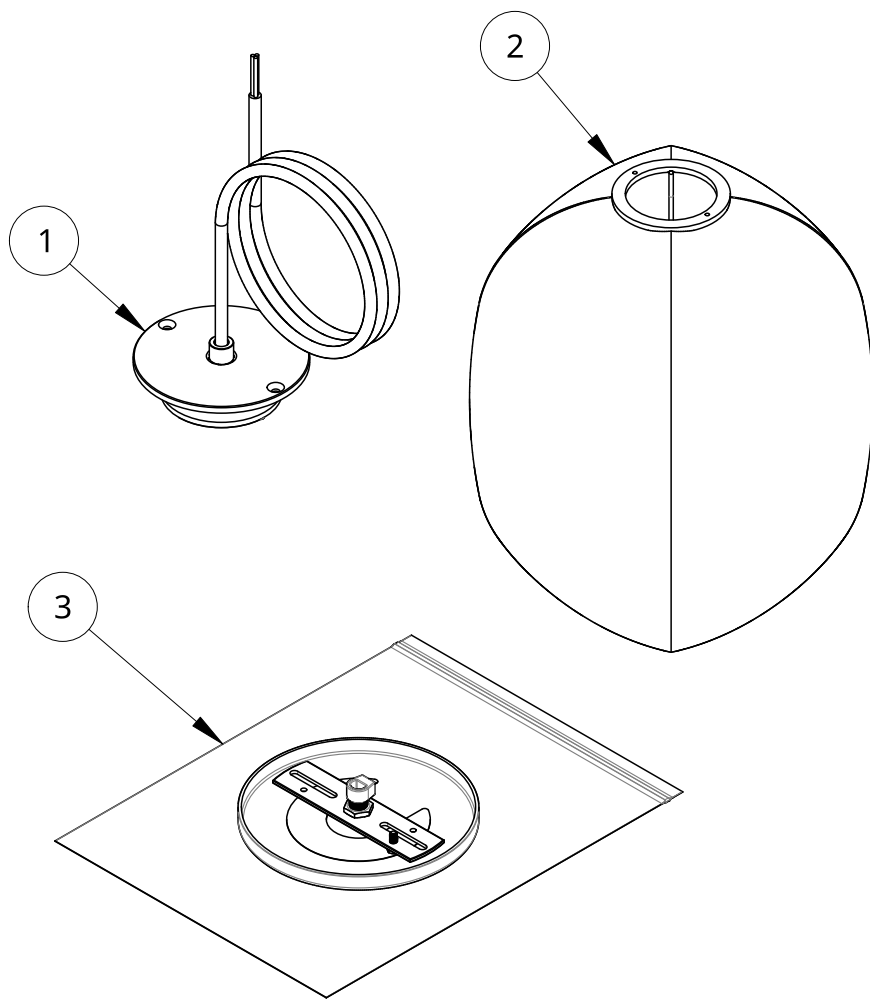

Installation - Shade

1. Raise Mori Shade up to Pendant Module.
2. Secure Shade to Pendant Module by fastening 2X #8-32 Flat head screws.
3. Congratulations! End of guide.

See Canopy Install Instructions 16772 for information on ceiling canopy installation.

Item	Qty	Part number	Description
1	1	12437-PC20-27	DEL I, II, III Pendant Module Sub-Assembly 13810 RBW Standard
2	1	12304	Mori Pendant Gourd
3	1	14825	Package: Flat Round Cord Suspension. UL 2108. White