




Hoist Pendant

13094 rB

Low Voltage Input

Note: External power supply may be required.

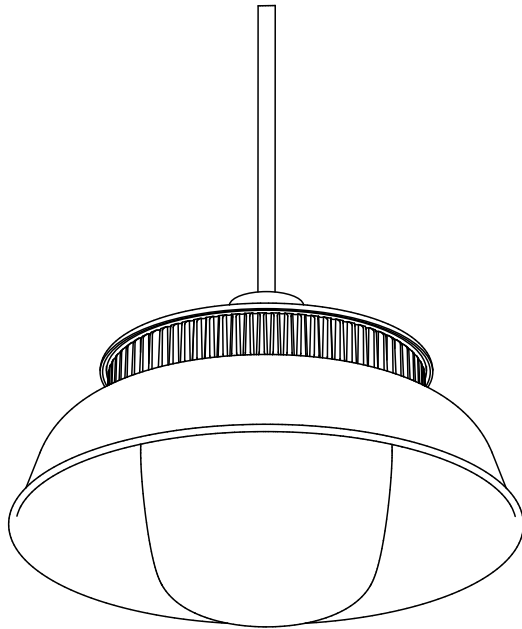

CAUTION:

Before starting, turn off power at main circuit panel.

ADVERTENCIA:


Antes de comenzar la instalación, apague la corriente en el tablero principal.

ATTENTION:

Coupez l'alimentation avant de procéder à l'installation.



Calling for backup? Scan above to contact our team.

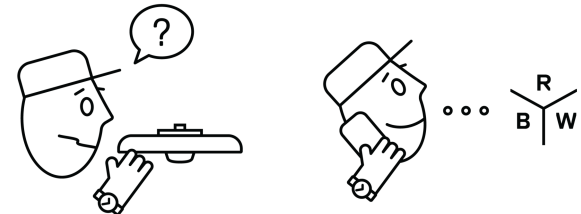


www.RBW.com


+1 212 388 0399

support@RBW.com


© RBW Studio LLC, 2013, 2020

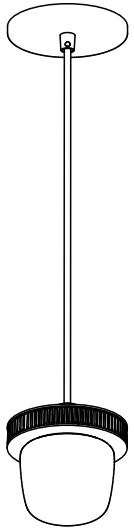


Bare

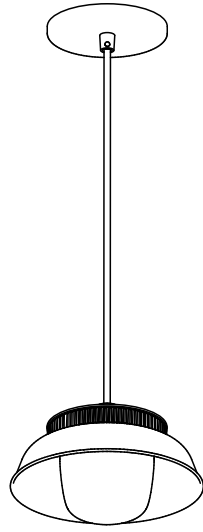


Small

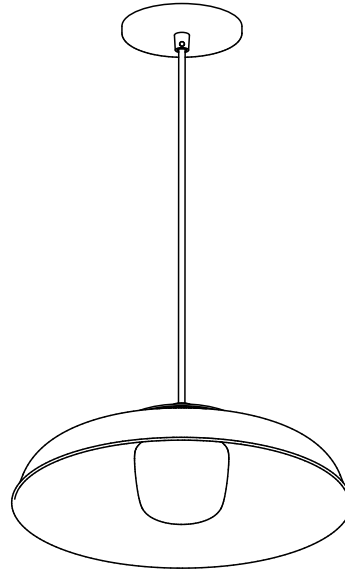


Medium

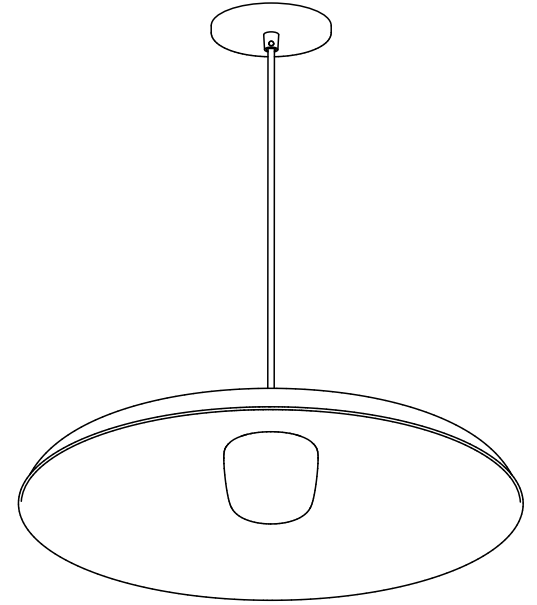


Large

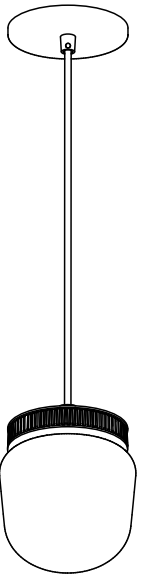


Bare

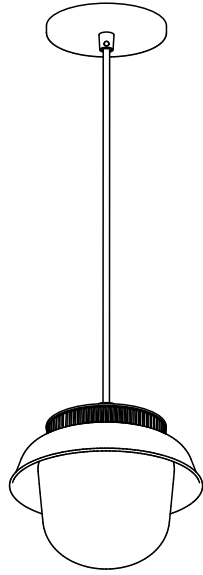

Small

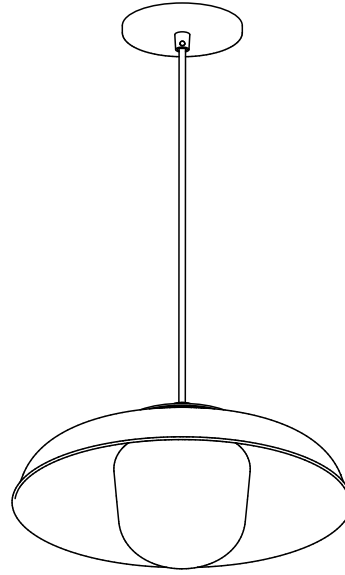


Medium

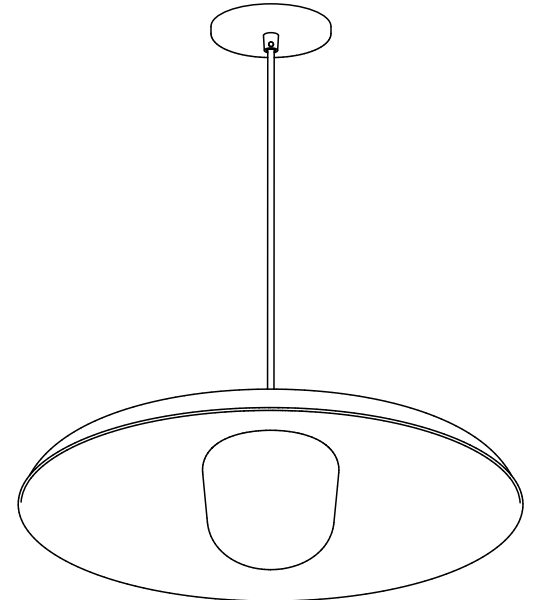


Large

What's Included: Part Configurations May Vary

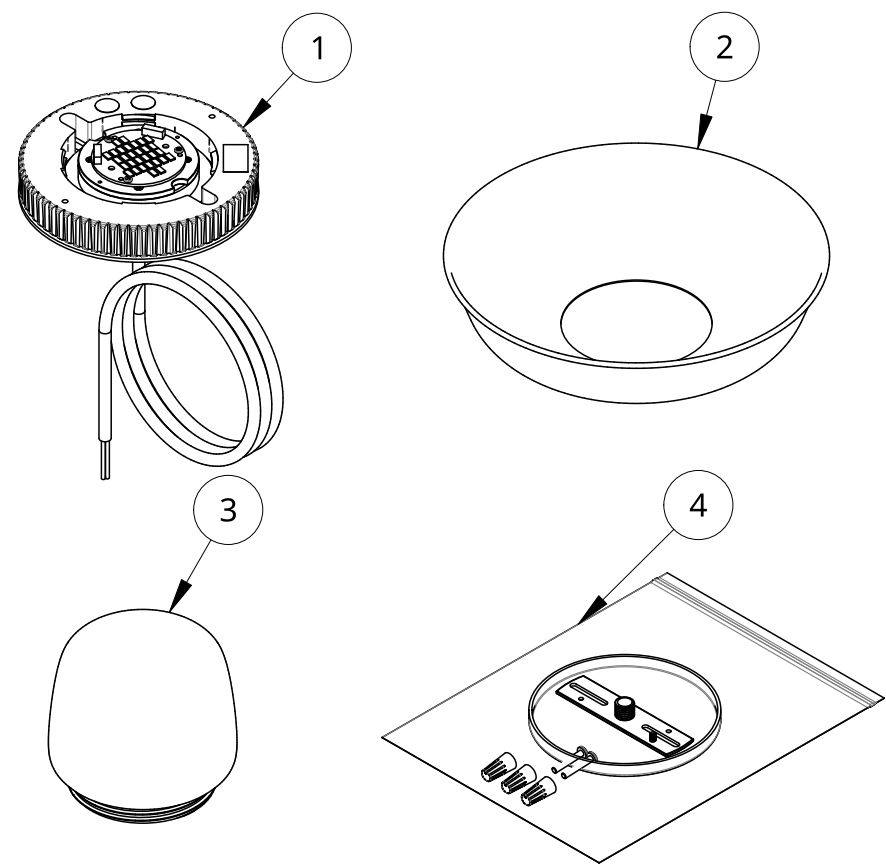


Item	Qty	Part number	Description
1	1	11697-PC30	Hoist Pendant Module Sub-Assembly. DC - GLV50. Matte Black
2	1	10183-PC30	Hoist Small Shade w/ Gasket. Matte Black
3	1	11659	Hoist Glass Small
4	1	11860	Hoist Pendant Hardware and Canopy Kit

⚠ Driver dimensions and location may vary, consult your order confirmation for details.

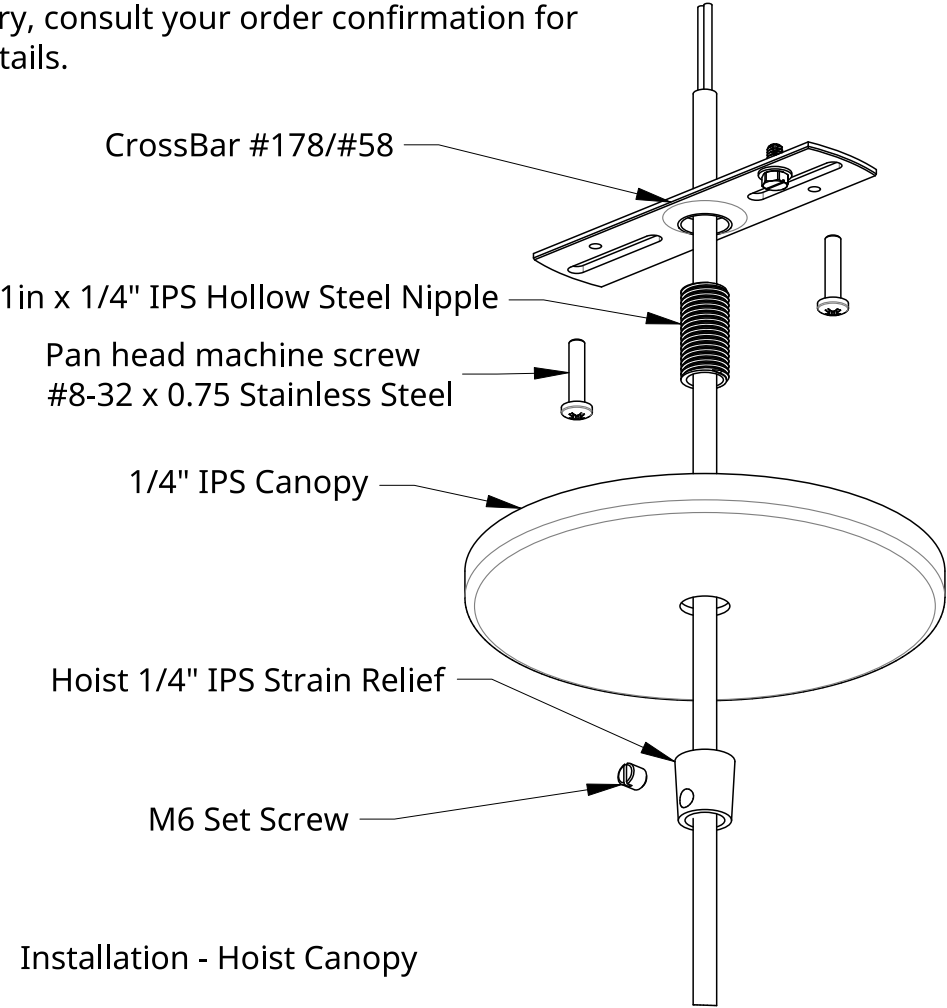

Installation - Hoist Canopy

1. Use appropriate fasteners to secure Crossbar to desired mounting location.
2. Feed Power Cord through Strain Relief, Canopy and 1/4" IPS Nipple.
3. Connect Red (+) and Black (-) leads to low voltage leads from externally located driver.
4. Thread Nipple into Crossbar.
5. Raise Canopy to ceiling and secure by threading on Strain Relief.
6. Fasten M6 Set Screw in Strain Relief to secure Power Cord at desired hang height.

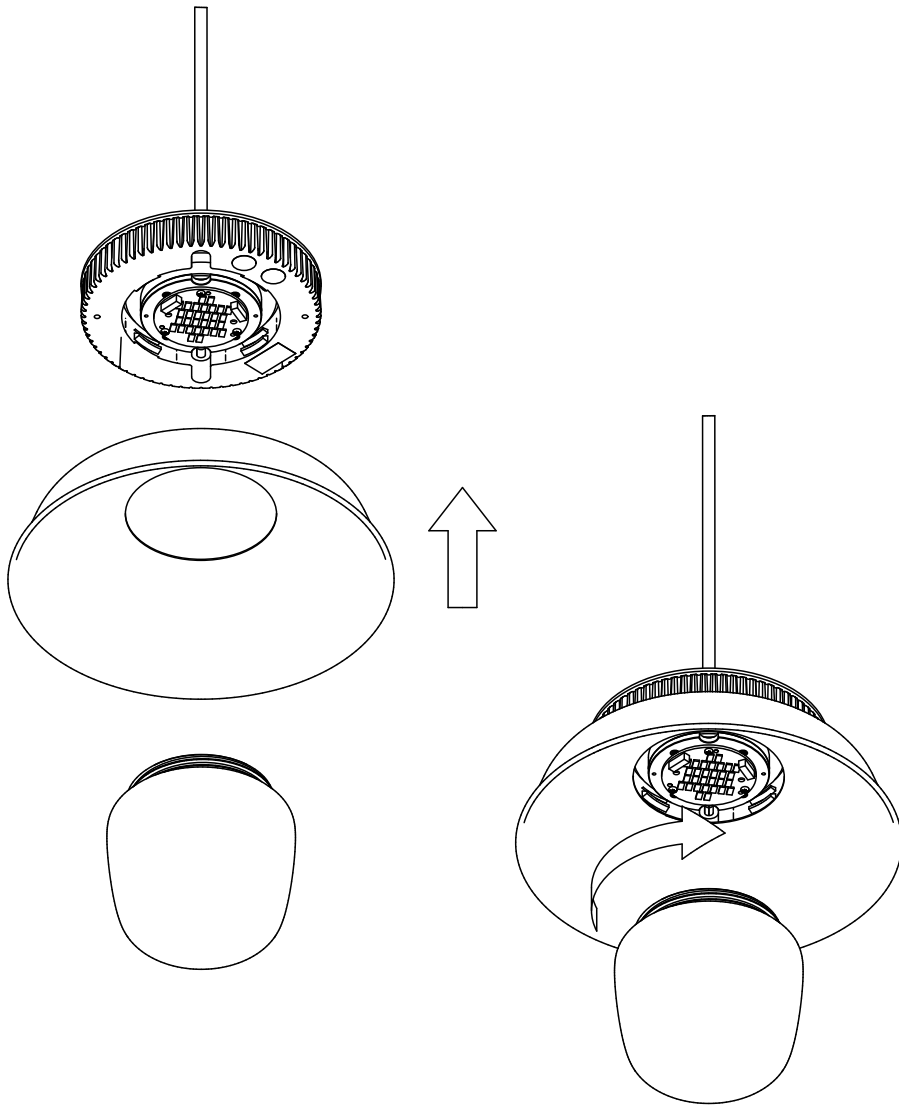

Page intentionally left blank

Installation - Shade and Glass

7. Raise Hoist Shade and Hoist Glass to Hoist Pendant LED Module.
8. Thread Hoist Glass clockwise into Hoist Pendant LED Module to secure Hoist Shade.
9. Congratulations! End of guide.