

REGINA ANDREW

DETROIT

ITEM NO: 17-1019 Redford Outdoor Sconce

WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

ASSEMBLY INSTRUCTION:

A. FOR WIRING DIRECTLY INTO OUTLET BOX (Figure 1)

1. Remove steel retainer from lamp back plate by removing the attachment screws on the side of the backplate and attach the retainer to the outlet (junction) box. Adjust the retainer so that the tabs on the side are level.
2. Connect the wires of lamp to the wires of outlet box; a. black outlet-box-wire to black or smooth lamp wire; b. white outlet-box-wire to black or smooth lamp wire; c. bare "grounding" outlet-box-wire to green wire.
3. Install lamp to the steel retainer using two flat-head screws.

B. SHADE ASSEMBLY (Figure 2)

1. Unscrew acrylic covers. Insert appropriately rated bulbs (bulbs included) into the sockets and put back the acrylic covers.
2. Loosen the knurled lock rings and slide the shade onto the gap between the knurled lock rings and socket cup. Tighten the knurled lock rings.

MOUNTING FIXTURE(S) OUTDOOR AND/OR IN A WET LOCATION INSTRUCTION (Figure 3)

1. Mounting surface should be clean, dry, flat and $\frac{1}{4}$ " larger than the canopy/fixture base on all sides. Any gaps larger than $\frac{3}{16}$ " should be corrected.
2. With a silicone caulking compound (not included), caulk completely around where the back of the canopy/back plate meets the wall surface.

CAUTION: FAILURE TO COMPLETELY CAULK AROUND THE LIGHT FIXTURE'S MOUNTING PLATE COULD RESULT IN WATER SEEPAGE INTO THE LIGHT FIXTURE AND/OR JUNCTION BOX.

Made in China

Figure 1

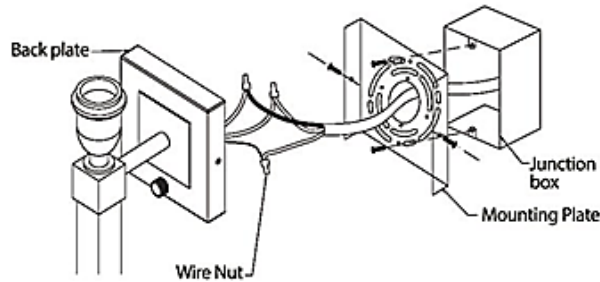


Figure 3



Figure 2

