

Figure 1


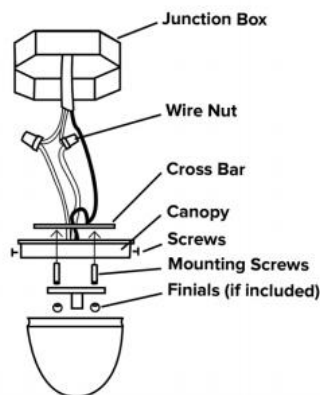


Figure 2

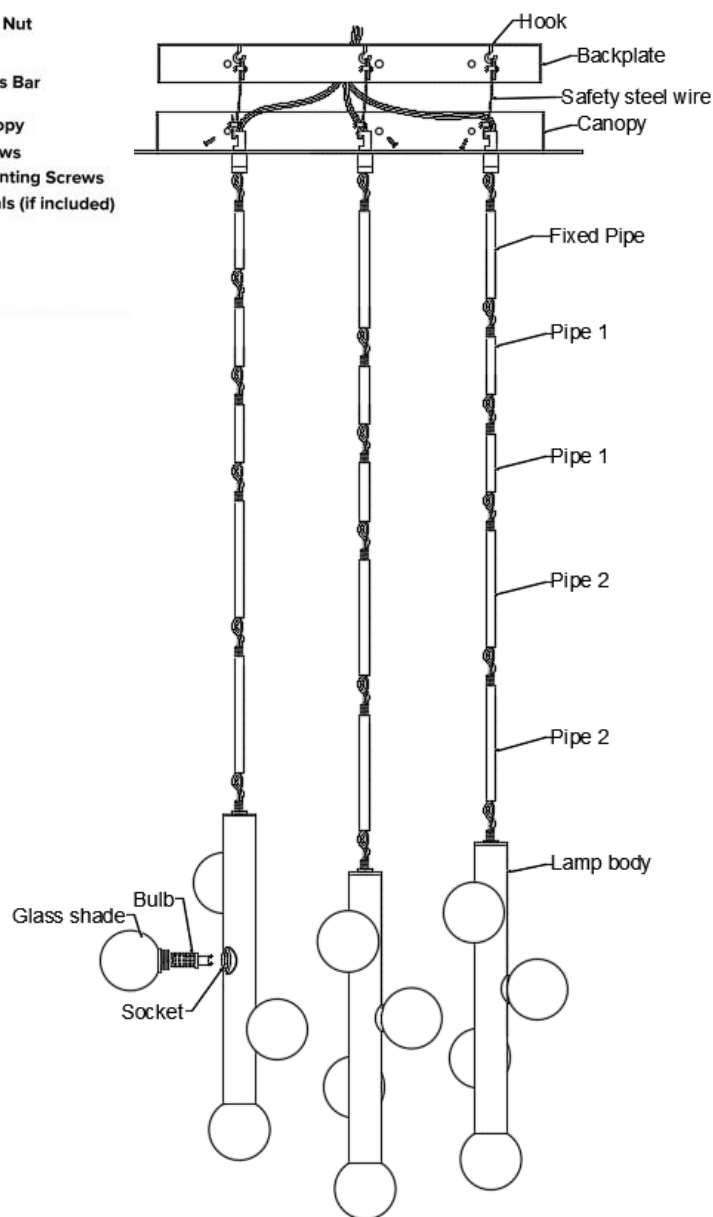

REGINA ANDREW

DETROIT

ITEM NO: 16-1569

Rhoads Chandelier

CAREFULLY INSPECT THE ITEM BEFORE INSTALLATION.

WE STRONGLY RECOMMEND THE ITEM BE INSTALLED BY A LICENSED ELECTRICIAN.

These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

ASSEMBLY INSTRUCTIONS

FOR WIRING DIRECTLY INTO THE JUNCTION BOX (Figure 1)

1. Turn off the breaker to the junction box at the electrical panel.
2. Inspect all parts and inventory, making sure to check all sides of the packaging for additional parts.
3. Install the Backplate onto the junction box with the included machine screws.
4. Hang the canopy to the backplate by hanging the safety steel wires to the hooks inside the backplate.
5. Trim the electrical cords to length, making sure to leave an extra 6-10 inches to make all connections.
6. Attach ground wire from fixture to ground wire from junction box. Fasten wires together with wire nut and tightly wrap connection with electrical tape. Attach hot wire from fixture (black color or smooth side of wire) to hot wire from junction box. Fasten wires together with wire nut and tightly wrap connection with electrical tape. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from junction box. Fasten wires together with wire nut and tightly wrap connection with electrical tape. Carefully push wire connections back into ceiling junction box.
7. Put the canopy onto the backplate with the three screws provided.
8. Assemble all additional decorative parts and bulbs.
9. Screw the glass shades onto the sockets.
10. Turn the breaker to the junction box back on and enjoy.

FIXTURE ASSEMBLY (Figure 2)

1. Insert appropriately rated bulbs into the sockets.
2. Attach glass shades to the fixture by rotating clockwise.

Made in China