


RAVENHILL STUDIO

2122 Cypress Ave, Los Angeles, CA 90065
323.977.8532, contact@ravenhillstudio.com

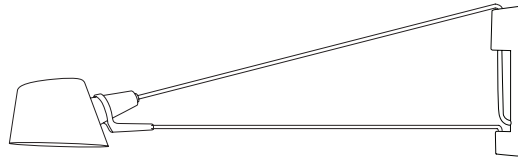

We recommend installation of our Pivot Sconce Plug-in by a professional.

Please share this guide with your electrician. Read instructions completely before beginning assembly, and consider having a friend nearby in case you need an extra set of hands.

Your Pivot Sconce Plug-in kit consists of **(6)** individual parts:

(1) Pivot Sconce

(2) Drywall Anchors

(1) Light Bulb

(2) Drywall Screws


Included with your Pivot Sconce Plug-In is an LED 7 watt light bulb.

The bulb is a warm white (2700K) G25 and delivers 800 lumens.


The bulb is JA8 certified and has a 15,000 hr lifetime.

G25 bulb recommended. 60W Max


1. Place end of bent metal rod in bottom hole on bracket, being sure cord is not twisted between lamp and wall bracket.

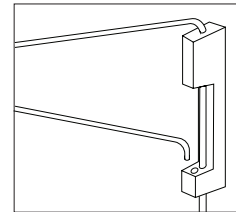


2. Push aside cord to expose holes. Use screwdriver or drill to secure Sconce to wall. Use included Drywall Anchors as needed. (Drywall Anchors recommended if securing Sconce to drywall).

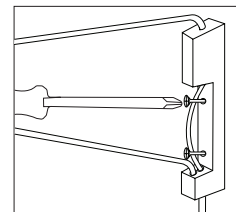

3. Take some time to make sure the cord is straight, use fingers to gently pull until desired effect is achieved.

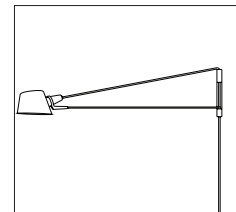

4. The tension of the cord is pre-calibrated. However, if you feel the tension should be adjusted, loosen the set screw on the strain relief at the bottom of the bracket, adjust cord to desired tension, then tighten set screw on strain relief to lock cord in place

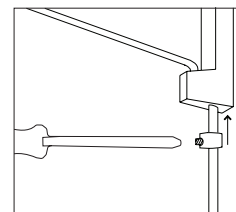

5. Insert Light Bulb, plug the sconce in, and enjoy!



CAUTION: Before starting, turn off power at main circuit power.

