

Istruzioni di Montaggio
Assembly Instructions
NEW YORK SUITE

saba™

Rev.01 - 25/01/2024



VITI FISSATE
NELLE LORO SEDI
SCREWS FASTENED
IN THEIR HOUSING

INTERNO
INTERIOR

ESTERNO
EXTERIOR



PIEDE CENTRALE
CENTRAL FOOT



PIEDE LATERALE
LATERAL FOOT

1 - POSIZIONARE IL DIVANO COME INDICATO NELLA FOTO.

ALLENARE LE VITI, PREMONTATE NELLE LORO SEDI, FACENDO ATTENZIONE AGLI SPESSORI.

1 - PLACE THE SOFA AS SHOWN IN THE PICTURE.

LOOSEN THE SCREWS, PRE-MOUNTED IN THEIR HOUSING, PAYING ATTENTION TO THE THICKNESSES.

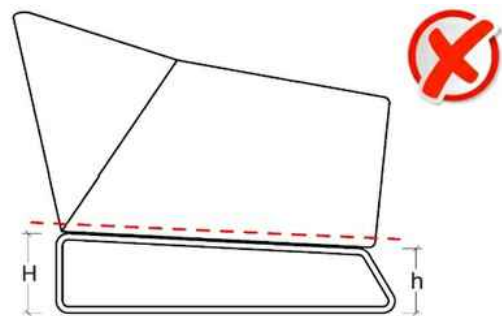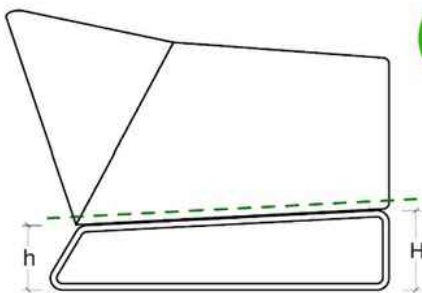

2 - PRESTARE ATTENZIONE NEL POSIZIONARE I PIEDI CON LA GIUSTA INCLINAZIONE.

2 - BE CAREFUL TO PLACE SOFA'S FEET WITH THE RIGHT INCLINATION.

FARE PRESSIONE
PRESS



FARE PRESSIONE
PRESS

3 - RIAVVITARE LE VITI NELLE SEDI FACENDO ATTENZIONE DI MONTARE GLI SPESSORI COME NELLA PRIMA FOTO. PRIMA DI FISSARE DEFINITIVAMENTE LE VITI CENTRALI, STRINGERE I DUE PEZZI FACENDO PRESSIONE SUI LATI.

3 - FASTEN THE SCREWS IN THEIR HOUSING PAYING ATTENTION TO ASSEMBLE THE THICKNESSES AS SHOWN IN THE 1st PICTURE. BEFORE FASTENING THE CENTRAL SCREWS, GRIP THE TWO PIECES PRESSING ON THE SIDES, AS INDICATED IN THE PICTURE.



4 - PER SGANCIARE IL BOTTONE "QUICK", INSERIRE LA FORCHETTINA FORNITA IN DOTAZIONE TRA LE DUE PARTI DEL BOTTONE E FARE LEVA FINO ALLO SGANCIAMENTO.

4 - FOR THE "QUICK" BUTTON DETACHMENT, INSERT THE FORK SUPPLIED BETWEEN THE BUTTON PARTS AND PRIZING UNTIL DETACHMENT.