Gordon Pendant

6185101, 6585101, 6685101 I.O.

Visual Comfort & Co.

STUDIO COLLECTION

CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

This product may be dimmed with a standard incandescent dimmer.

This instruction shows a typical installation.

VISUAL COMFORT & CO.

7400 Linder Ave, Skokie, IL 160077 800.969.3347


www.visualcomfort.com

©2023 Visual Comfort & Co.. All rights reserved. The Visual Comfort & Co. logo is a registered trademark of Visual Comfort & Co. Visual Comfort & Co. reserves the right to change specifications for product improvements without notification



SAVETHESE INSTRUCTIONS!

Install the Fixture

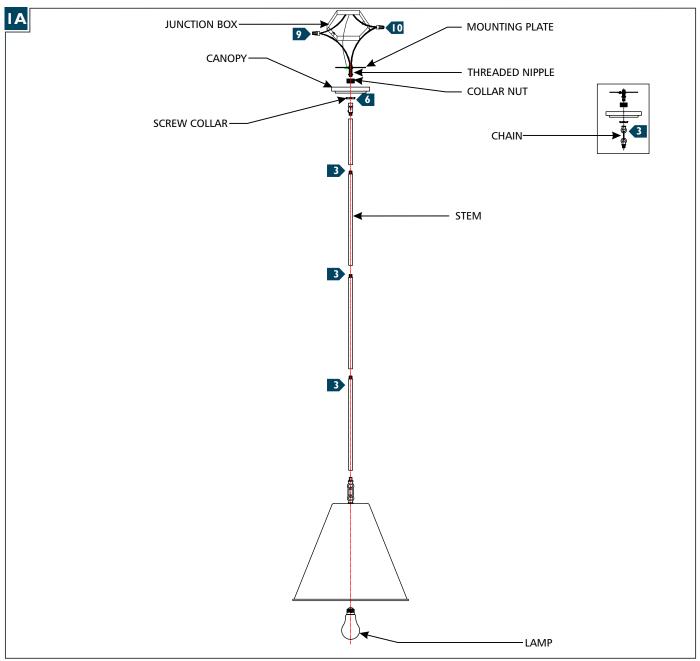

- Screw the lamp into the socket. Refer to the label on the socket for Max Wattage Information.
- Determine the wanted height or look of the fixture with the provided stems and/or chain and assemble them by screwing them together. All the parts may be used alone or used in combination.
- 3 Feed the fixture wires through the chain and threaded rods, and screw the assembly to the fixture.
- 4 Unscrew the collar nut off the screw collar and place it onto the stem/chain followed by the canopy.
- If necessary, screw the threaded nipple tightly onto the mounting plate.
- 6 Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/chain assembly.
- 7 Align and secure the mounting plate to the junction box.
- 8 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 9 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly into the screw collar.