



The Shadowspec Retreat Wall Bracket provides strength and easy installation.

*Please note, there are two types of fixing holes on the bracket.*


One set is for affixing the bracket to the wall

The other set is to affix the umbrella to the bracket

These are indicated on this left hand diagram and the umbrella holes are covered with silver stickers and these stickers do not need to be removed.

The holes allow for up to 8mm diameter screws or bolts. 18 guage. These are sold seperately.

Please refer to the installation manual for detailed installation guides.

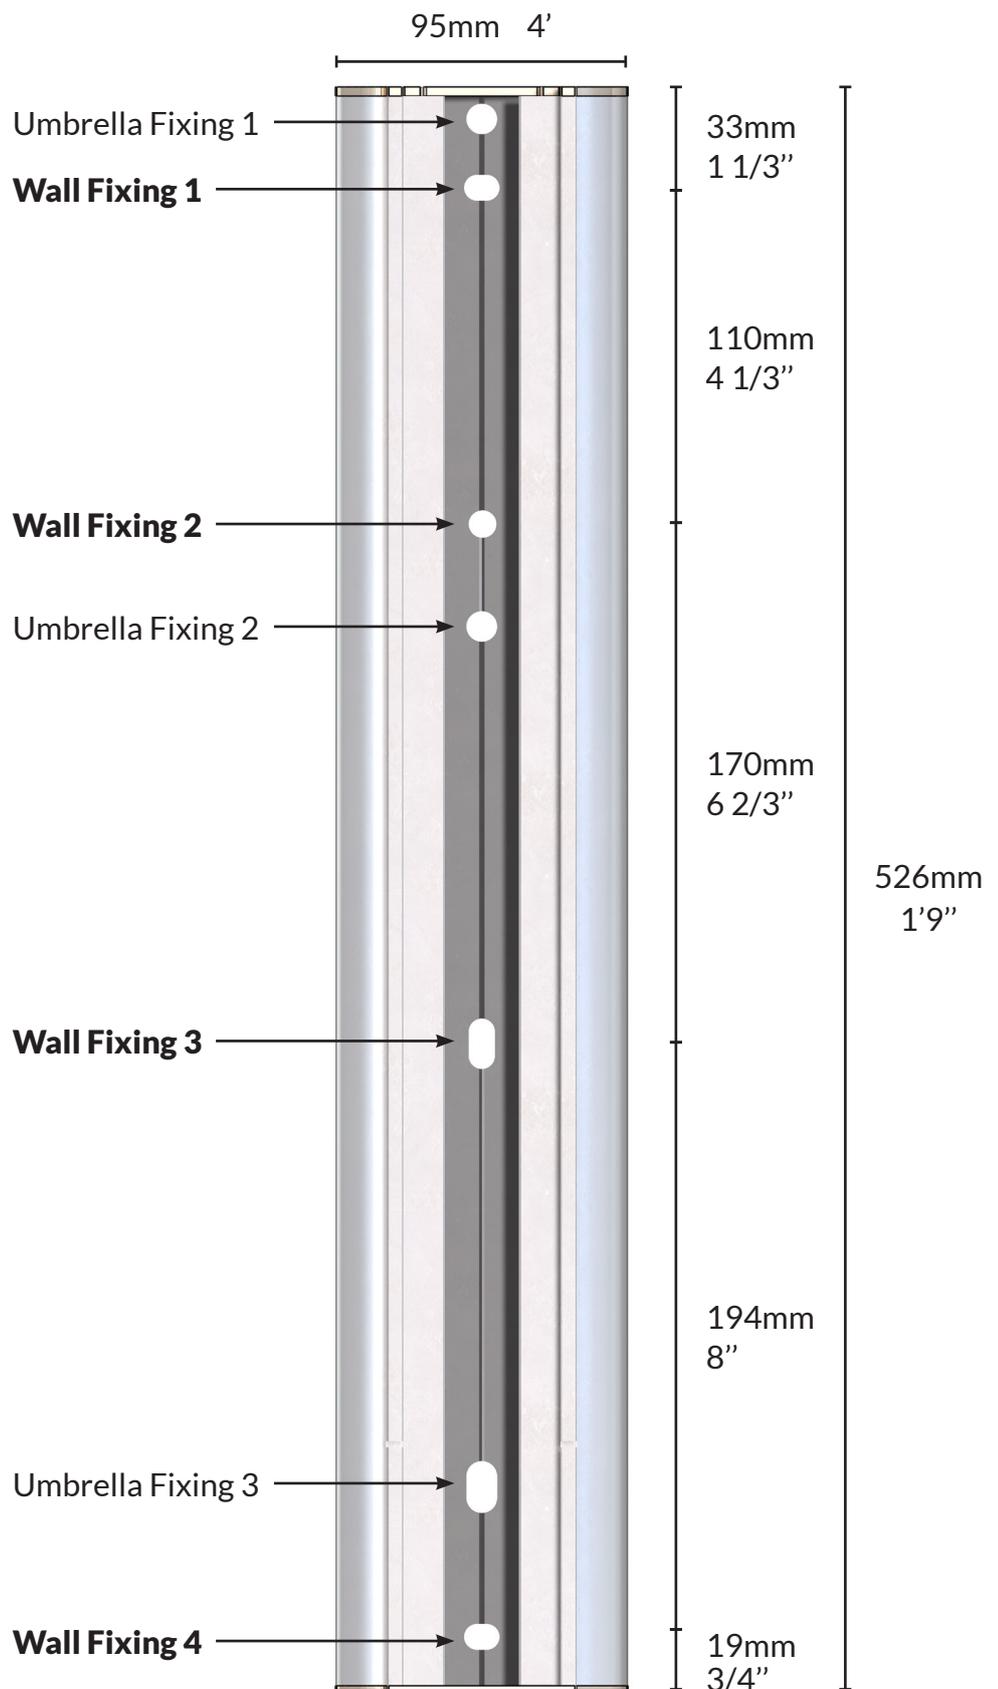

Note: All sizings and conversions are +/- 2.5mm / 2/32" and are subject to change without notice.

We recommend commerical installations use metric measurement for any umbrella spacing to ensure accuracy.

The Above dimensions make the assumption that you have installed your umbrella at the recommended installation height on your wall.

If you have installed your retreat lower or higher than the recommendations you will need to add that difference to the above measurements.