



STONEWARE CANOPY II PORT

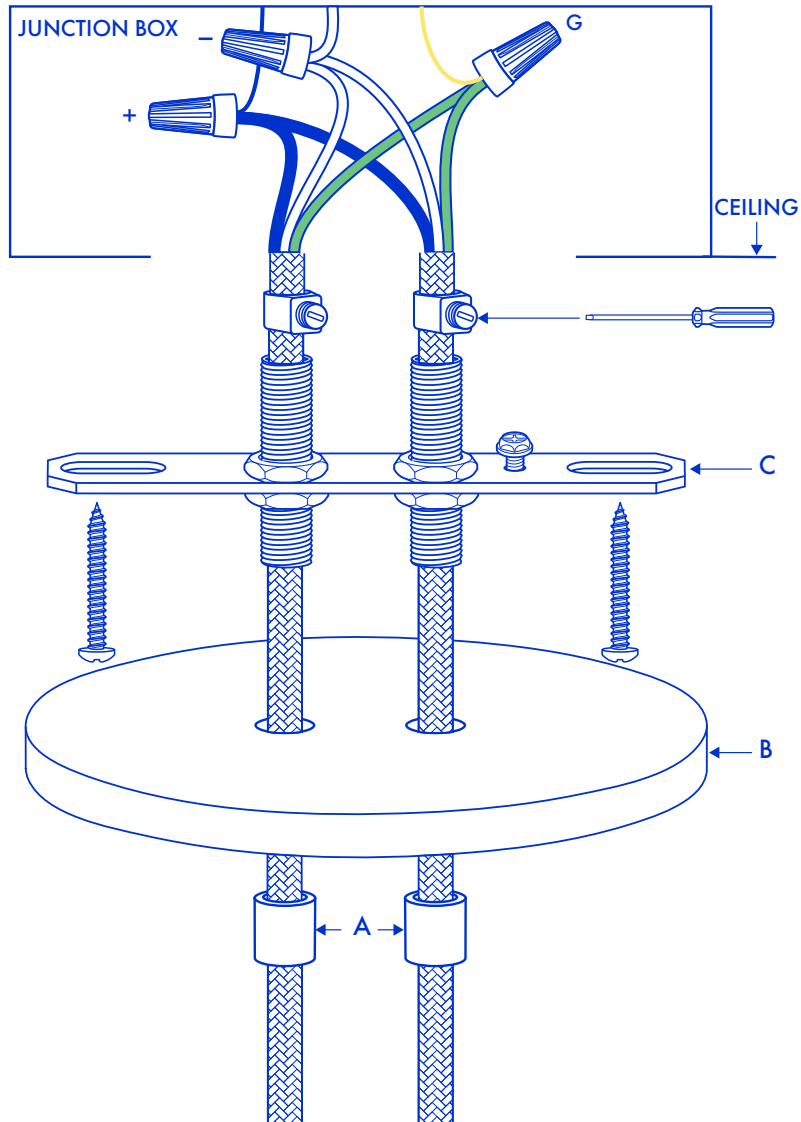

SIDE VIEW - INSTALLED

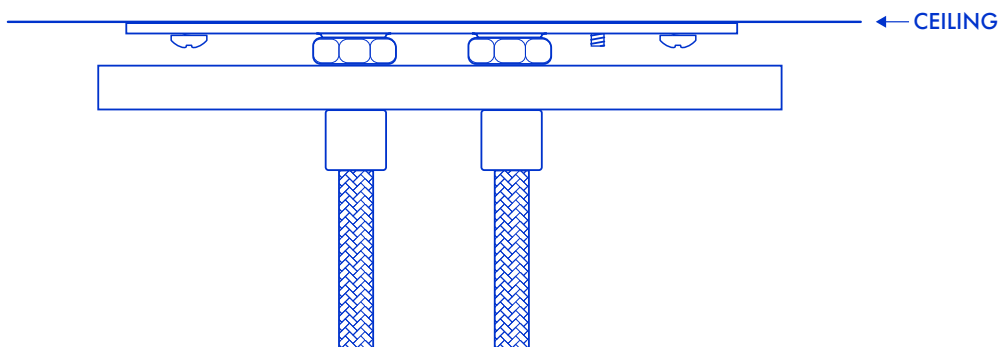

INSTALLATION INSTRUCTIONS

- 1 Turn off power circuit.
- 2 String through each cloth covered wires in the following order:
 - A Brass bushing
 - B Stoneware canopy
 - C Pre-assembled cross bar
- 3 Locate the positive (black), negative (white) and ground (green or bare copper in the junction box) wires in the junction box and at the end of the cloth covered wire.
- 4 Strip the end of wires to expose the stranded copper wire.
- 5 Connect matching wires with wire connectors (not included) and wrap secure with electrical tape (not included).
- 6 Adjust wire lengths and tighten the plastic set screws on strain reliefs firmly.
- 7 Secure mounting cross bar to ceiling.
- 8 String stoneware canopy through nipple and secure with brass bushing.



WARNING:

Turn off power at circuit before wiring.
Always consult a licensed electrician.