


SHAYD PENDANT









WARNING:

Turn off power at circuit before wiring.
Always consult a licensed electrician.

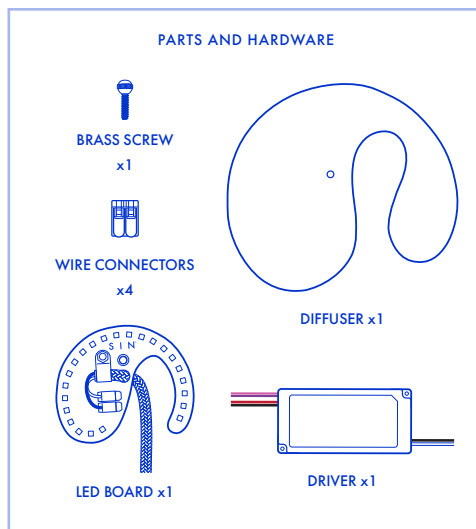

INSTALLATION INSTRUCTIONS

- 1 Unroll the SHAYD shade and let it rest until completely flat, approx. 24–48 hrs, weighing it down if needed.
- 2 Thread LED board cord through ceramic shade.
- 3 Insert LED board through cut-out hole in shade, aligning markings with the diagram.
- 4 Gently fold shade using notches as guides, do not press hard or creases may form.
- 5 Shape shade to match the shape of the ceramic form, then slide it inside the ceramic shade.
- 6 Slide LED board into place so it rests in the cone, with the shade positioned between the ceramic and the board.

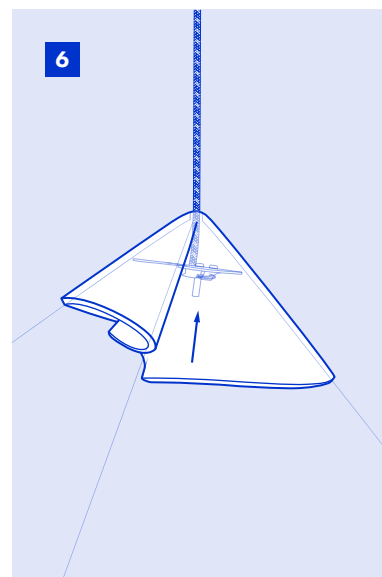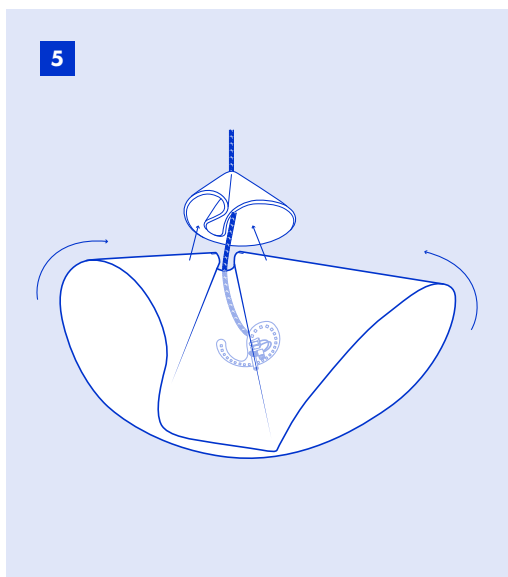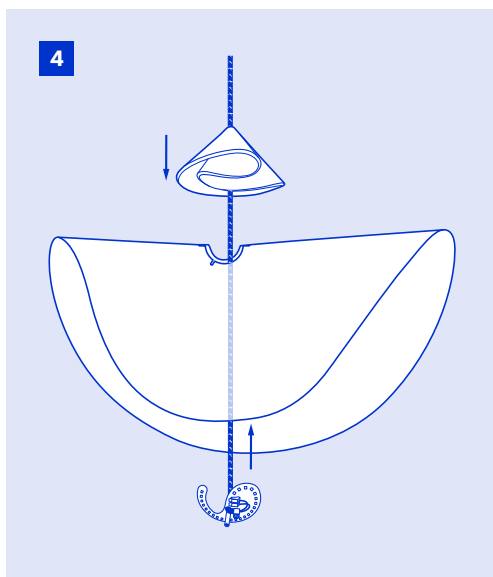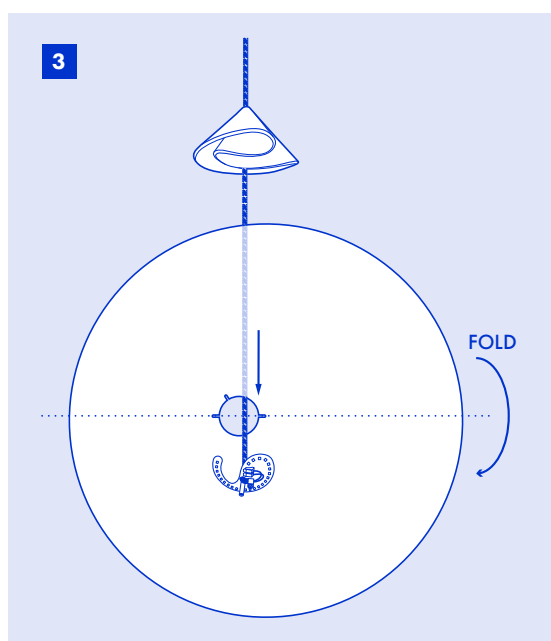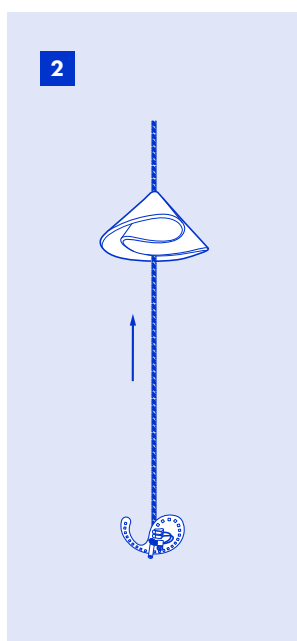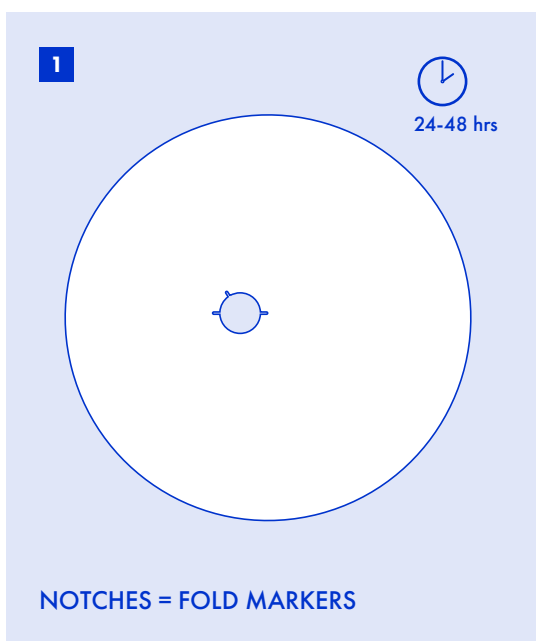

SHAYD PENDANT



WARNING:

Turn off power at circuit before wiring.
Always consult a licensed electrician.

INSTALLATION INSTRUCTIONS (CONT.)

- 7** Insert Diffuser so it is snug in fixture and hole is aligned with metal standoff. Screw it in place with brass screw.
- 8** Thread canopy through and make electrical connections to the driver, as shown.
- 9** Place driver into J-box, attach crossbar to J-box, and thread canopy through.

