

LED Product Information and Warnings

Important

- Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
- Please read all included assembly instructions and warnings carefully before installation. Contact
 Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture
 is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED fixtures are vulnerable to power surges
 and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC
 systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Remote LED Driver or Transformer installation must be done by a licensed electrician and in accordance with local codes. Remote installations should be in an accessible location, as close to the fixture as possible.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

SONNEMAN®

Assembly Instructions


3272, 3274

INSTRUCTIONS D'INSTALLATION

Abstractions Series - Linear Pendant & Large Pendant

Important

- Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
 Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.
- 1. Shut off power to the outlet box (A).
- 2. Make appropriate electrical connections using wire nuts:
 - a. Connect the LED driver's live wire (black) to the live supply wire.
 - b. Connect the LED driver's neutral wire (white) to the neutral supply wire.
 - c. Connect the ground wire (green or uncoated) to the ground outlet box wire. If not ground is present in outlet box, connect fixture's ground wire to the mounting plate (J) using the green screw (included).
- 3. Attach the mounting plate (J) to the outlet box using the outlet box screws (K) as shown in the Detailed View.
- 4. Adjust the power cord (B) and the steel cables (C) to desired height. Use included screwdriver (E) to tighten set screws (F) in bushing to secure cord and cable. Reserve extra cord in the canopy (L). If field shortening of cord is necessary, see Appendix A.
- 5. Attach the canopy (L) to the mounting plate (J) by bringing them close together until the magnet (M) secures the canopy.
- 6. Restore power to the fixture.

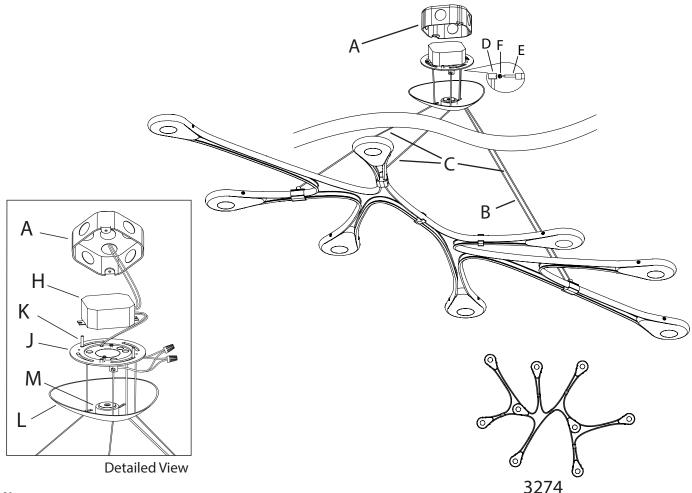

Note:

• This fixture is dimmable with ELV (Trailing-Edge), Incandescent (Leading-Edge), and 0-10V type dimmers only.


Care Instructions

- Dusting: Use a clean, dry cloth.
- Cleaning: To protect the finish, avoid any harsh abrasives or chemicals.




Coax Splicing Assembly Instructions INSTRUCTIONS D'INSTALLATION

FAILURE TO FOLLOW THESE INSTRUCTIONS WILL VOID THE WARRANTY

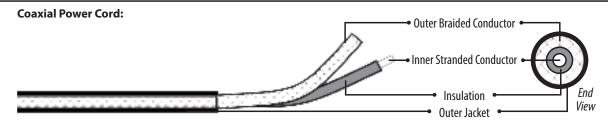

If field-cutting is required, please follow the below instructions:

- 1. Make a 1" slice along the length of the cord's outer jacket (Fig. 1). CAUTION: Do not cut through the outer braided conductor.
- 2. Carefully strip the outer jacket of the cord and keep the outer braided conductors intact (Fig. 1).
- 3. Slide the outer braided conductor back to create a bulge and reveal the inner stranded conductor (Fig. 2).
- 4. Bend the cord to create an opening through the bunched-up portion of outer braided conductor, then pull out the inner stranded conductor (Fig. 3)
- 5. Twist together the outer braided conductor to form the negative wire of the fixture, then strip 5/8" off the end of the inner stranded conductor to form the positive wire of the fixture (Fig. 4).
- 6. Re-splice all power cords.

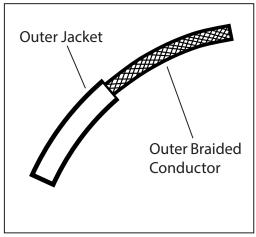



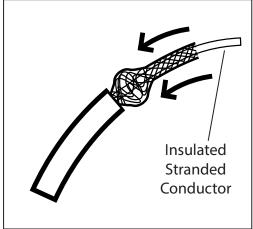


Fig. 2

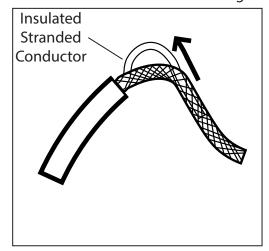


Fig. 3

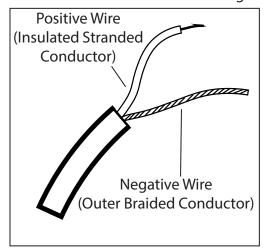


Fig. 4