

# ROY 3L MEDIUM VANITY

DJV1083

## General Product Information



## Safety Information

**SAVE THESE INSTRUCTIONS!**

### CAUTION-RISK OF FIRE



This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


**USE MINIMUM 90°C SUPPLY CONDUCTORS.**



**Turn off electrical current at the source before working with any lighting fixture or portable lamp.**

**Install and use this product in adherence with local electrical codes and regulations.**

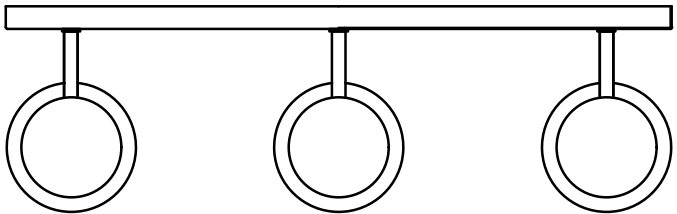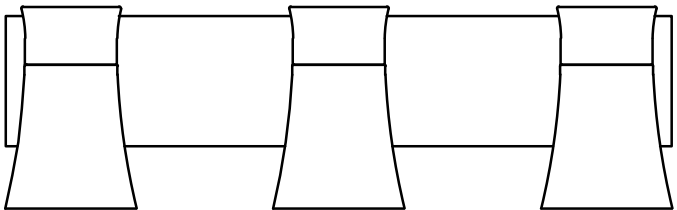

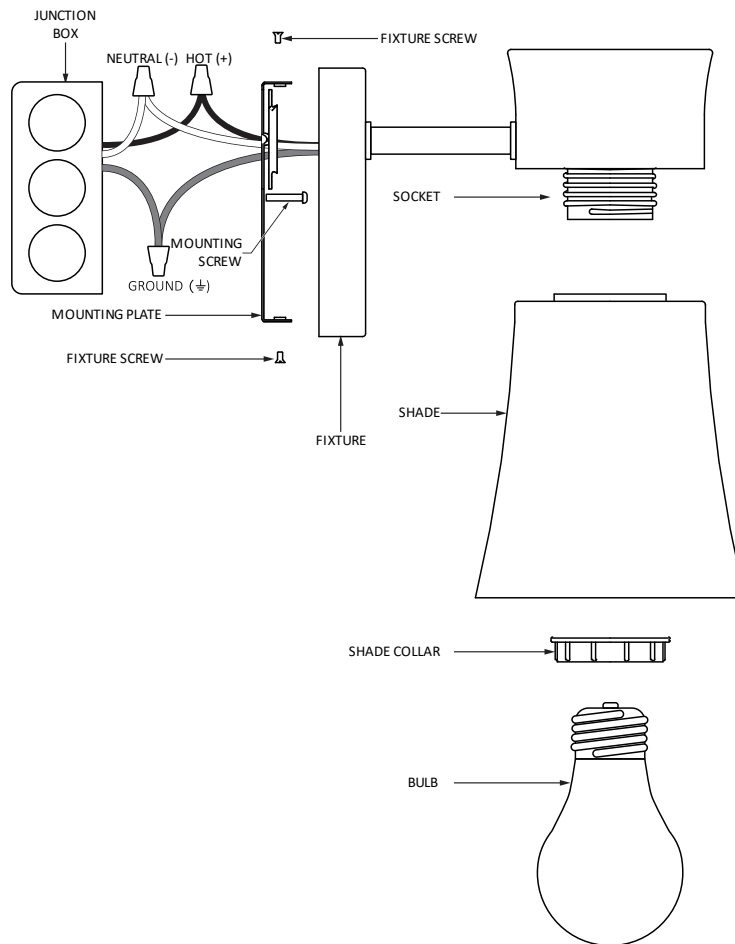

## **INSTRUCTIONS**

### **I. Preparing the Fixture**

1. Secure the mounting plate to the junction box.
2. Install the shades by sliding them over the socket and secure them in place with the shade collars.
3. Screw the lamps into the sockets. Refer to the label on the lamp socket for Max Wattage Information.

### **II. Wiring the Fixture**

1. Connect the fixture to a suitable ground in accordance with local electrical codes.
2. Connect the following wires using a wire nut:
  - a) The white fixture wire to the neutral power line wire.
  - b) The black fixture wire to the hot power line wire.

### **III. Installing the Fixture**

1. Neatly place all the wires into the junction box and place the fixture base onto the mounting plate. Secure the fixture in place using the fixture screws.