


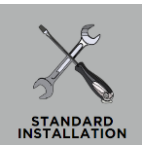
WELLEN MEDIUM SCONCE

CW1361


General Product Information




SAVE THESE INSTRUCTIONS!




STANDARD INSTALLATION




INDOOR

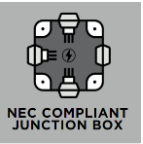


NEC COMPLIANT JUNCTION BOX




DAMP LOCATION SAFE




CONVERTS TO LED




BULB(S) (NOT INCLUDED)




PLEASE SEE [visualcomfort.com](http://visualcomfort.com) FOR PRODUCT SPECS




CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!



BEST PRACTICE: HANDLE FIXTURE WITH GLOVES




Product Warranty




FCC Statement

Tools Required/Suggested




ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



WIRE CUTTER




PENCIL/MARKER

Safety Information

**CAUTION-RISK OF FIRE**


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


**USE MINIMUM 90°C SUPPLY CONDUCTORS.**



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

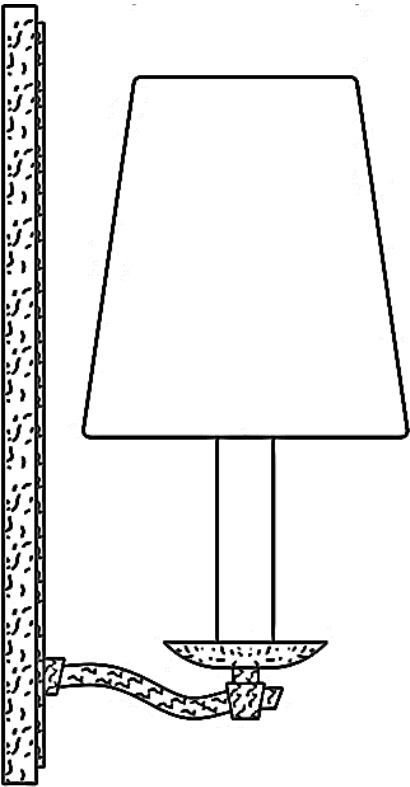

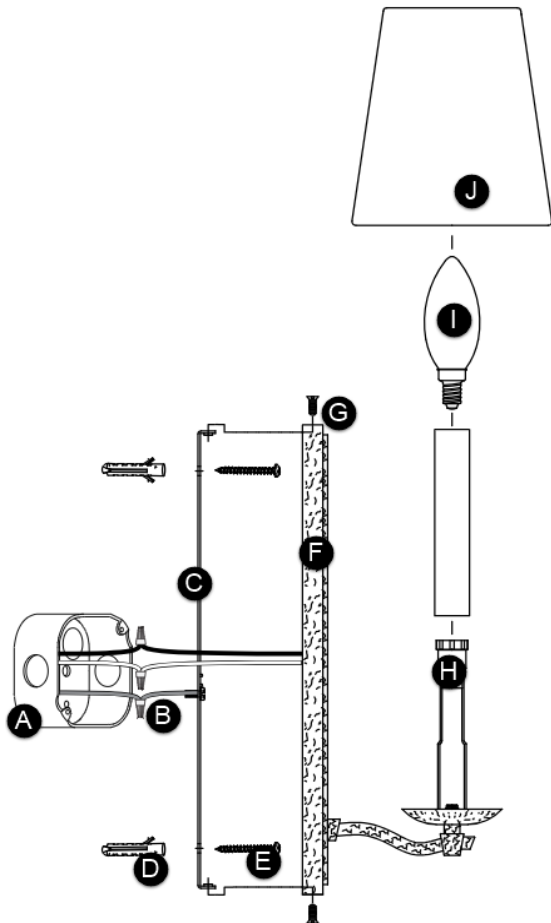

## FIXTURE PARTS

- A. Junction box
- B. Wire Nut Connections
- C. Mounting Plate
- D. Anchors
- E. Mounting Screws
- F. Fixture Base
- G. Fixture Screws
- H. Socket/Socket Assembly
- I. Candelabra Torpedo Bulb (Not Included)
- J. Shade

## INSTRUCTIONS

### I. Preparing the Fixture

1. Separate the mounting plate from the fixture base by removing the fixture screws.
2. Install the anchors as follows:
  - a) Place the mounting plate on the junction box to trace and mark the locations for the anchor holes. Ensure that they are level.
  - b) Use an electric drill to drill the marked holes.
  - c) Insert the anchors into the holes.
  - d) Use the mounting screws to secure the mounting plate directly onto the wall.

### II. Wiring the Fixture

3. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
4. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate or a house wire (green or bare copper wire without insulation).
5. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
  - a) Hot (black) fixture wire to hot power line wire
  - b) Neutral (white) fixture wire to neutral power line wire
6. Carefully tuck all the wires and wire-nut connections into the junction box.

### III. Installing the Fixture

7. Mount the fixture onto the mounting plate and secure it in place by installing the fixture screws.
8. Screw the bulb into the socket. Refer to the socket label for max wattage information.
9. Install the shade over the bulb to finish.