

STASSI MEDIUM SEMI FLUSH

AF1212

General Product Information



Intertek



SAVE THESE INSTRUCTIONS!



STANDARD INSTALLATION



INDOOR



DAMP LOCATION SAFE



NEC COMPLIANT JUNCTION BOX



BULB(S) (NOT INCLUDED)



CONVERTS TO LED



PLEASE SEE [visualcomfort.com](https://visualcomfort.com) FOR PRODUCT SPECS



CLEAN WITH SOFT, DRY CLOTH ONLY. NO HARSH CHEMICALS!




BEST PRACTICE: HANDLE FIXTURE WITH GLOVES




Product Warranty




FCC Statement

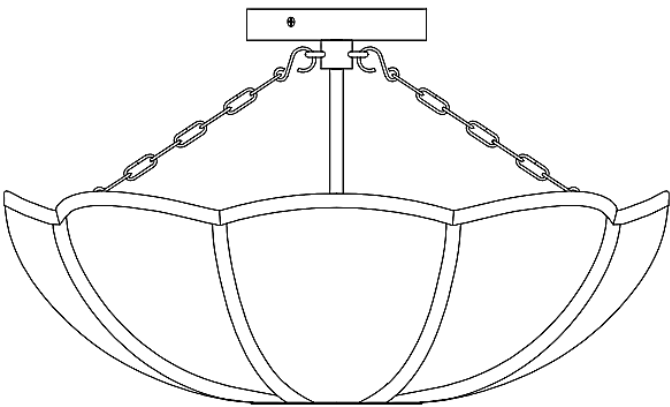


Suggested/Required Tools




ELECTRIC DRILL



PHILLIPS-HEAD SCREWDRIVER



PENCIL/MARKER



WIRE CUTTER

Safety Information

CAUTION-RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.

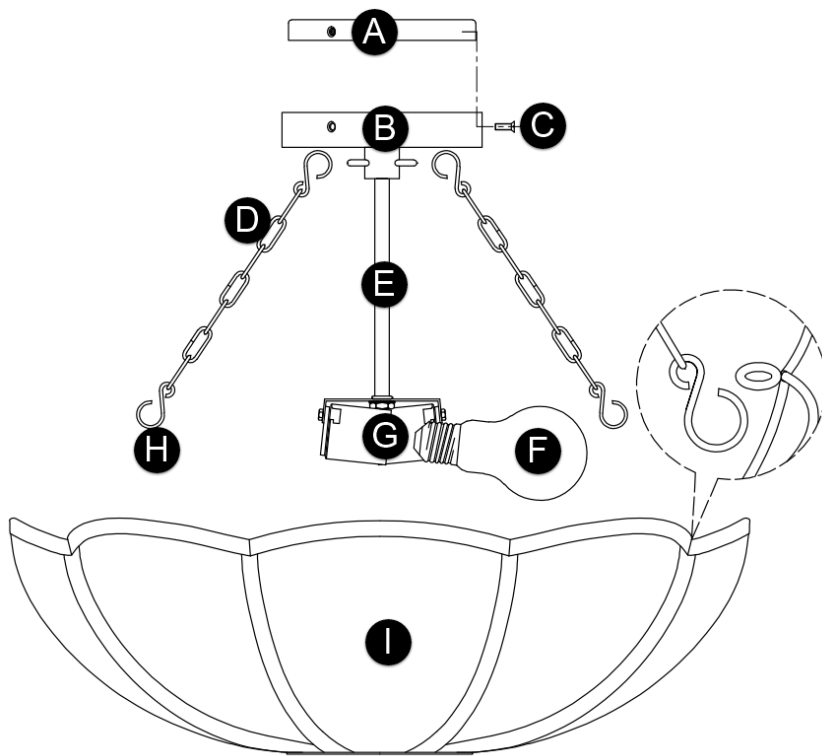

## FIXTURE PARTS

- A. Mounting Plate
- B. Canopy
- C. Fixture Screws
- D. Hang Chains
- E. Threaded Rod
- F. Bulbs (Not Included)
- G. Sockets
- H. S Hooks
- I. Shade Assembly

## INSTRUCTIONS

### **I. Preparing the Fixture**

1. Separate the mounting plate from the canopy by removing the fixture screws.
2. Secure the mounting plate to the junction box.

### **II. Wiring the Fixture**

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
  - a) Hot fixture wire (black) to hot power line wire
  - b) Neutral fixture wire (white) to neutral power line wire
4. Carefully tuck all the wires into the junction box.

### **III. Installing the Fixture**

1. Place the canopy onto the mounting plate and secure it with the fixture screws.
2. Screw the bulbs into the sockets. Refer to the socket label for max wattage information.
3. Attach the s-hooks on one end of the hang chains onto the canopy loops, then attach the s-hooks on the other end of the hang chains onto the shade assembly to complete installation.