



WIRING METHOD A

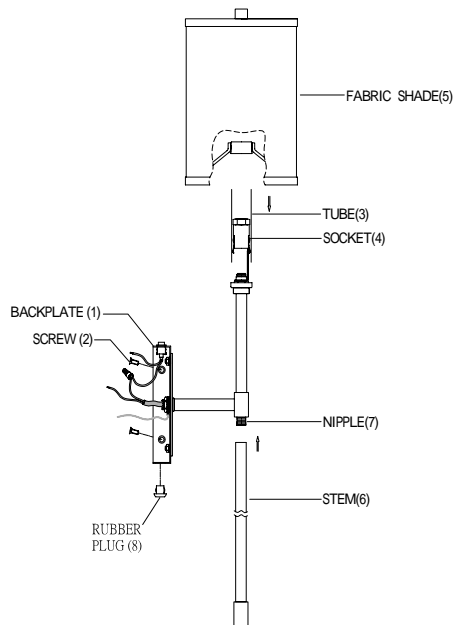

WIRING METHOD B

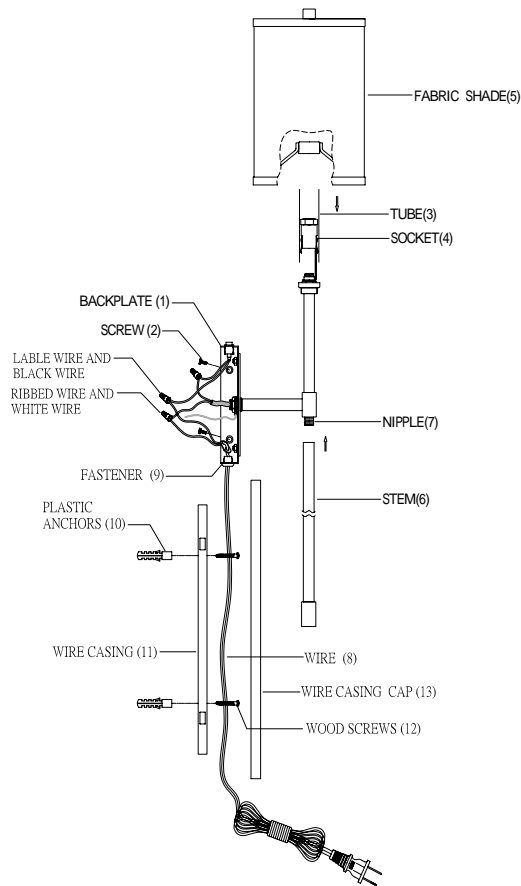

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Install the backplate(1) to the wall using the screw(2).
4. Refer to the additional installation instructions included with the product for wiring and installation.
5. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
6. Install the tube (3) into socket (4). Attach fabric shade (5) to tube (3).
7. Install the stem (6) onto the nipple (7).
8. Wiring Method A: Insert the rubber plug (8) into the hole on the backplate (1).
9. Wiring Method B: Connect the label wire and the black wire together, Connect the ribbed wire and the white wire together. Use the fastener (9) to fix the wire (8).
10. Install the wire casing (11) onto plastic anchors (10) and secure with wood screws (12).
11. Install the wire casing cap (13) onto wire casing (11).
12. Restore power to the installation point and retain this sheet for future reference.
13. Note: To secure this sconce as a plug in, it should be installed into a stud.