





SW5706-CT NATURAL TEAK COFFEE TABLE - OVERSIZED Assembly Instructions



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.


HARDWARE PACK

NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		S.S Washer	Φ10xΦ20x2mm	8
B		S.S Washer	Φ10x2mm	8
C		Hex Nut	M10	8
D		Wrench	M17	1

PART LIST


NO.	DRAWING	DESCRIPTION	Q'TY
1		Top	1
2		Legs	4

STEP 1/5

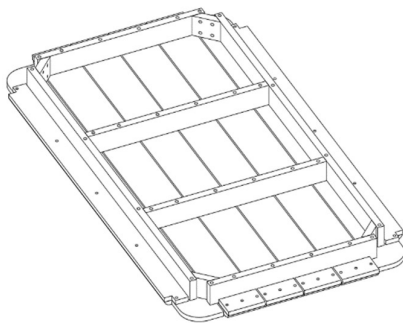


Lay top section flat on level surface. Bottom side facing upward.

STEP 2/5

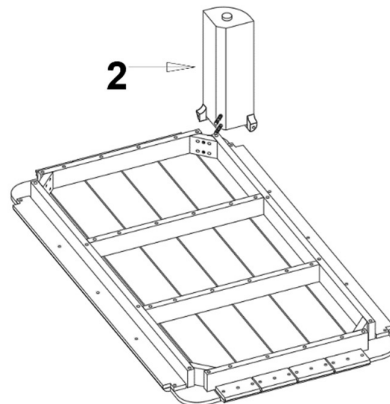


Align and insert one Leg section into the corner-block.

STEP 3/5

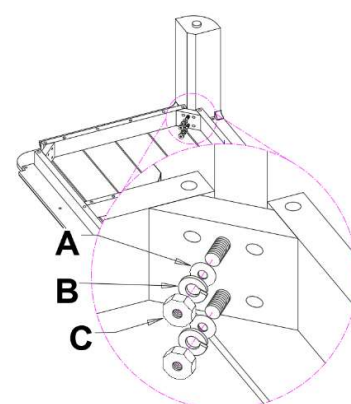


Insert the Hex nut through a washer from the corner-block onto the leg. Tighten it firmly with 17mm (0.67") wrench.

STEP 4/5

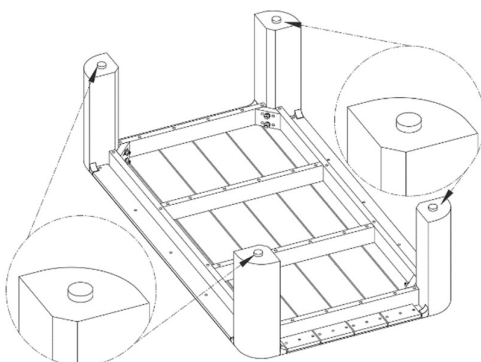

Repeat Step 2 and 3 for the other three Legs.

STEP 5/5

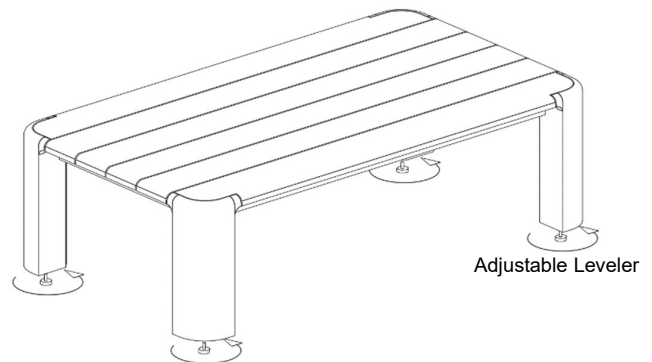

Turn the table upright.

Congratulations, You Have Just Finished Assemble Your Own Teak Table!

ASSEMBLY INSTRUCTION: NATURAL TEAK COFFEE TABLE - OVERSIZED