

Bau Linear Suspension

700LSBAU | 1.1

VISUAL COMFORT & Co.

MODERN COLLECTION

GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.

This product can be dimmed with a standard electronic dimmer.


This instruction shows a typical installation.

SAVE THESE INSTRUCTIONS!

CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

WARNING - LUMINAIRE SUPPORT
The luminaire must be supported independent of the outlet box unless the outlet box is listed for the weight to be supported. Please see below for complete luminaire weight:

700LSBAU*-LED930 - 40lbs.

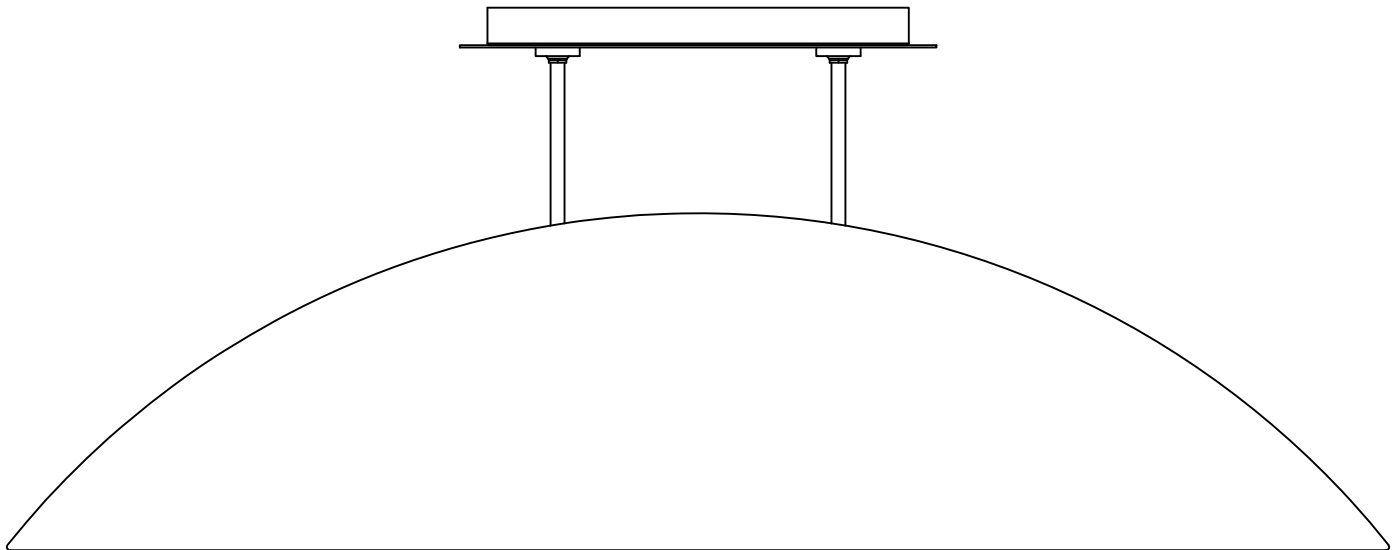

VISUAL COMFORT & Co.


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F

847.410.4500

www.visualcomfort.com

1A

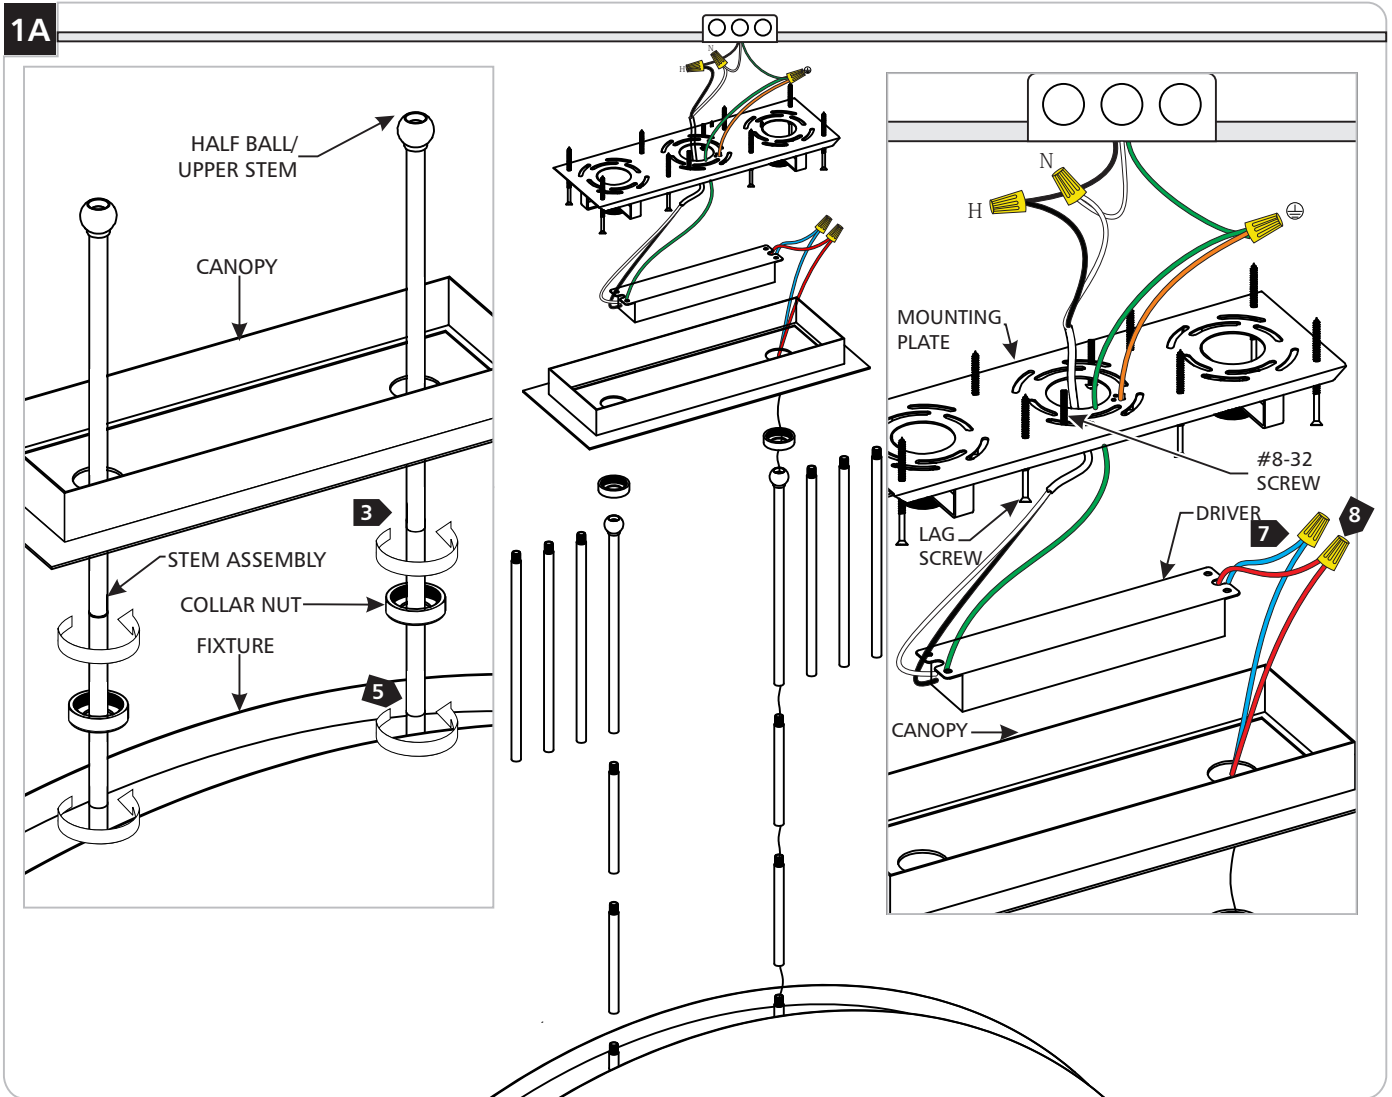

- 1 Remove the mounting plate and driver from the canopy.
- 2 Secure the mounting plate to the junction box with the provided #8-32 screws. **Warning: if the outlet box is not listed to support the luminaire's weight, it must be supported by an independent structure. See cover page for luminaire weight.**
- 3 Determine the desired height of the fixture using the provided stems and half ball/upper stems and assemble them by screwing them together.
- 4 Slide a collar nut over each half ball/stem assembly.
- 5 Feed the fixture wires through a stem assembly, then screw the stem assemblies to the top of the fixture.
- 6 Feed the fixture wires and half ball/stem assembly through the canopy, then seat the half balls into the mounting plate. (**Make sure to avoid pinching the wires on the one side.**)
- 7 Connect the blue driver wire to the blue fixture wire with a wire nut.
- 8 Connect the red driver wire to the red fixture wire with a wire nut.
- 9 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 10 Connect the white driver wires to the neutral power line wire with a wire nut.
- 11 Connect the black driver wires to the hot power line wire with a wire nut.
- 12 Neatly place the drivers, all wires, and wire nut connections inside the canopy, slide the canopy up to over the mounting bracket and secure in place with the collar nuts.