

# Ponte Linear Suspension

**700LSPNT50** | 1.0

VISUAL COMFORT & Co.

MODERN COLLECTION

## GENERAL PRODUCT INFORMATION:

This product is suitable for damp locations.

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product can be dimmed with most ELV or TRIAC dimmers.

This instruction shows a typical installation.




## CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Use minimum 90°C supply conductors.**

**Two Person Installation Recommended.**

**SAVE THESE INSTRUCTIONS!**

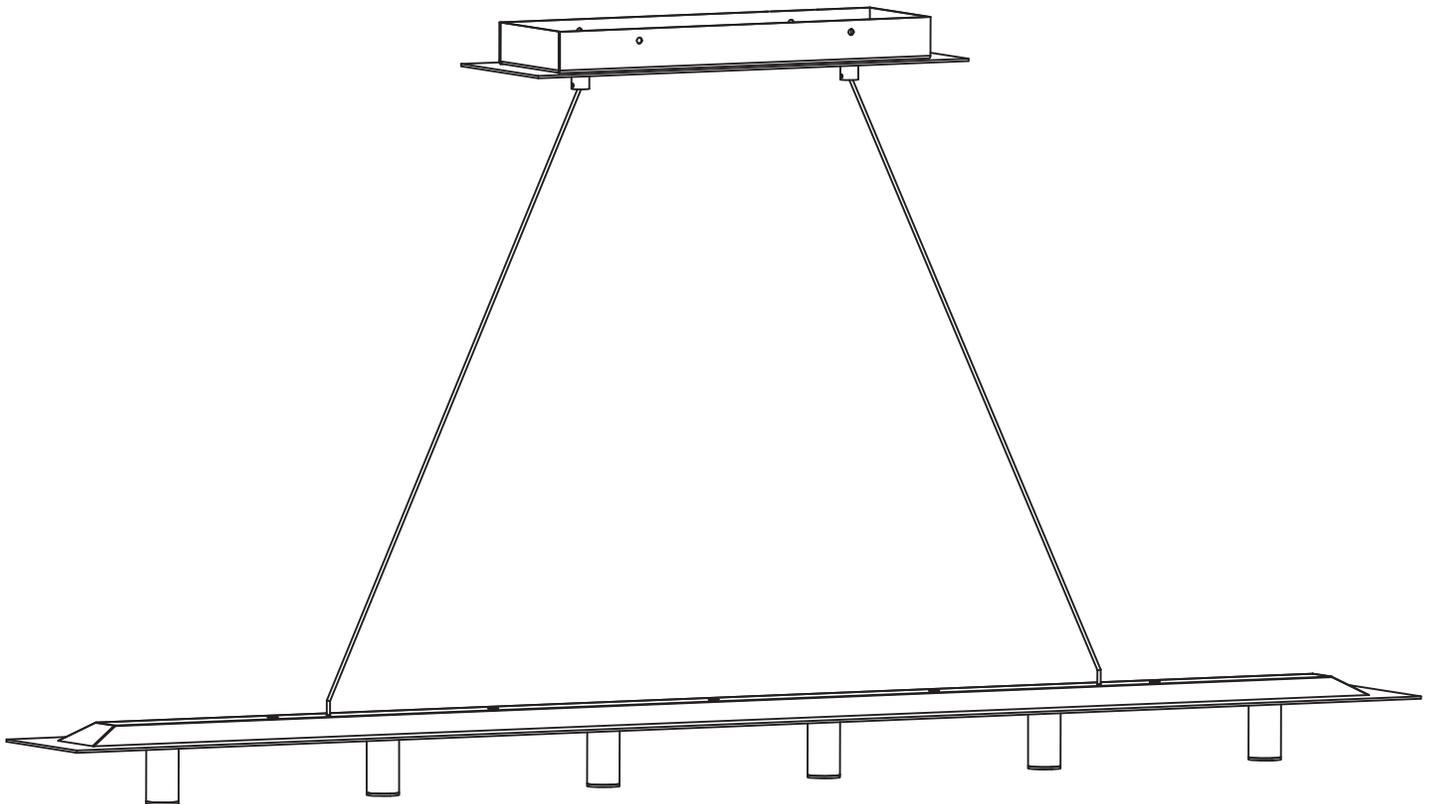

VISUAL COMFORT & Co.

7400 Linder Ave., Skokie, IL 60077


T 847.410.4400 | F

847.410.4500

[www.visualcomfort.com](http://www.visualcomfort.com)

# Install the Fixture

1A

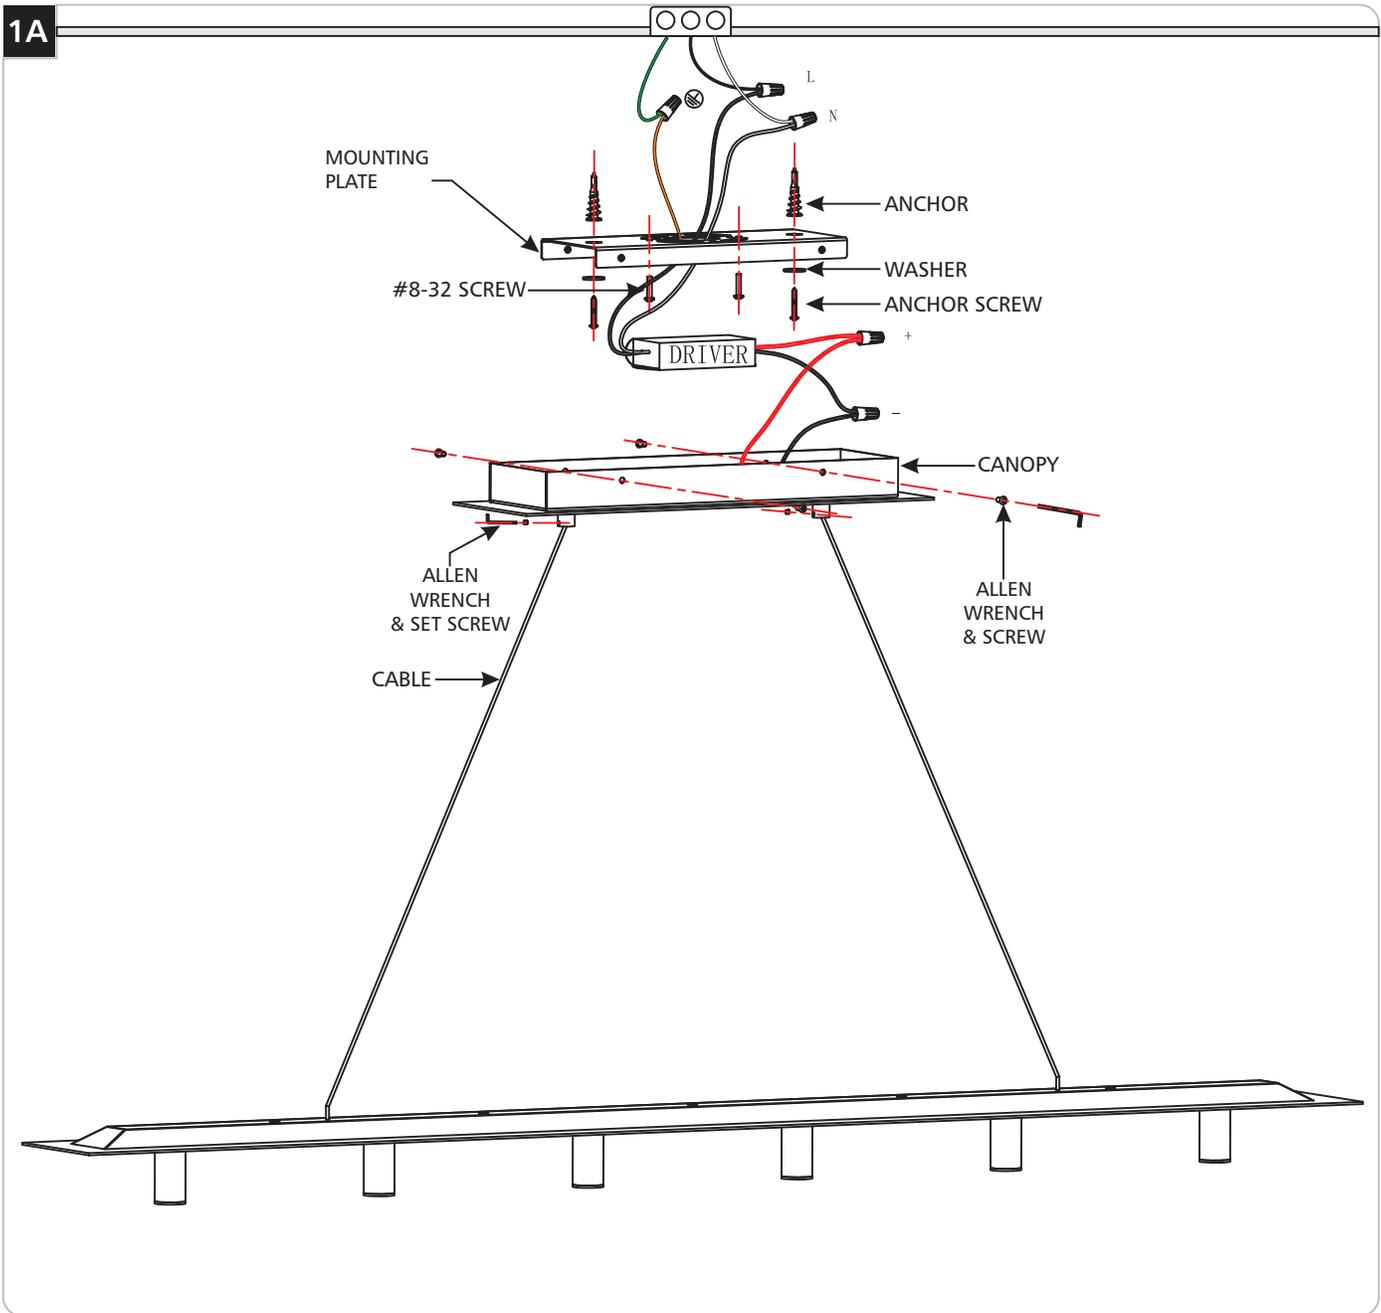

- 1 Remove all the canopy screws using the provided Allen Wrench.
- 2 Remove the mounting plate from the canopy and remove the driver from the packaging.
- 3 Temporarily secure the mounting plate to the electrical box with the provided #8-32 screws
- 4 Mark the location of the anchors and remove the mounting plate.
- 5 Line the anchor tip to the marked location and push the anchor into the ceiling up to the threads. Screw the anchor the rest of the way with a Phillips-head screwdriver. Repeat for remaining anchor holes.
- 6 Reinstall the mounting plate to the junction box and secure it to the ceiling with anchor screws and washers.
- 7 Determine the desired height of the fixture and adjust the cables accordingly. Secure the cables in place with the set screws and Allen wrench.
- 8 Connect the black/blue driver wire to the black/blue fixture wire with a wire nut.
- 9 Connect the red driver wire to the red fixture wire with a wire nut.
- 10 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 11 Connect the white driver wire to the neutral power line with a wire nut.
- 12 Connect the black driver wire to the hot power line with a wire nut.
- 13 Neatly place the drivers, all wires, and wire nut connections inside the canopy, align the canopy holes with the mounting plate holes, and secure the canopy in place by tightening the Allen screws using the provided Allen Wrench.