Ebell Pendant

700TDEBL2_, 700TDEBL_ | **1.0**

⌐L TECH LIGHTING®

PENDANT

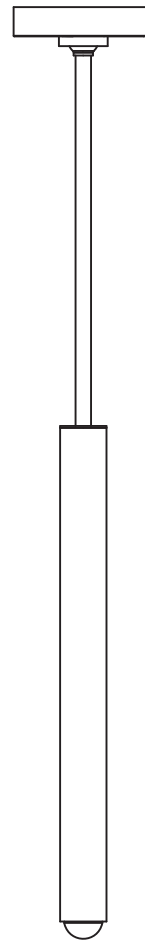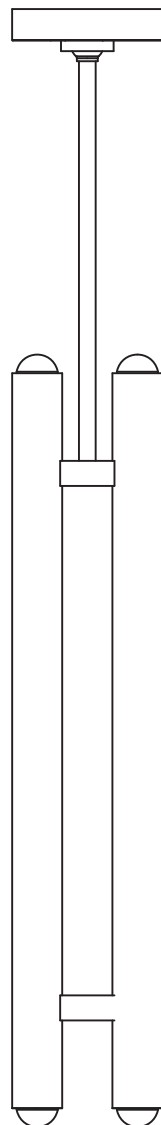**GENERAL PRODUCT INFORMATION:**

c ETL us
LISTED
Intertek

This product is suitable for indoor locations.

Dimmable with most LED compatible ELV, TRIAC and 0-10V dimmers.

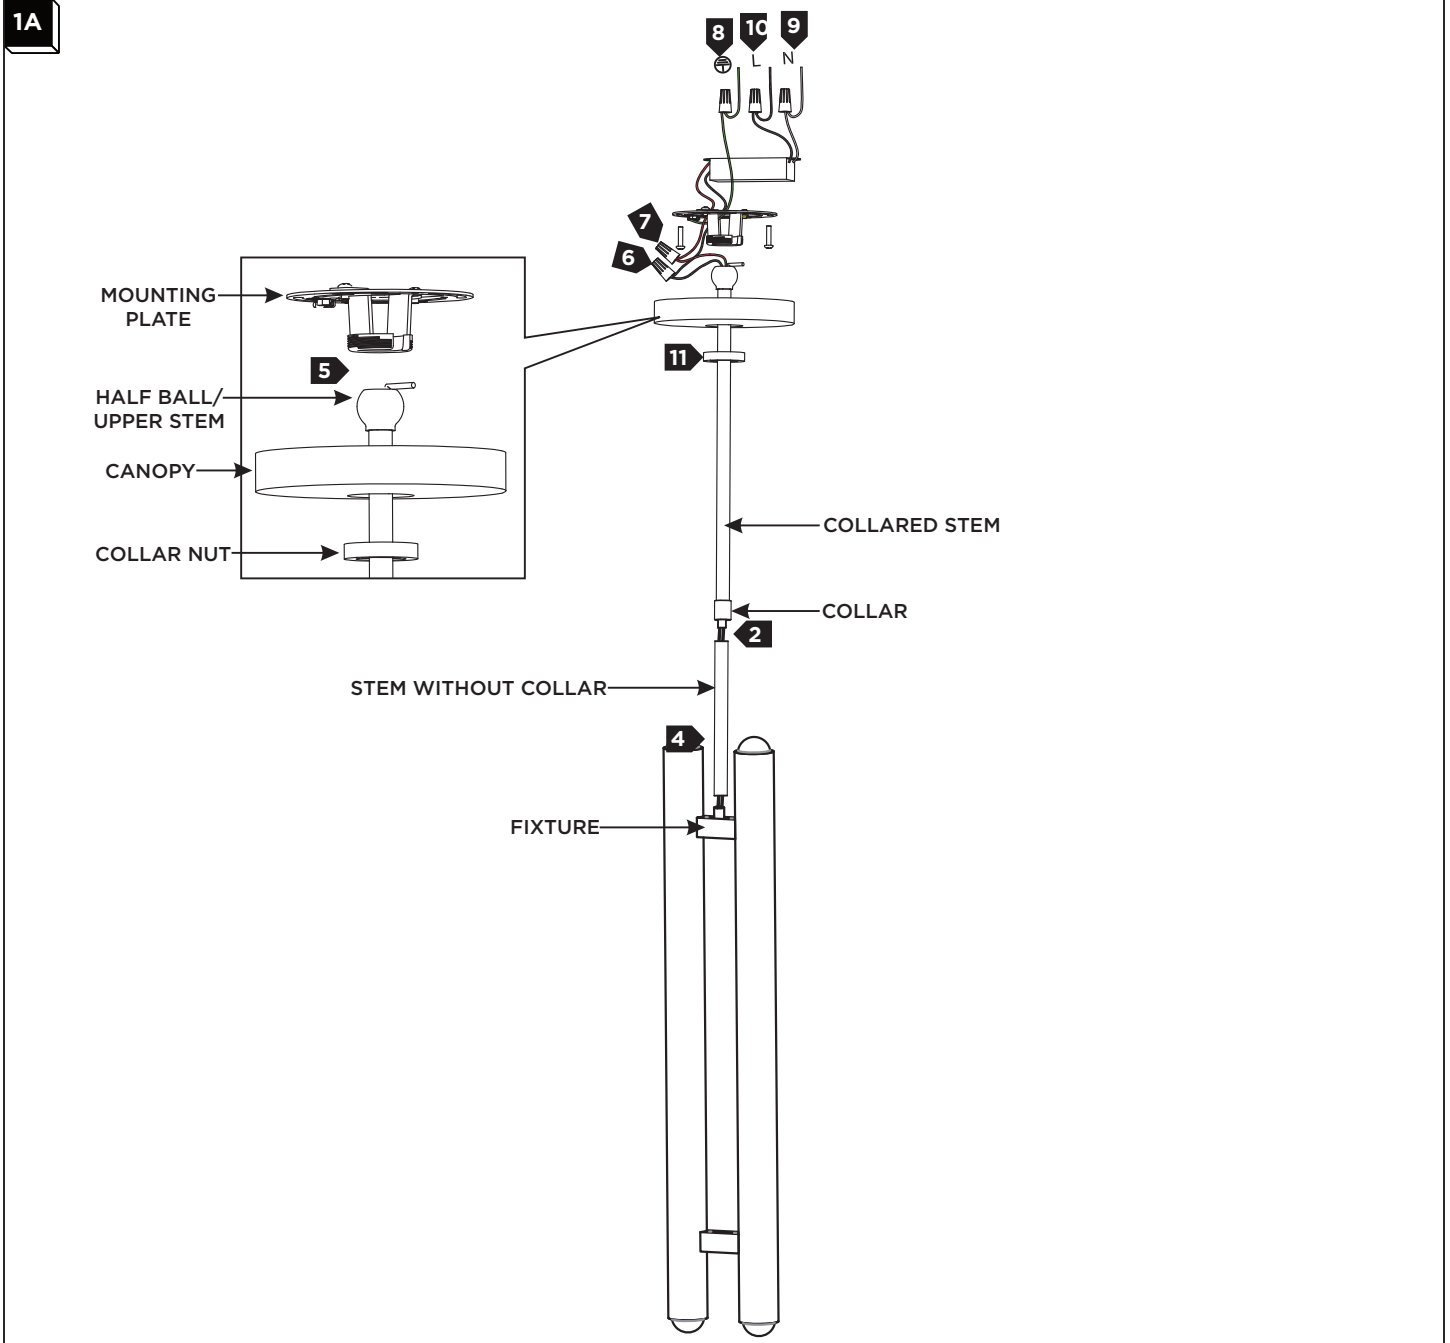This instruction shows a typical installation.

CAUTION - RISK OF FIRE
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
Use minimum 90°C supply conductors.

SAVE THESE INSTRUCTIONS!

⌐L TECH LIGHTING

7400 Linder Ave., Skokie, IL 60077
T 847.410.4400 | F 847.410.4500
www.techlighting.com

VISUAL COMFORT & CO.

Install the Fixture

1A

MOUNTING PLATE

HALF BALL/ UPPER STEM

CANOPY

COLLAR NUT

5

8 **10** **9**

7

6

11

COLLARED STEM

COLLAR

2

STEM WITHOUT COLLAR

4

FIXTURE

1 ▶ Install the mounting plate to the junction box with the two provided #8-32 screws.

2 ▶ Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together. Note: stem without a collar must be installed on the bottom of the assembly unless already pre-installed.

3 ▶ Slide the canopy, then the collar nut onto the half ball/stem assembly.

4 ▶ Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture or pre-installed stem depending on your model.

5 ▶ Seat the half ball into the mounting plate ensuring no wires are being pinched.

6 ▶ Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.

7 ▶ Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.

8 ▶ Connect the fixture to a suitable ground in accordance with local electrical codes.

9 ▶ Connect the white input driver wire to the neutral power line wire with a wire nut.

10 ▶ Connect the black input driver wire to the hot power line wire with a wire nut.

11 ▶ Neatly place the driver, wire, and wire nut connections inside the canopy/electrical box, then slide the canopy up over the mounting plate and secure in place with the collar nut.