

Langston Large and Medium Chandelier

700LGSN_

1.0

VISUAL COMFORT & Co.

MODERN COLLECTION

GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.

Dimmable with most LED compatible ELV, TRIAC and 0-10V dimmers.

This instruction shows a typical installation.


CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°C supply conductors.

2 PERSON INSTALL

SAVE THESE INSTRUCTIONS!

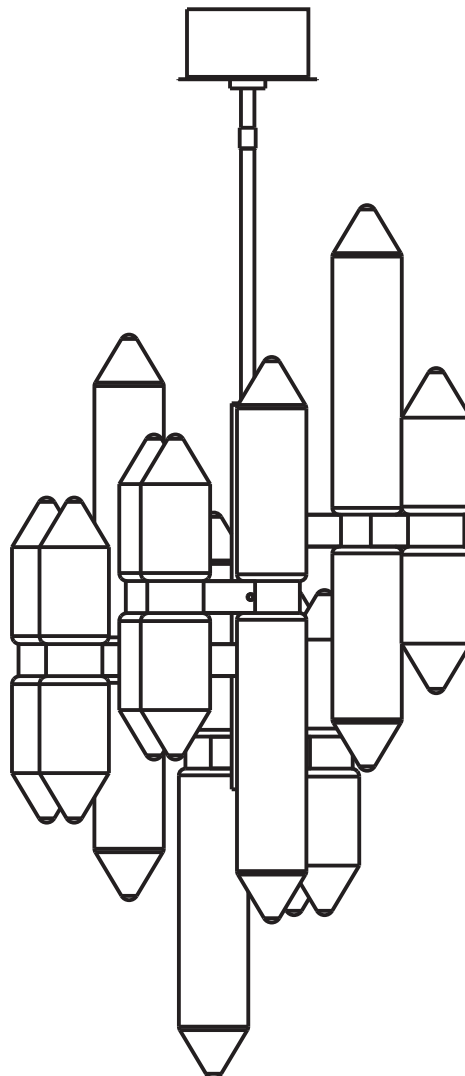

VISUAL COMFORT & Co.

7400 Linder Ave., Skokie, IL 60077


T 847.410.4400 | F

847.410.4500

www.visualcomfort.com

Install the Fixture

1A

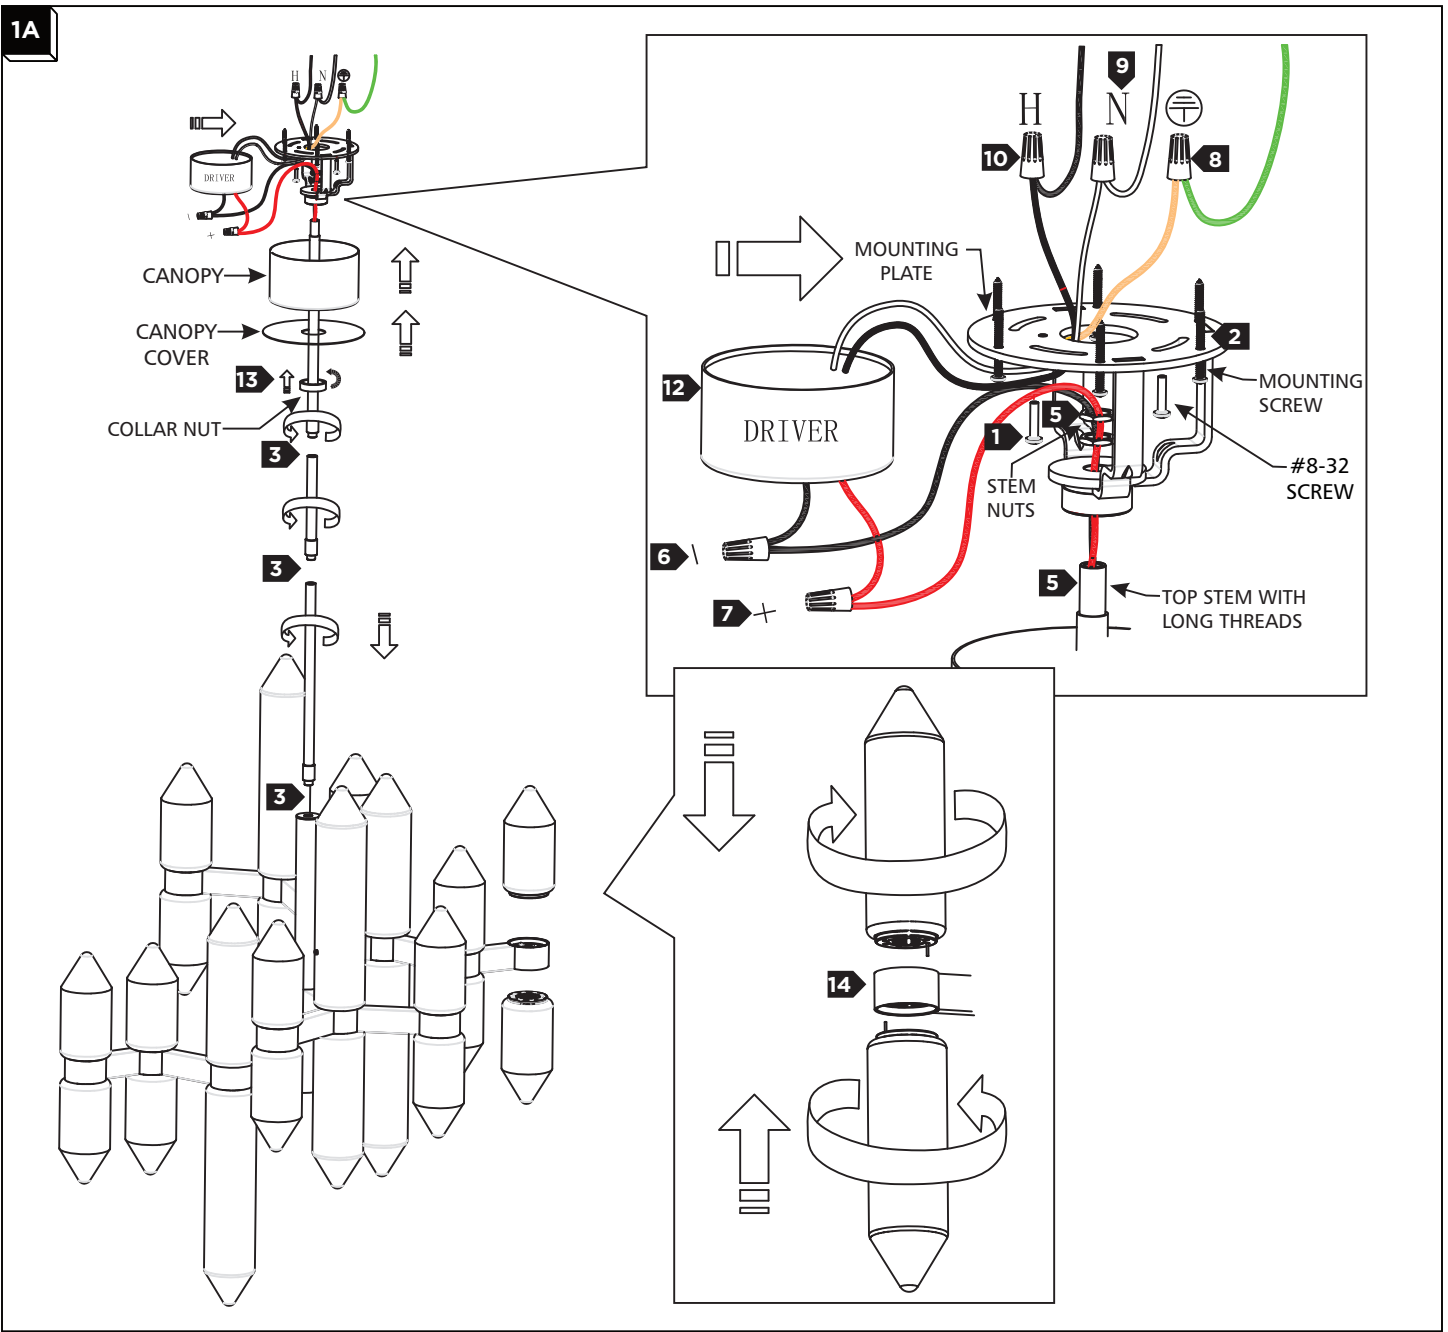

- 1 Install the mounting plate to the electrical box with the #8-32 screws provided.
- 2 Secure the mounting bracket with the mounting screws. **CAUTION: mounting screws must be screwed into a solid structure capable of supporting the fixtures weight.**
- 3 Assemble the stems to the desired height, feed the fixture wires through the stem assembly and screw them onto the fixture. Install the stem with the two male ends on top of the assembly, ensuring that the longer threaded end is on top.
- 4 Install the collar nut, the canopy cover, and the canopy onto the stem assembly in that exact order.
- 5 Insert the top stem into the mounting plate and tightly secure it in place with the stems nuts. **NOTE: an assistant will be needed to hold the fixture in place for this step.**
- 6 Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.
- 7 Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.
- 8 Connect the fixture to a suitable ground in accordance with local electrical codes.
- 9 Connect the white input driver wire to the neutral power line wire with a wire nut.
- 10 Connect the red input driver wire to the hot power line wire with a wire nut.
- 11 Use the gray/pink and purple dimming wires for 0-10v dimming application (if not in use, make sure to cap these wires off).
- 12 Carefully tuck the driver into the mounting bracket.
- 13 Neatly place the wires and wire nut connections inside the canopy, then slide the canopy and the canopy cover up to over the mounting bracket and secure in place with the collar nut.
- 14 Install the shades by screwing them into the shade bases.