

# Wythe Small and Medium Chandelier

700WYT6\_, 700WYT6M\_ 1.0

VISUAL COMFORT & Co.

MODERN COLLECTION

## GENERAL PRODUCT INFORMATION:



This product is suitable for indoor locations.



This product can be dimmed with most LED compatible ELV and Triac dimmers.

This instruction shows a typical installation.

**CAUTION - RISK OF FIRE**  
This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.  
**Use minimum 90°C supply conductors.**

**2 PERSON INSTALL**

**SAVE THESE INSTRUCTIONS!**

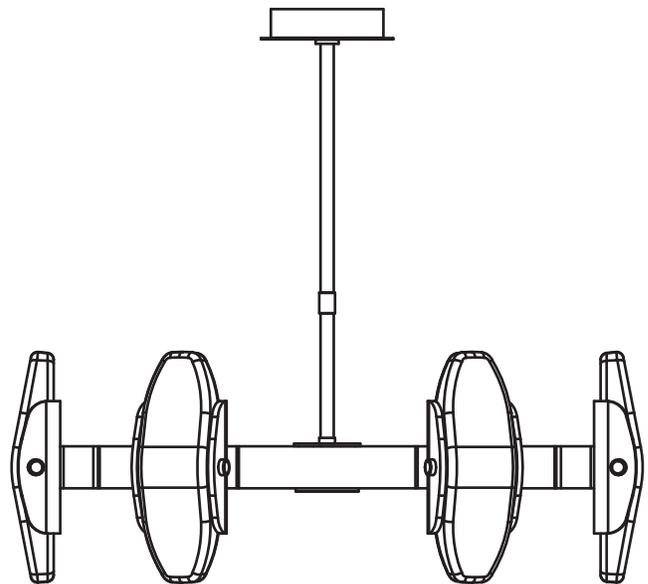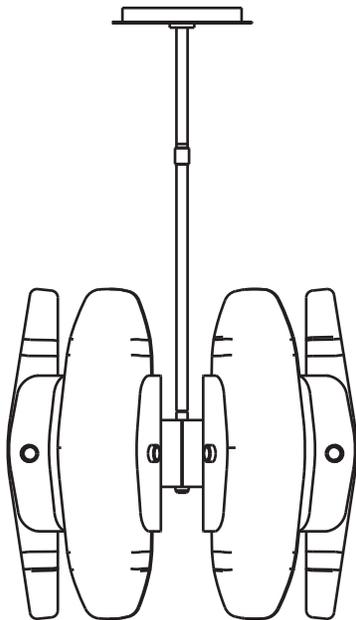

VISUAL COMFORT & Co.


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F

847.410.4500

[www.visualcomfort.com](http://www.visualcomfort.com)

# Install the Fixture

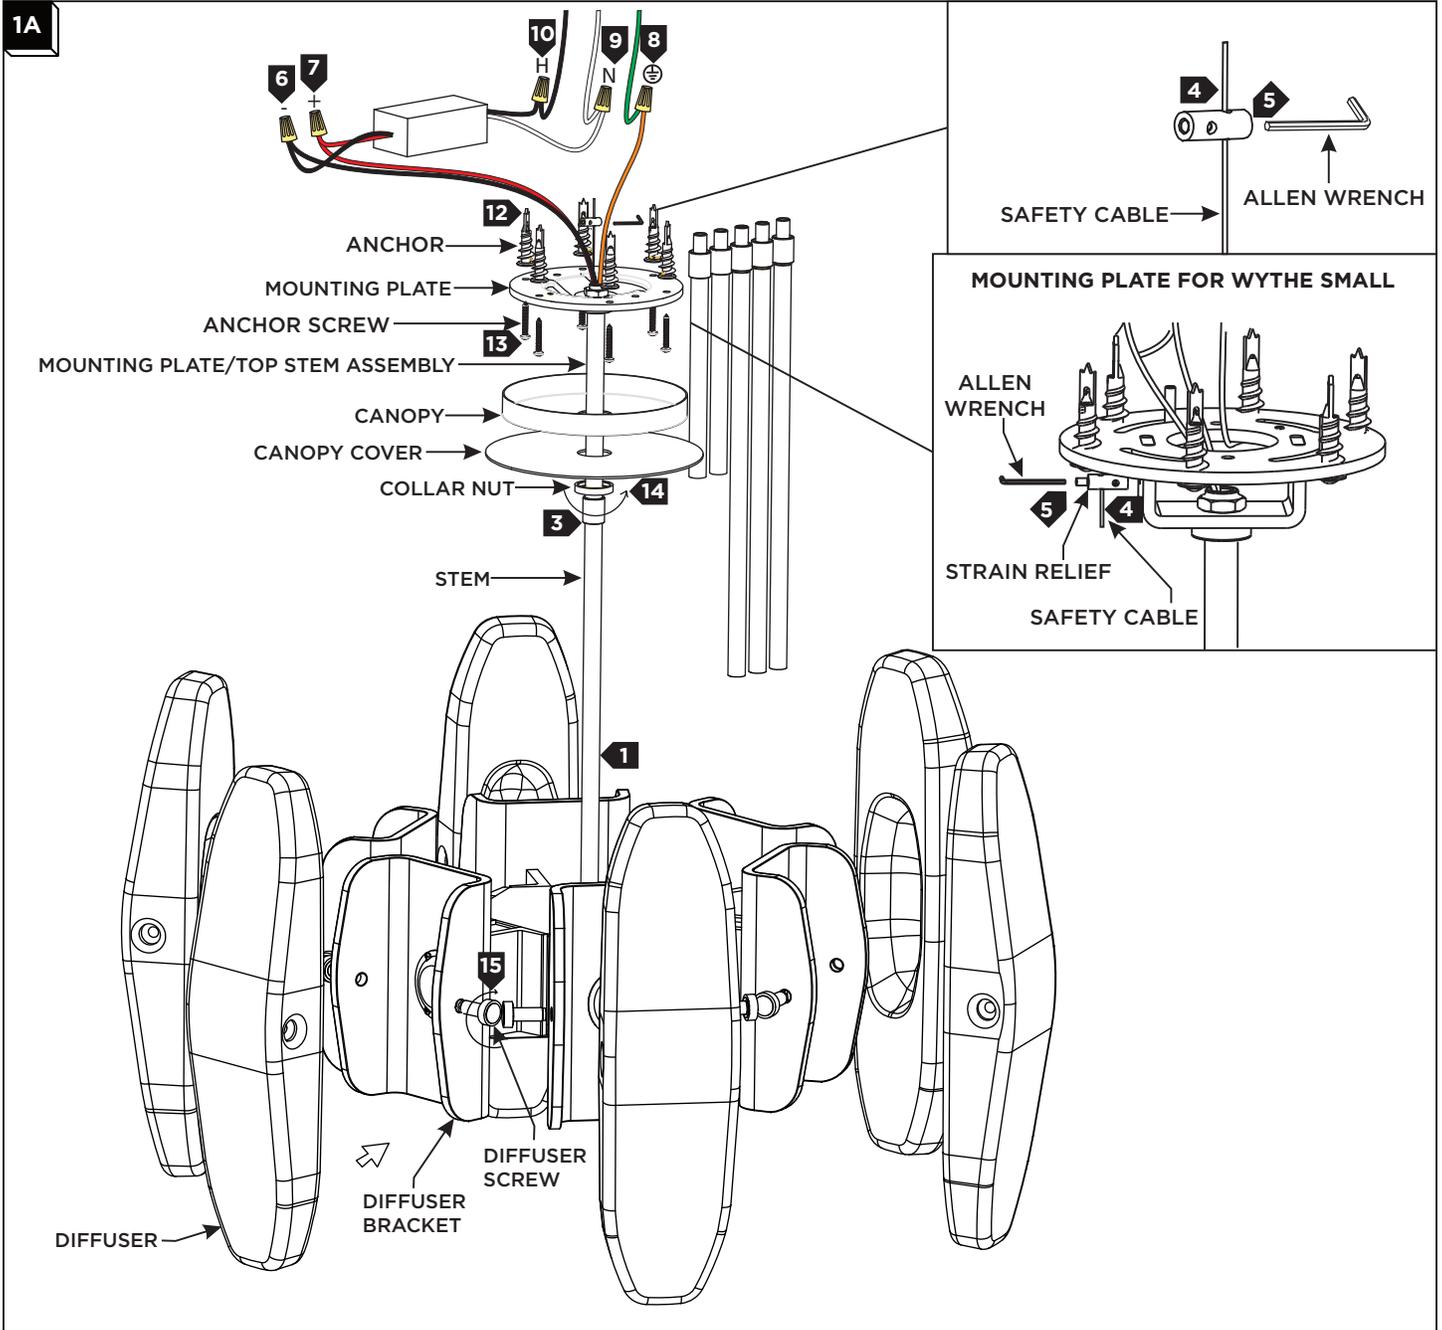

- 1** Assemble the stems to the desired height (save the mounting plate/stem assembly for the next step), feed the fixture wires and the safety cable through the stem assembly and screw them onto the fixture.
- 2** Slide the canopy, canopy cover, then the collar nut onto the mounting plate/top stem assembly.
- 3** Feed the fixture wires and the safety cable through the mounting plate/stem assembly, then screw it to the fixture/stem assembly.
- 4** Insert the safety cable into the strain relief and slide it down to the mounting plate.
- 5** Tighten the set screw on the strain relief with the provided Allen wrench.
- 6** Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.
- 7** Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.  
An assistant will be needed to hold the fixture up for the following steps.
- 8** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 9** Connect the white input driver wire to the neutral power line wire with a wire nut.
- 10** Connect the black input driver wire to the hot power line wire with a wire nut.
- 11** Temporarily place the fixture centered over the electrical box at the desired position and mark the anchor hole locations.
- 12** Move the fixture out of the way and install the anchors by tapping them in to the drywall then screw them the rest of the way in with a screw driver.
- 13** Neatly place the driver, wire, and wire nut connections back inside the electrical box and secure the mounting plate with the anchor screws.
- 14** Slide the canopy up over the mounting plate, followed by the canopy cover, and secure them in place with the collar nut.
- 15** Install a diffuser onto a diffuser bracket and secure it in place with a diffuser screw on each side. Repeat for the rest of the diffusers.