

**Phobos Linear****700LSPHB\_****1.0**

VISUAL COMFORT &amp; Co.

MODERN COLLECTION

**GENERAL PRODUCT INFORMATION:**

This product is suitable for indoor locations.


Dimmable with most LED compatible TRIAC and 0-10V dimmers.

This instruction shows a typical installation.

**CAUTION - RISK OF FIRE**

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

**Use minimum 90°C supply conductors.**

**SAVE THESE INSTRUCTIONS!**

VISUAL COMFORT &amp; Co.


7400 Linder Ave., Skokie, IL 60077

T 847.410.4400 | F

847.410.4500

[www.visualcomfort.com](http://www.visualcomfort.com)

## Install the Fixture

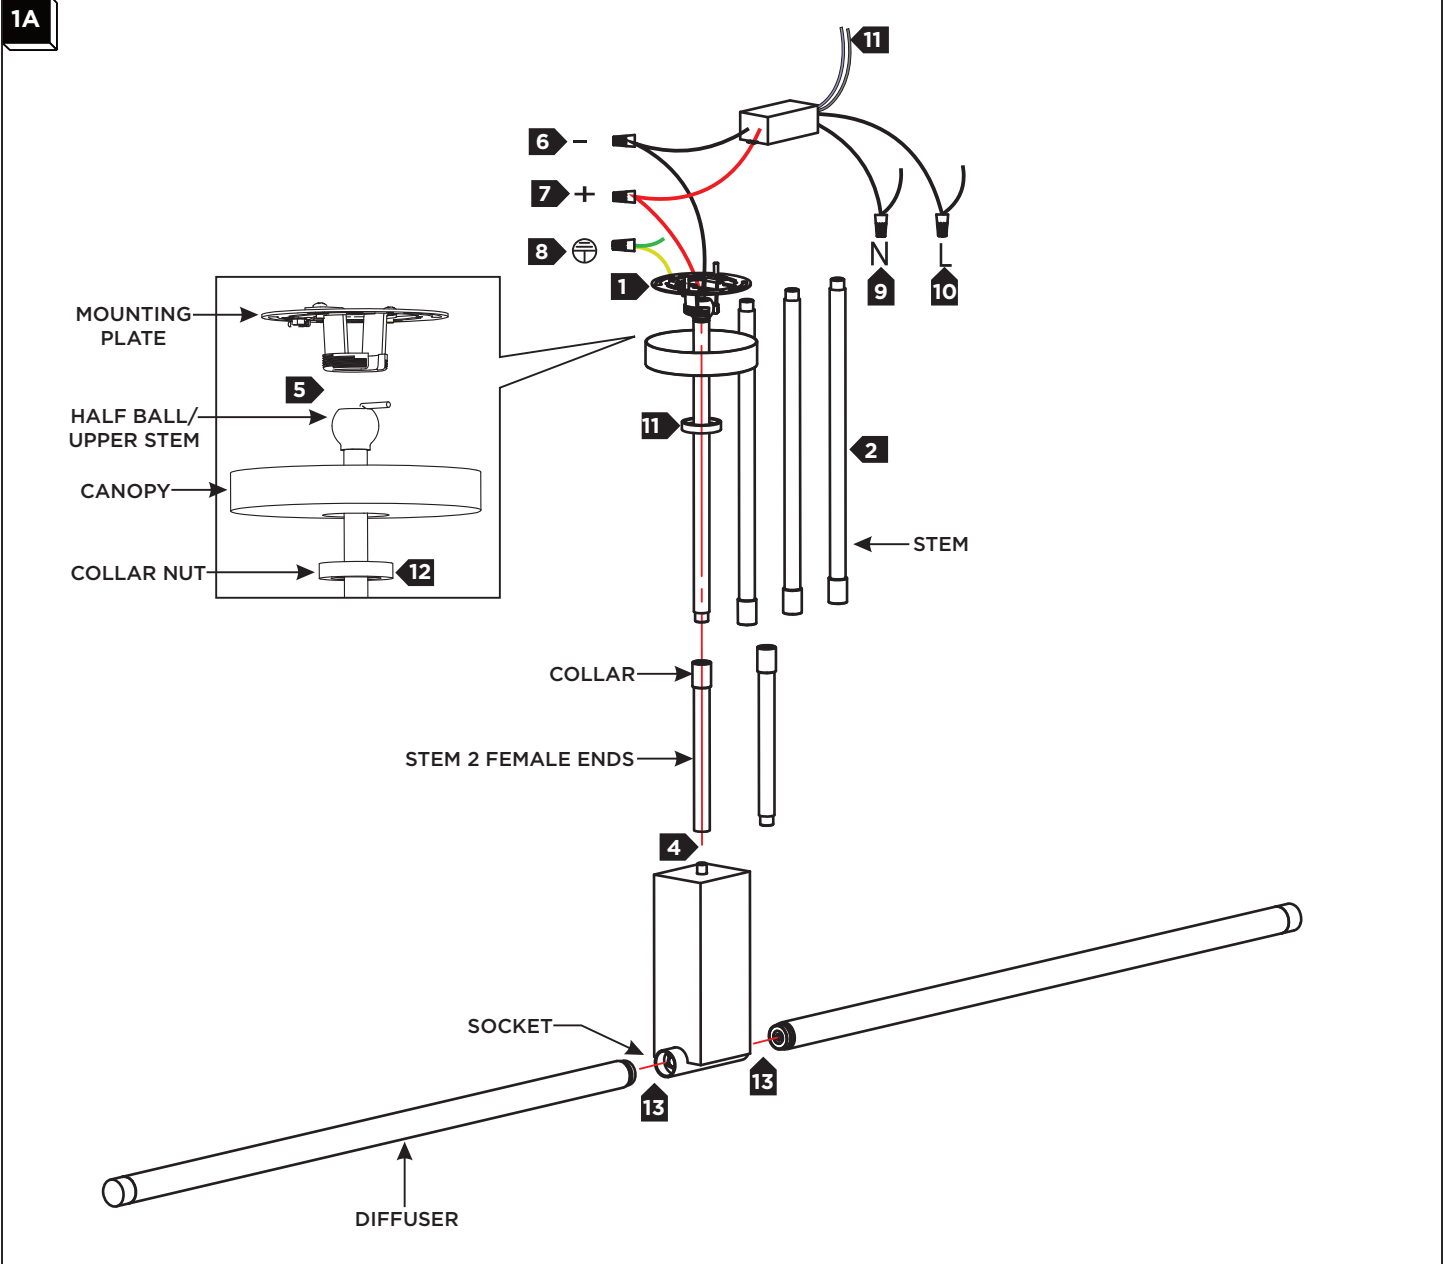

- 1** Install the mounting plate to the electrical box with the two provided #8-32 screws.
- 2** Determine the desired height of the fixture using the provided stems and half ball/upper stem and assemble them by screwing them together. Note: stem with 2 female ends must be installed on the bottom, collar on top.
- 3** Slide the canopy, then the collar nut onto the half ball/stem assembly.
- 4** Feed the fixture wires through the stem assembly, then screw the stem assembly to the top of the fixture base.
- 5** Seat the half ball into the mounting plate ensuring no wires are being pinched.
- 6** Connect the negative (-) fixture wire to the negative (-) output driver wire with a wire nut.
- 7** Connect the positive (+) fixture wire to the positive (+) output driver wire with a wire nut.
- 8** Connect the fixture to a suitable ground in accordance with local electrical codes.
- 9** Connect the white input driver wire to the neutral power line wire with a wire nut.
- 10** Connect the black input driver wire to the hot power line wire with a wire nut.
- 11** **For 0-10V Dimming**, connect the purple and gray wires to a compatible dimmer. **If not using 0-10V dimming**, make sure to cap off these wires.
- 12** Neatly place the driver, wire, and wire nut connections inside the canopy/electrical box, then slide the canopy up over the mounting plate and secure in place with the collar nut.
- 13** Install the diffusers by inserting them firmly into the sockets.