

UTTERMOST

ASSEMBLY INSTRUCTIONS


21631

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF WHILE POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

We suggest a licensed professional electrician for installation

Installation Steps

1. Turn power off at fuse or circuit box before starting installation process.
2. Carefully unpack your new fixture and lay out all the parts on a clear surface.
3. Rotate A into E tightly, Choose the suitable number of Metal Rods and install the Metal Rod A,B,C,D into the Coupling. Install swivel if needed for installation. Remove excess wire.
4. Slip Collar ring and Canopy over the Rod assembly.
5. Slip Universal bar assembly along wire and thread it into the Metal Rod D.
6. Raise fixture up and attach Universal bar to the Outlet box using two Outlet box screws. (See Figure 1)
7. Install the Ground Wire in the Universal Bar with the supplied Green Ground Screw.
8. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box, (Connecting the Wire---See Figure 2)
Carefully tuck wires back into the Outlet Box.
9. Slip Canopy up along rods and over the Universal bar and hold it in position. Slip Collar ring up to Canopy and thread it onto the Screw collar, to secure Canopy.
10. Install **5*60W**, E12 bulbs G (type B) (Not Supplied) into Socket (F), in accordance with the fixture's specifications.

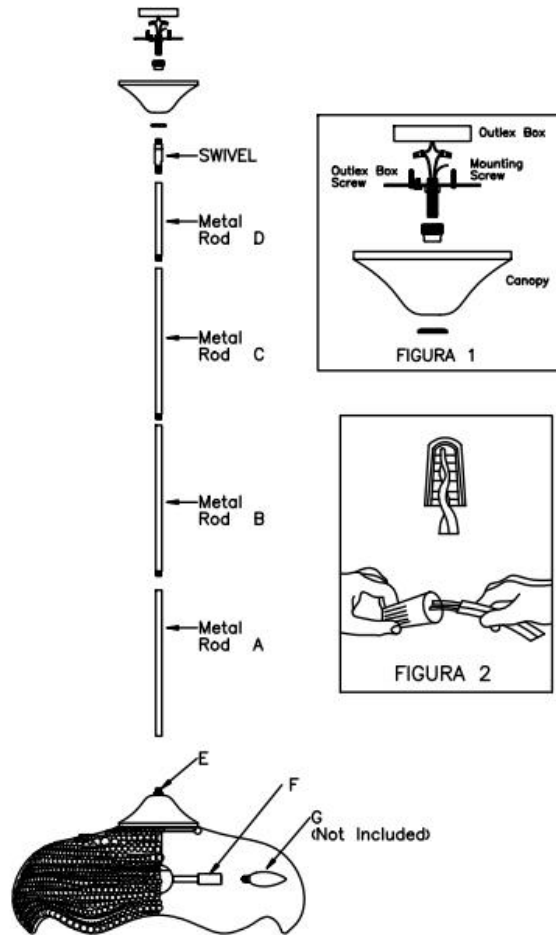

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

Swivel is included in hardware pack so you can use it if needed only.

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

www.uttermost.com