


UTTERMOST

ASSEMBLY INSTRUCTIONS

Assembly Instructions

STYLE NO: 50076

1. Take all parts carefully out of the carton and place on a flat surface to be sure no parts are missing or damaged.
2. Screw the Body (B) onto the Base (C).
3. Screw the Table Top (A) onto the top of Body (B).

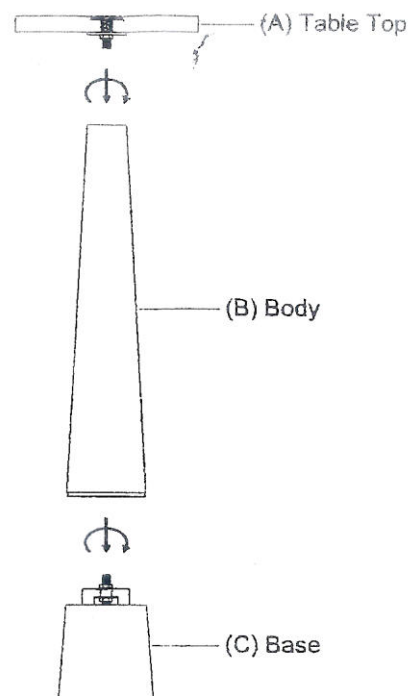

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com