

ASSEMBLY INSTRUCTIONS

Utopia Large Linear Pendant

Item # KW 5550

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.


TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver	Slotted Screwdriver	Chain Pliers
Slip Joint Pliers	Measuring Tape	Wire Cutters
Wire Strippers	Hammer	Pencil

1. Carefully remove all parts from the box. Place on a clean, soft surface.
2. Remove mounting plate **(E)** from canopy **(H)** by loosening collar ring **(I)**.
3. Using the mounting plate **(E)** as a guide, line up with the junction box and mark anchor positions using a pencil.
4. Using a drill bit slightly smaller than the anchor, drill holes in the marked positions. Install anchors **(D)** into the holes using a hammer.
5. Feed fixture wires and support cable through rods **(M)** and connect to fixture body **(N)**.
6. Continue feeding fixture wires through collar rings **(I)**, canopy **(H)** and top rods **(J)**.
7. Holding fixture upright, slide collar rings **(I)** and canopy **(H)** down bottom rods **(H)** and rest on fixture body **(N)**. Then connect top rods **(J)** to bottom rods **(M)**.

NOTE: Slide components down slowly to avoid damages.

8. Attach mounting plate **(E)** to top rods **(J)** and secure with lock washers **(C)** and hex nuts **(B)** using provided wrench **(R)**.
9. Install mounting plate **(E)** to the junction box and secure with mounting screws **(G)**, then secure wood screws **(F)** to anchors **(D)**.
10. Cut excess wires, being sure to leave enough to reach the junction box.
11. Separate two sides of molded wire and strip insulation on each 5/8".

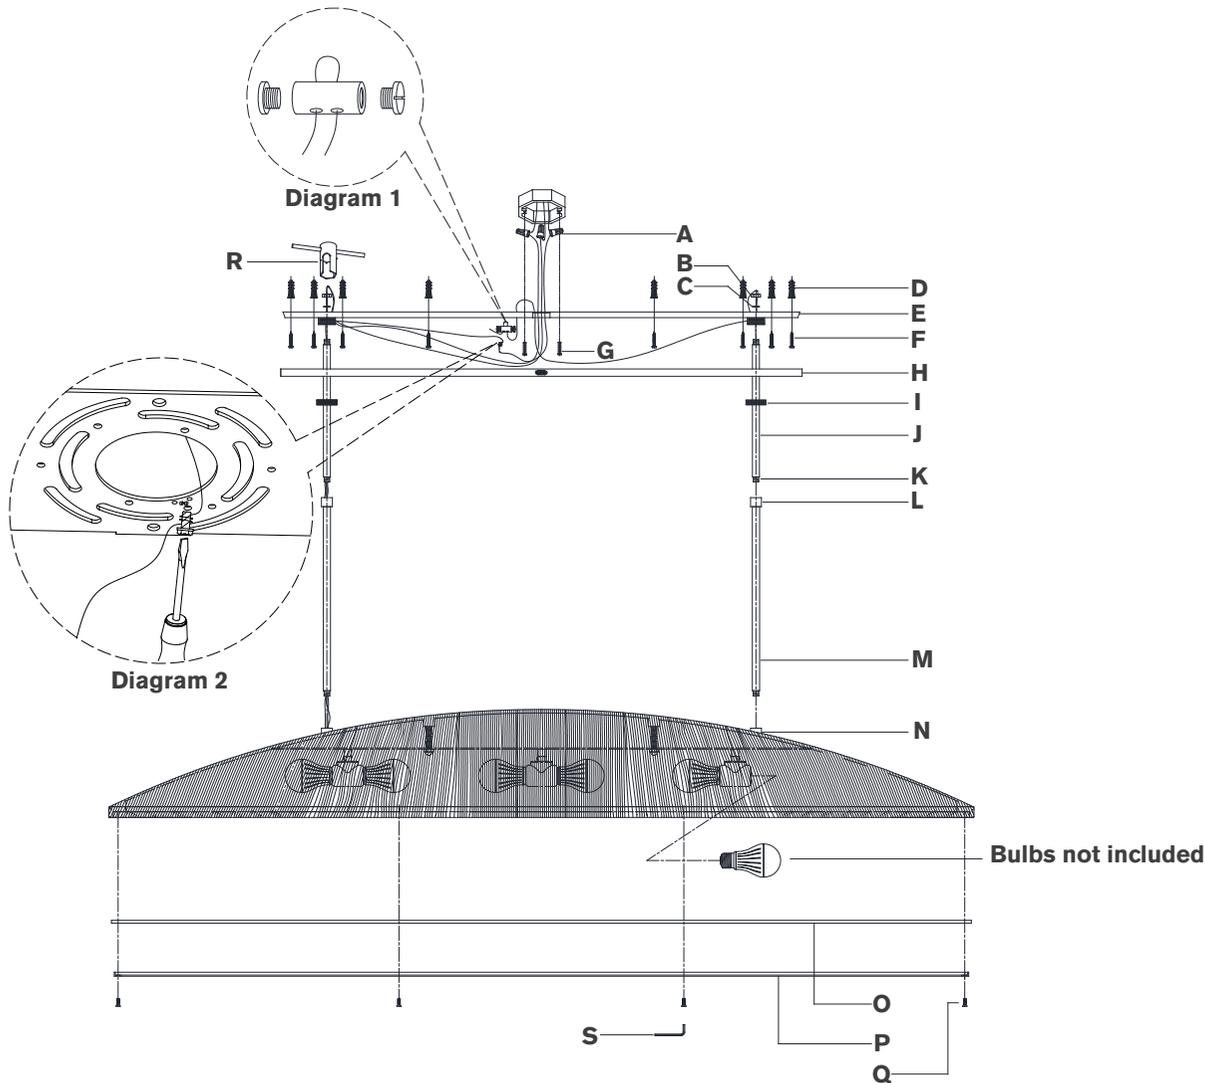

ASSEMBLY INSTRUCTIONS

Utopia Large Linear Pendant

Item # KW 5550

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

12. Run support cable through hole on back of mounting plate **(E)**. Loosen cable lock and install to end of support cable. Insert other end of cable through the cable lock and tighten ends with a screwdriver to secure. (see diagram 1)
13. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 2). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut **(A)**.
NOTE: It is imperative that the fixture is grounded.
14. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut **(A)**.
15. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut **(A)**.
CAUTION: Do not reverse the hot and neutral connections.
16. Make sure all wire connections are tight and tuck into the junction box.
17. Install canopy **(H)** to mounting plate **(E)** and secure with collar ring **(I)**.
18. Install light bulbs into the sockets.
19. Attach diffuser **(O)** to metal frame **(P)**, then install metal frame **(P)** to the bottom of fixture body **(N)** and secure with screws **(Q)** using provided wrench **(S)**.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.

