
ASSEMBLY INSTRUCTIONS



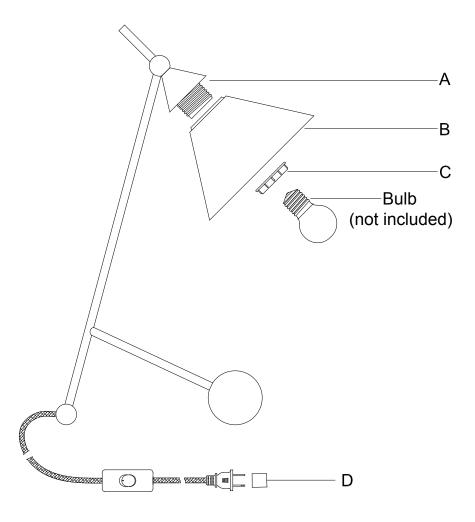

Item # KW 3410

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

CAUTION:DO NOT TEAR OFF THE PLASTIC COVER UNTIL THE SHADE WAS FIXED.

- 1. Carefully remove all parts from the box.
- 2. Attach the metal shade (B) to the socket cup (A) and secure with socket ring (C).
- 3. Insert bulb (not included) into the socket.
- 4. Remove protective plug cover (D) from the plug.
- 5. Plug into a proper electrical outlet and test the fixture.
- 6. Installation is complete.









^{***}Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.