

ASSEMBLY INSTRUCTIONS

Osiris Large Reflector Chandelier

Item # TOB5290


WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

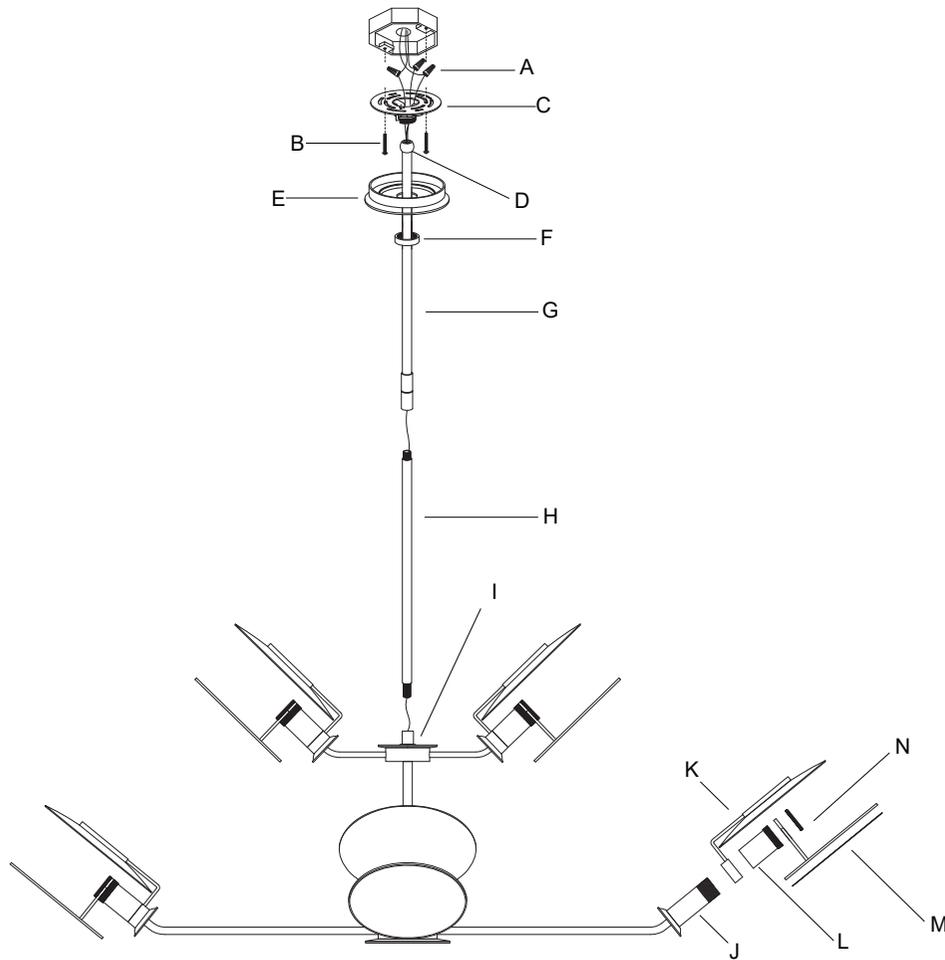

1. Carefully remove all parts from the box.
2. Remove the mounting plate (C) from the canopy (E) by unscrewing the collar ring (F).
3. Install the mounting plate (C) to the junction box and secure with the mounting screws (B).
4. Feed the fixture wires through the rod (H), collar ring (F), canopy (E) and rod (G).
5. Thread the rod (H) into the connector (I) and thread rod (G) to the rod (H).
6. Hang the fixture swivel ball (D) to the center of the mounting plate (C).
7. Measure the wires then cut, be certain to leave enough length to connect to the wires in the junction box.
8. Strip the insulation on the fixture wires about 5/8"
9. Wrap the fixture ground wire to the green ground screw on the mounting plate (C) and secure, then connect to the ground wire in the junction box using the wire nut (A).
IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
10. Connect the fixture ribbed wire (no marking) to the neutral wire in the junction box using the wire nut (A).
11. Connect the fixture smooth wire (with marking) to the hot wire in the junction box using the wire nut (A).
DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED
12. Carefully tuck the wire connections into the junction box.
13. Install the canopy (E) to the junction box and secure with the collar ring (F).

ASSEMBLY INSTRUCTIONS

Osiris Large Reflector Chandelier

Item # TOB5290

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO REMOVING. RETAIN ALL PACKING MATERIAL UNTIL INSPECTION AND INSTALLATION ARE FINAL.

14. Remove the socket tubes (L) from the sockets (J), then attach the reflectors (K) to the sockets (J) and secure with the socket tubes (L).
15. Remove the socket rings (N) from the socket tubes (L), then attach the shade (K) to the socket tubes (L) and secure with the socket rings (N).
16. Insert bulbs (not included) onto the sockets.
17. Installation is complete, turn on power at fuse or circuit breaker.

***Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agent.

