
ASSEMBLY INSTRUCTIONS

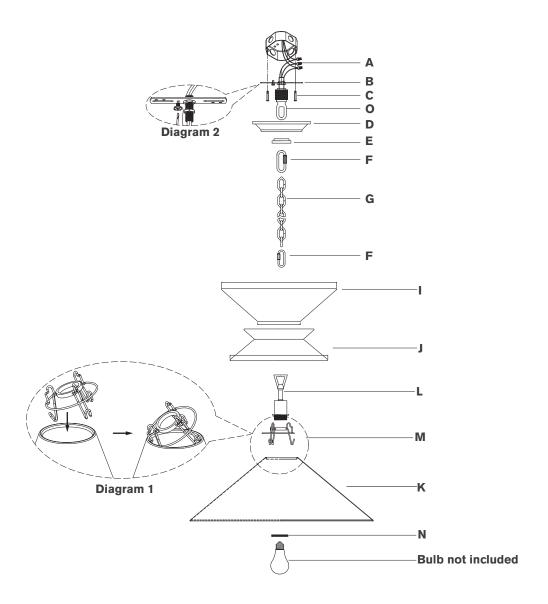

Alborg Large Stacked Pendan

Item # CHC 5245

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

TOOLS REQUIRED (NOT INCLUDED):

Phillips Screwdriver Slotted Screwdriver Wire Cutters Wire Strippers

- 1. Carefully remove all parts from the box. Place on a clean, soft surface.
- Remove mounting plate (B) from collar loop (O) by unscrewing.
- 3. Install mounting plate (B) to junction box and secure with mounting screws (C).
- 4. Secure collar loop **(O)** to mounting plate **(B)** using pliers to tighten locknut.
- 5. Install canopy (**D**) to collar loop (**O**) and secure with collar ring (**E**).
- 6. Determine desired overall length, and amount of chain (G) needed. Shorten chain using chain pliers. (Keep extra chain)
- 7. Remove shade bracket (M) from socket by removing socket ring (N).
- 8. Insert shade bracket (M) to shade (K) from top side at an angle, then install to socket and secure with socket ring (N).
- 9. Place shade (J) and shade (I) onto top of shade bracket (M).
- 10. Attach chain (G) to collar loop (O) and fixture loop (L) using quick links (F). Secure quick links (F).
- 11. Thread fixture wire and ground wire through chain (G). **NOTE:** When you reach the collar loop **(O)**, ensure there is no tension on the wires. Cut excess wires, being sure to leave eough to reach the junction box.
- 12. Separate two sides of molded wire, and strip insulation on each 5/8".
- 13. Loosen collar ring (E) and let canopy (D) slip down chain (G) carefully.












ASSEMBLY INSTRUCTIONS

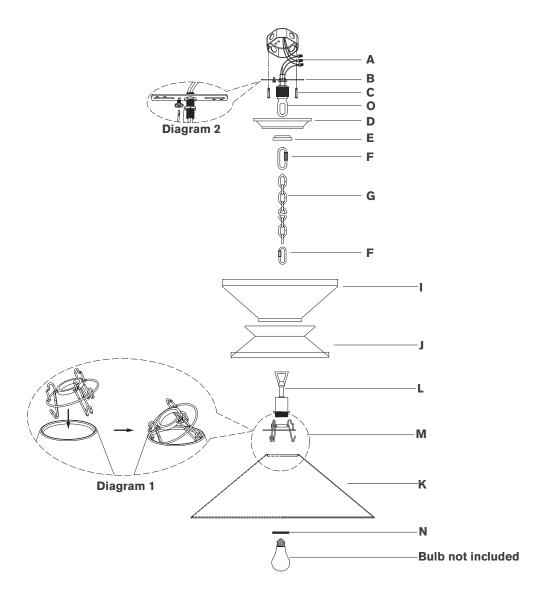

Alborg Large Stacked Pendan

Item # CHC 5245

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

14. Twist all fixture wires together. Slip through center hole of collar loop **(O)**.

NOTE: Untwist wires and separate to prepare for connection.

- 15. Wrap fixture ground wire (bare copper) around the green grounding screw (see diagram 2). Tighten. Continue fixture ground wire and connect to supply ground wire (usually green or bare copper) using wire nut (A).
- 16. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut (A).
- 17. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut (A).
 - **CAUTION:** Do not reverse the hot and neutral connections.
- 18. Make sure all wire connections are tight, then carefully tuck into the junction box.
- 19. Install canopy **(D)** to collar loop **(O)** by securing with collar ring **(E)**.
- 20. Install light bulb into the socket.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do Not use abrasive or chemical agents.







