

ASSEMBLY INSTRUCTIONS


RL '67 Boom Arm Desk Lamp

Item # RL14030

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

1. Carefully remove all parts from the carton.
2. Thread small balancing arm into side opening of part (E).
3. Thread large balancing arm into side opening of part (F).
4. Remove socket ring (B) from threaded socket (A).
5. Place lamp shade (C) over threaded socket (A), followed with light reflector (D), and secure with socket ring (B) using Allen wrench (G) provided.
6. Insert light bulb into socket.
7. Remove plastic cover (I) from electrical plug (H).
8. Plug lamp into electrical outlet.

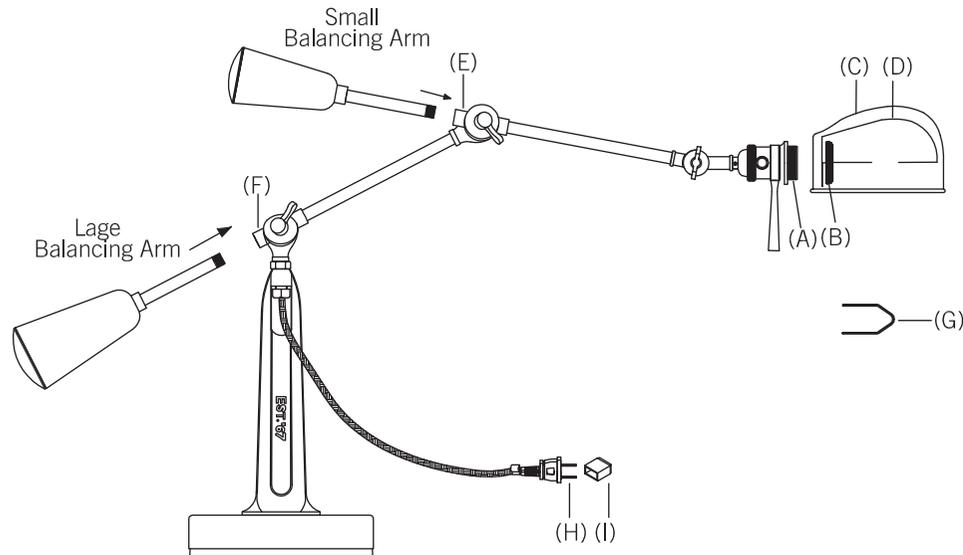

RALPH LAUREN

